

## FREEYARE CD-B025B-A

# FREEYARE Portable Basketball Hoop System Instruction Manual

Model: CD-B025B-A | Brand: FREEYARE

## 1. IMPORTANT SAFETY INFORMATION

---

Please read and understand all instructions and warnings before assembling and using this basketball hoop system. Failure to follow these instructions may result in serious injury or property damage.

- **Adult Supervision:** Children should always be supervised by an adult when using the basketball hoop.
- **Base Stability:** Ensure the base is completely filled with water or sand as instructed to prevent tipping. Do not use the system if the base is not adequately weighted.
- **Avoid Hanging:** Do not hang on the rim, net, or any part of the backboard or support structure. This can cause severe injury and damage the system.
- **Check Before Use:** Before each use, inspect all components for wear, damage, or loose parts. Do not use if any part is damaged.
- **Weather Conditions:** Do not use the system in strong winds or severe weather. Store or secure the system during adverse weather conditions.
- **Assembly:** Assemble the system on a level surface. Two adults are recommended for assembly.
- **Clearance:** Ensure adequate clearance around the system during play to prevent collisions.

## 2. PACKAGE CONTENTS

---

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Board (Backboard)
- Rim
- Net

- Pole (Multiple sections)
- Screws and other hardware
- Base





Image 2.1: Overview of the FREEYARE Portable Basketball Hoop System, showing the backboard, rim, net, adjustable pole, and heavy-duty base with wheels.

### 3. SETUP & ASSEMBLY

---

Follow these steps carefully for proper assembly. Two adults are recommended for safe and efficient setup.

#### 3.1 Base Assembly

1. Place the base on a flat, level surface.
2. Attach any support plates or triangular reinforcement components to the base using the provided hardware. Ensure all screws are tightened securely.



Image 3.1: Diagram illustrating the triple reinforcement base design, highlighting the rebound plate, 44-inch large heavy base, and sandbag compartment for stability.

#### 3.2 Pole Assembly

1. Connect the pole sections according to the numerical order or specific markings. Ensure they click into place or are secured with the designated fasteners.
2. Attach the assembled pole to the base. Use the provided bolts and nuts, ensuring a tight and stable connection.

**248 lbs Sand**

**168 lbs Water**

*Triangular Stability*

**TRIPLE REINFORCEMENT BASE**

☀️ 77° 54° | Fresh Breeze | 🌬️ 20mph E

**Our**

- ✓ Enlarged Base Design
- ✓ Upgraded Rebound Plate
- ✓ Resistant to Strong Winds

**Other**

- ✗ Small Base
- ✗ No Triangle Support
- ✗ Easily Fall Down

Image 3.2: View of the basketball hoop's base and lower pole section, showing the robust construction and triangular support for enhanced stability.

### 3.3 Backboard and Rim Attachment

1. Attach the rim to the backboard using the provided hardware. Ensure the double compression springs are correctly positioned.
2. Secure the net to the rim.
3. Attach the assembled backboard and rim to the top pole section. This step often requires two people due to the weight and size.
4. Verify all connections are secure and the backboard is level.

# EASY TO ADJUST IN 2 STEPS



## STEP 1

Press the adjustment handle and slide it up or down.



## STEP 2

Slide to the desired height and release the adjustment handle.

Image 3.3: Detailed view of the 44-inch shatterproof backboard, highlighting its reinforced metal iron frame, flexible PE big corners, and durable PC clear board construction.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Filling the Base for Stability

The base must be filled to ensure stability and prevent tipping. It can hold up to 243 lbs of sand or 168 lbs of water.

1. Locate the fill cap(s) on the base.
2. Carefully fill the base with either water or sand. Sand provides greater stability and is recommended for outdoor use or windy conditions.
3. Ensure the base is completely filled to its maximum capacity.
4. Securely close the fill cap(s) to prevent leakage.

### 4.2 Adjusting Height

The FREEYARE basketball hoop offers 16 adjustable height levels, ranging from 4.9 ft to 10 ft, suitable for various ages and skill levels. The quick adjustment mechanism allows for changes in approximately 5 seconds.

1. **Step 1:** Locate the adjustment handle on the main pole. Press the adjustment handle firmly.
2. **Step 2:** While holding the handle, slide the pole up or down to the desired height. The system features three poles for 8.5-10 ft heights and two poles for 4.9-6.2 ft heights.
3. **Step 3:** Release the adjustment handle once the desired height is reached. Ensure the pole locks securely into place before use.



Image 4.1: Diagram illustrating the 16 adjustable height levels, ranging from 4.9 ft to 10 ft, with markings for precise adjustment.



Image 4.2: Visual guide demonstrating the two steps for quick height adjustment: pressing the handle and sliding the pole to the desired position.

### 4.3 Portability

The integrated wheels on the base allow for easy relocation of the basketball hoop.

1. Ensure the base is securely filled to maintain stability during movement.
2. Carefully tilt the system onto its wheels.

3. Roll the system to the desired indoor or outdoor location (driveways, yards, parks, playgrounds, garages, gyms).
4. Once in position, gently lower the system back onto its full base for stable play.



Image 4.3: A person demonstrating the portability of the basketball hoop by tilting it onto its durable wheels for easy movement.

## 5. MAINTENANCE

---

Regular maintenance will extend the life of your basketball hoop system.

- **Cleaning:** Clean the backboard, rim, and pole with a mild soap and water solution. Avoid abrasive cleaners.
- **Hardware Check:** Periodically check all bolts, nuts, and connections for tightness. Tighten any loose hardware.
- **Base Fluid Level:** Regularly check the water or sand level in the base, especially after moving the system or during prolonged outdoor exposure. Refill as necessary.

- **Net Replacement:** Replace the net if it becomes worn or damaged.
- **Weather Protection:** For prolonged periods of non-use or during harsh weather, consider covering the system or storing it indoors to protect against elements.

## 6. TROUBLESHOOTING

If you encounter issues with your FREEYARE basketball hoop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
System feels unstable or tips easily.	Base not fully filled; loose connections.	Ensure base is completely filled with sand or water. Check and tighten all assembly bolts.
Difficulty adjusting height.	Adjustment handle not fully engaged; mechanism obstructed.	Press the adjustment handle firmly. Check for any debris or obstructions in the adjustment mechanism.
Backboard or rim wobbles excessively.	Loose hardware connecting backboard/rim to pole.	Inspect and tighten all bolts and nuts securing the backboard and rim.
Wheels not rolling smoothly.	Debris in wheels; damaged wheels.	Clean any debris from the wheels. If damaged, contact customer support for replacement parts.

## 7. SPECIFICATIONS

Key technical specifications for the FREEYARE Portable Basketball Hoop System (Model CD-B025B-A):

- **Brand:** FREEYARE
- **Model Name:** CD-B025B-A
- **Material:** Polycarbonate (PC), Polyethylene (PE), Polyethylene Terephthalate (PET), Alloy Steel (Frame)
- **Color:** Jet Black
- **Product Dimensions (D x W x H):** 27.6" x 43.3" x 147" (Maximum Height)
- **Item Weight:** 74.9 Pounds
- **Indoor/Outdoor Usage:** Both Indoor and Outdoor
- **Special Features:** Adjustable Height, Fade Resistant, Portable, Rust Resistant, Shatterproof Backboard
- **Mounting Type:** Pole Mount
- **Target Audience:** Adults, Tweens, Kids
- **Minimum Height:** 4.9 Feet
- **Maximum Height Recommendation:** 10 Feet
- **Assembly Required:** Yes
- **UPC:** 199284523241
- **Manufacturer:** FUJIAN KANG LAI BAO CO., LTD

## 8. WARRANTY INFORMATION

---

This FREEYARE product is covered by a manufacturer's warranty against defects in materials and workmanship. Specific warranty terms and duration may vary. Please retain your proof of purchase for warranty claims.

For detailed warranty information or to initiate a claim, please contact FREEYARE customer support.

## 9. CUSTOMER SUPPORT

---

If you have any questions, require assistance with assembly, or need troubleshooting help that is not covered in this manual, please contact our customer support team.

**Contact Information:**

- Refer to the contact details provided with your product packaging or on the official FREEYARE website.
- When contacting support, please have your model number (CD-B025B-A) and proof of purchase readily available.