

[Manuals.plus](#) /

› [Conciseer](#) /

› Conciseer Modern Ceiling Fan with Lights, 84 Inch - Instruction Manual

Conciseer 84 inch/Light

Conciseer Modern Ceiling Fan with Lights, 84 Inch - Instruction Manual

Model: 84 inch/Light | Brand: Conciseer

1. SAFETY PRECAUTIONS

Always turn off power at the circuit breaker before beginning installation, cleaning, or maintenance. Failure to do so can result in electric shock, injury, or death.

Ensure all electrical connections are in accordance with local codes, ordinances, and the National Electric Code (NEC). If you are unfamiliar with electrical wiring, consult a qualified electrician.

The mounting bracket must be securely fastened to a building structure capable of supporting the fan's weight. Use only the hardware provided or specified in the instructions.

Do not bend the blade holders during installation, balancing, or cleaning. Do not insert objects into the path of the fan blades.

Keep children away from the fan during operation and maintenance.

2. PACKAGE CONTENTS

Carefully unpack all components and ensure all items are present before discarding packaging materials. If any parts are missing or damaged, contact Conciseer customer support.

- Fan Motor Assembly
- 8 Aluminum Blades
- Mounting Bracket
- Canopy and Yoke Cover
- Downrods (7.87 inch, 15.75 inch, 23.62 inch)
- 36W LED Light Kit and Lampshade

- Remote Control (Batteries not included)
- Hardware Pack (screws, washers, wire nuts, balance kit)
- Installation & User Manual

3. SPECIFICATIONS

- **Brand:** Conciseer
- **Model:** 84 inch/Light
- **Color:** Sand-nickel
- **Electric Fan Design:** Ceiling Fan
- **Power Source:** DC
- **Product Dimensions:** 8"D x 84"W x 8"H
- **Room Type:** Living room, Bedroom, Dining room, Kitchen, Study, Patio (Indoor/Outdoor covered use)
- **Mounting Type:** Downrod Mount
- **Controller Type:** Remote Control
- **Number of Speeds:** 6
- **Wattage:** 50 watts
- **Number of Blades:** 8
- **Motor Type:** Brushless DC
- **Material:** Aluminum
- **Light:** 36W LED, 3CCT (3000K, 4500K, 6500K)

4. SETUP

4.1 Pre-Installation

Before starting, ensure you have the necessary tools: wire strippers, screwdriver, 1/4" blade screwdriver, and a ladder. Turn off power at the fuse box to avoid possible electrical shock.

4.2 Installation Instructions

Follow the detailed instructions provided in the manual. Ensure the mounting bracket is securely attached to the ceiling. For wood roofs, use wood screws. For cement roofs, use expansion screws and tighten with a wrench.

Carefully lift the fan assembly onto the mounting bracket. Rotate the fan until the notch on the downrod engages the ridge on the mounting bracket. Slide the remote receiver into the space above the downrod ball.

Connect the electrical wires: Earth wire (Green/Yellow), Neutral wire (White), Live wire (Black). Ensure all connections are secure with wire nuts.

Loosen the two screws on the bottom of the mounting bracket. Raise the canopy up and align the keyholes on the bottom of the canopy with the two screws. Rotate the canopy until both screws drop into the slot recesses. Slide the canopy cover up until it successfully attaches onto the canopy.

Attach the blades and blade arm ornament onto the blade arm, and secure with blade screws. Remove the three screws from the light kit plate and keep them for the next step.

Insert the light kit plate into the fan assembly and slide together, locking the screws loosened on the light kit plate. Then rotate it clockwise to secure.



Figure 4.2.1: Conciseer 84-inch ceiling fan with 8 blades and integrated light in a modern living room. The fan features a timing function with 2H, 4H, and 8H settings.

Suit for Different Height Ceilings

Include 3 different downrods

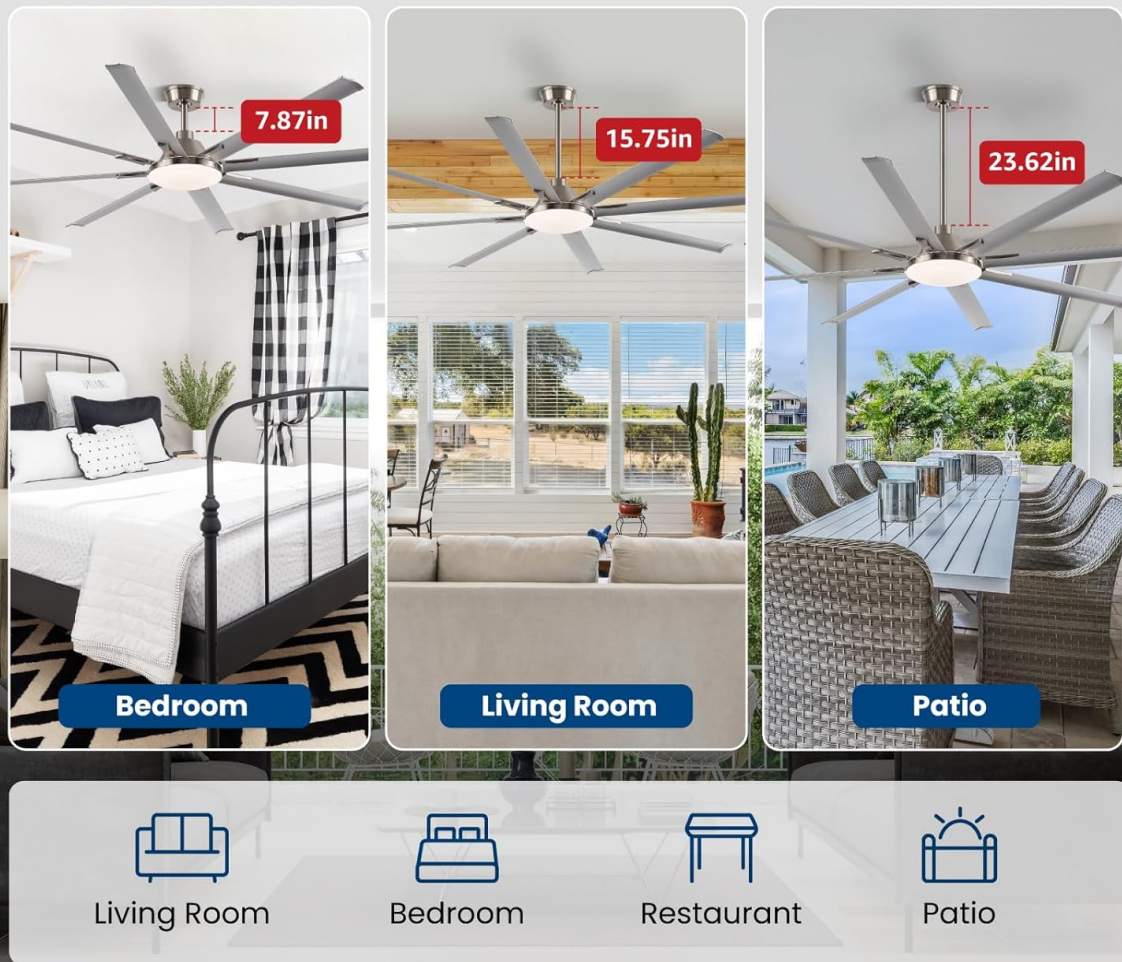


Figure 4.2.2: The fan includes three different downrods (7.87in, 15.75in, 23.62in) suitable for bedrooms, living rooms, and patios.

Conceiseer

LOW-NOISE DC MOTORS

Only wind, no sound

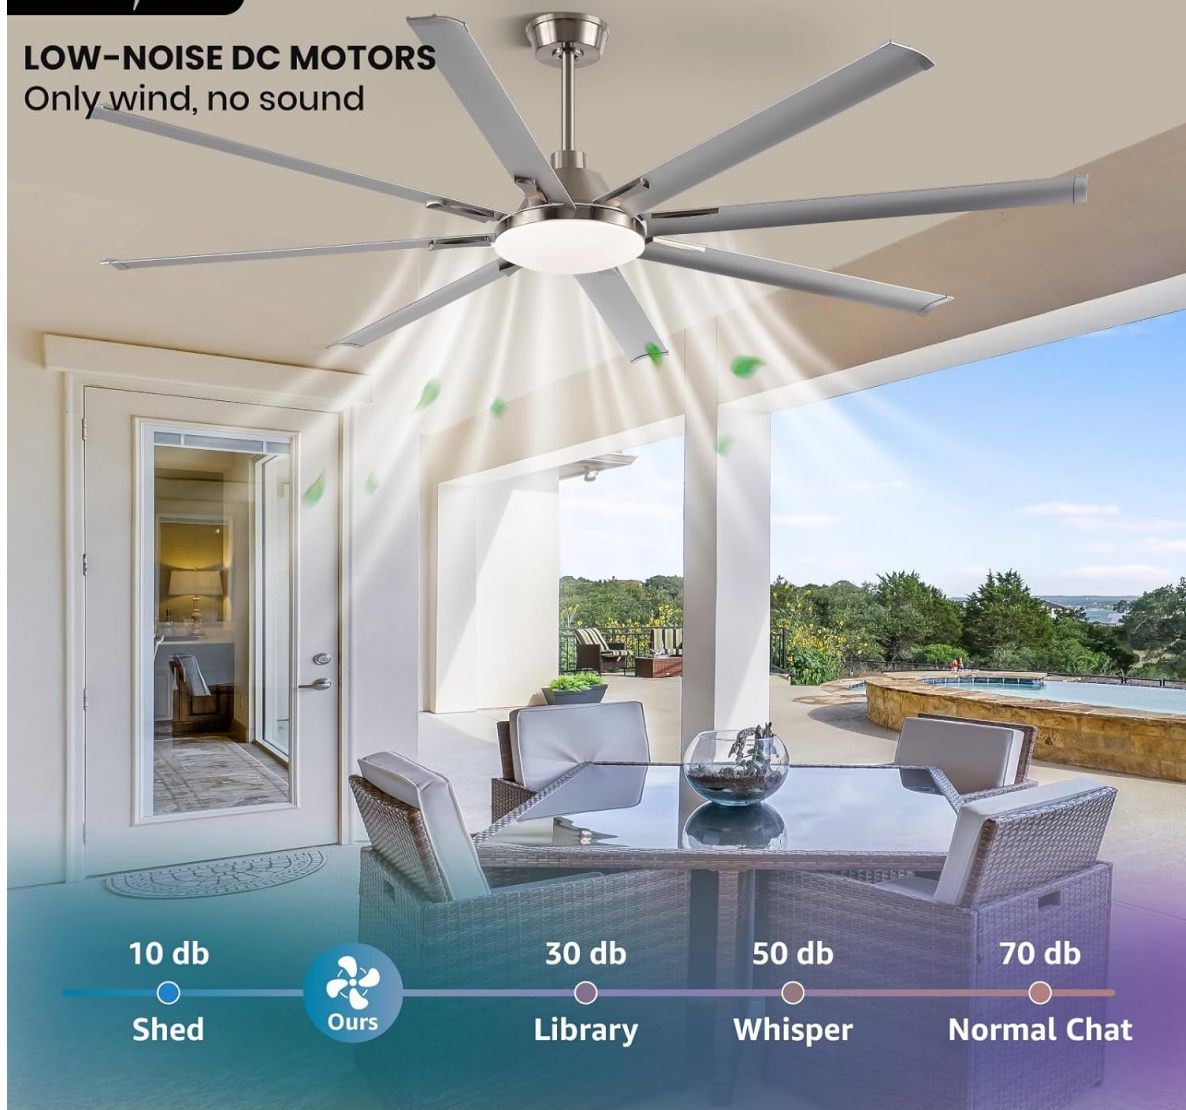


Figure 4.2.3: The fan features a low-noise DC motor, operating at approximately 10-30 dB, making it quieter than a library (30 dB) or a whisper (50 dB).

Conceiseer

6 Wind Speed

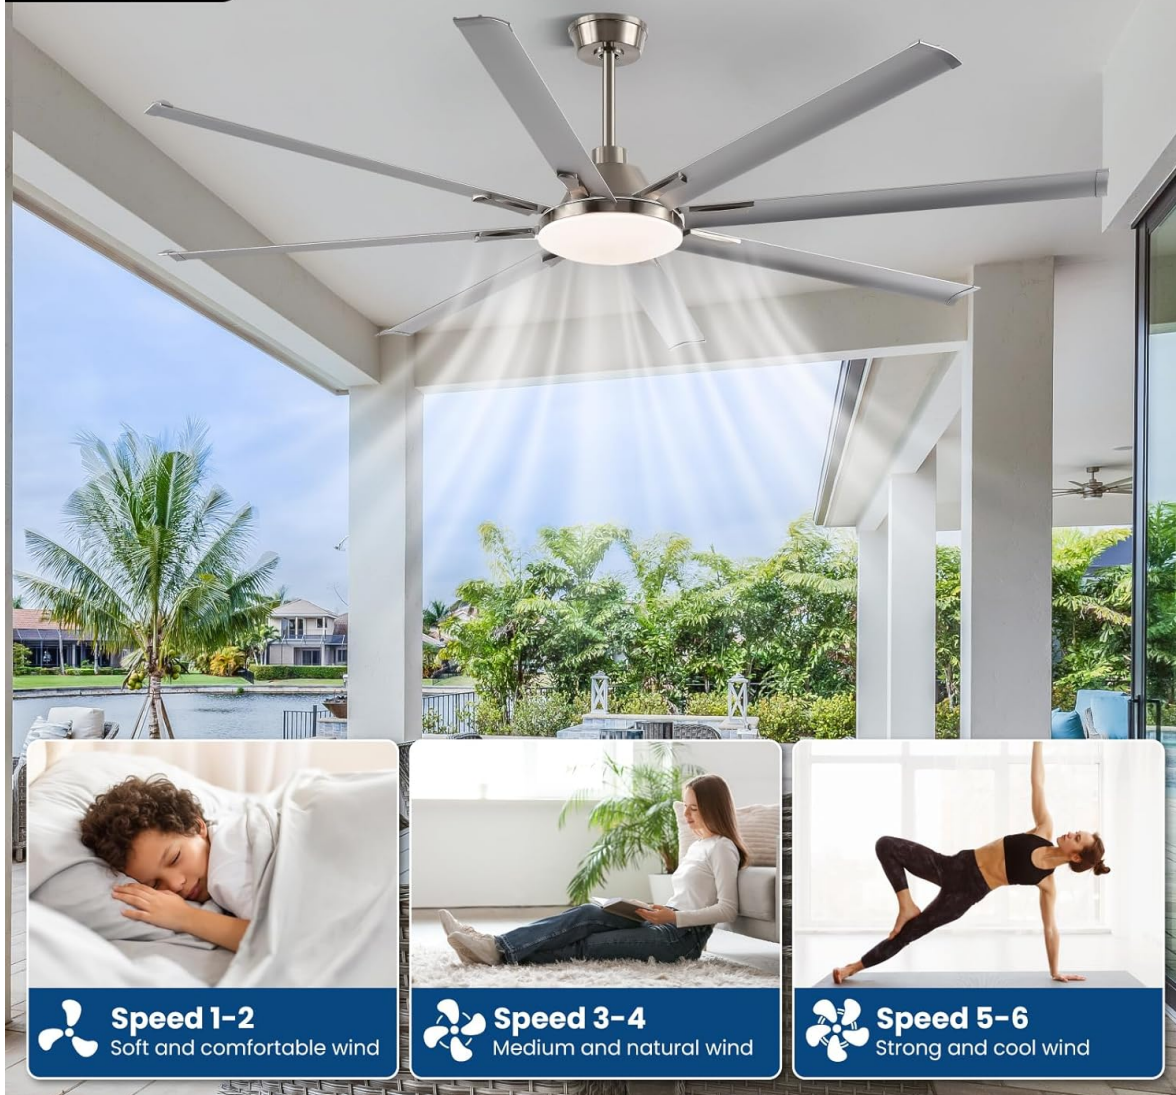


Figure 4.2.4: The fan offers 6 wind speeds: Speed 1-2 for soft and comfortable wind, Speed 3-4 for medium and natural wind, and Speed 5-6 for strong and cool wind.

Concei-seer

3 Color Temperatures

3000K | 4500K | 6500K



* Lighting products have different color temperatures, usually expressed in K (Kelvin) units, which are divided into warm light, natural light and cold light.

Figure 4.2.5: The integrated 36W LED light offers 3 color temperatures: 3000K (warm light), 4500K (natural light), and 6500K (cold light).

Reverse Function


Warmth in winter and coolness in summer
promote air circulation



Conciseer

Figure 4.2.6: The fan features a reversible motor for year-round comfort. Summer mode (fan forward) pushes air circulation downward for cooling. Winter mode (fan reverse) pulls air circulation upward to destratify warm air.


Dimensions

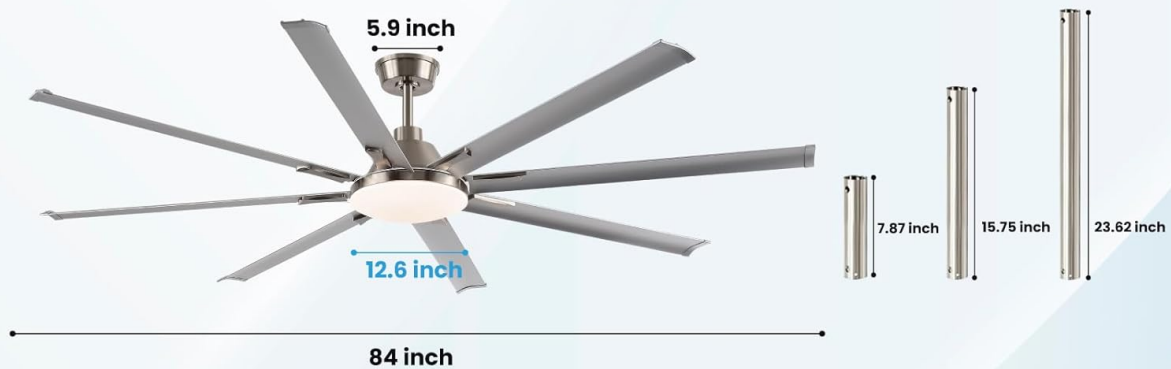

Remote Control Instruction



- ① ON/OFF
- ② Fan ON/OFF
- ③ Light ON/OFF
- ④ Speed Control
- ⑤ Dimmer Control
- ⑥ Fan Forward
- ⑦ Fan Reverse
- ⑧ Timer
- ⑨ Natural Wind
- ⑩ Mute

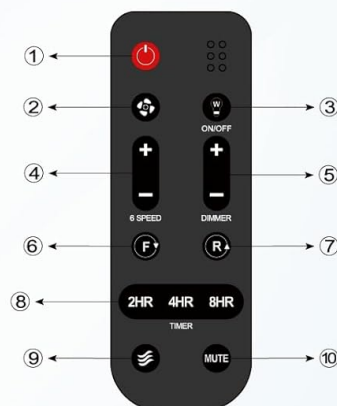

Conciseer

Figure 4.2.7: Detailed dimensions of the 84-inch fan (5.9 inch height, 12.6 inch diameter of motor housing) and the remote control layout with functions like ON/OFF, Speed Control, Dimmer Control, Fan Forward/Reverse, Timer, Natural Wind, and Mute.

5. OPERATING INSTRUCTIONS

5.1 Remote Control Functions

The ceiling fan is equipped with a remote control for convenient operation. Ensure 2 AAA batteries (not included) are installed in the remote.

- **ON/OFF:** Powers the fan and light on or off.
- **Fan ON/OFF:** Turns the fan motor on or off independently.
- **Light ON/OFF:** Turns the LED light on or off independently.
- **Speed Control (+/-):** Adjusts the fan speed through 6 settings.
- **Dimmer Control (+/-):** Adjusts the brightness of the LED light.
- **Fan Forward (F):** Sets the fan to rotate clockwise (summer mode, downward airflow).
- **Fan Reverse (R):** Sets the fan to rotate counter-clockwise (winter mode, upward airflow).
- **Timer (2HR, 4HR, 8HR):** Sets the fan to turn off automatically after 2, 4, or 8 hours.

- **Natural Wind:** Simulates a natural breeze by varying fan speeds.
- **Mute:** Silences the remote control's beeping sounds.

5.2 Light Settings

The 36W LED light offers three color temperatures (3000K, 4500K, 6500K) and is dimmable. Cycle through the color temperatures by pressing the Light ON/OFF button repeatedly. Use the Dimmer Control buttons to adjust brightness.

5.3 Fan Speed and Direction

Use the Speed Control buttons to select one of the 6 available fan speeds. For optimal comfort, use 'Fan Forward' during warmer months to create a cooling breeze, and 'Fan Reverse' during colder months to circulate warm air trapped near the ceiling.

6. MAINTENANCE

Regular cleaning of your ceiling fan will help maintain its appearance and performance. Always turn off the power before cleaning.

- **Cleaning:** Use a soft brush or lint-free cloth to avoid scratching the finish. Do not use water or harsh detergents, as this could damage the motor or blades.
- **Blade Inspection:** Periodically check that all blade screws are tight. Over time, they may loosen, causing the fan to wobble.
- **Motor:** The DC motor is designed for quiet operation and requires no lubrication.

7. TROUBLESHOOTING

- **Fan does not start:** Check that the power is turned on at the circuit breaker and wall switch. Ensure all wire connections are secure. Check remote control batteries.
- **Fan makes noise:** Ensure all screws on the motor housing and blade attachments are tight. Check that the mounting bracket is securely installed.
- **Fan wobbles:** Verify that all blade holders are tightened to the motor hub and that blades are securely attached to the blade holders. Ensure the mounting bracket is properly installed.
- **Light does not work:** Check wire connections to the light kit. Ensure the light ON/OFF button on the remote is pressed.
- **Remote control not working:** Replace batteries in the remote control. Ensure the remote receiver is properly connected and not obstructed.

8. WARRANTY & SUPPORT

Conciseer provides professional after-sales support. If you have any questions during installation or usage of your ceiling fan, please do not hesitate to contact us.

Email: support@conciseer.com

Please refer to your purchase documentation for specific warranty details.

9. PRODUCT VIDEOS

The Feature of CS6503-MBK-WD Ceiling fan

Your browser does not support the video tag.

This video highlights the key features of the Conciseer CS6503-MBK-WD ceiling fan, demonstrating its design and functionality.