

[Manuals.plus](#) /

> [Klutch](#) /

> Klutch KLiQ 20V Dual-Battery String Trimmer and Leaf Blower Kit CGK200 User Manual

## Klutch CGK200

# Klutch KLiQ 20V Dual-Battery String Trimmer and Leaf Blower Kit User Manual

Model: CGK200

## INTRODUCTION

---

This manual provides essential instructions for the safe operation, assembly, maintenance, and troubleshooting of your Klutch Dual-Battery String Trimmer and Leaf Blower Kit. This kit includes a string trimmer and a leaf blower, both powered by Klutch KLiQ 20V Lithium-Ion Batteries. Both tools feature brushless motor technology for improved efficiency and extended run time.

## SAFETY INFORMATION

---

Always read and understand all safety warnings and instructions before operating these tools. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Wear appropriate personal protective equipment (PPE)** including eye protection, hearing protection, long pants, and sturdy footwear.
- **Keep bystanders away** from the work area.
- **Do not operate in wet conditions** or expose to rain.
- **Remove battery packs** when not in use, before cleaning, or performing maintenance.
- **Use only Klutch KLiQ 20V Lithium-Ion Batteries** and chargers.
- **Inspect tools for damage** before each use. Do not operate damaged tools.

## COMPONENTS

---

The Klutch Dual-Battery String Trimmer and Leaf Blower Kit typically includes the following items:

- Klutch KLiQ 20V String Trimmer
- Klutch KLiQ 20V Leaf Blower
- Two (2) Klutch KLiQ 20V 4.0Ah Lithium-Ion Batteries

- Battery Charger
- String Trimmer Guard
- Auxiliary Handle for String Trimmer
- Owner's Manual

## SETUP

---

### 1. Battery Charging and Installation

1. **Charge Batteries:** Insert the Klutch KLiQ 20V Lithium-Ion Batteries into the provided charger. Ensure the charger is plugged into a standard electrical outlet. Allow batteries to fully charge before first use. The battery fuel gauge will indicate charge status.
2. **Install Batteries:** Align the battery pack with the battery port on the tool (either trimmer or blower) and slide it in until it clicks securely into place. Ensure both battery ports are populated for operation.
3. **Remove Batteries:** Press the battery release button and slide the battery pack out of the tool.

### 2. String Trimmer Assembly

1. **Attach Guard:** Secure the cutting guard to the trimmer head using the provided fasteners. Ensure it is firmly attached to protect against debris.
2. **Install Auxiliary Handle:** Position the auxiliary handle on the trimmer shaft at a comfortable operating height. Tighten the handle securely.
3. **Check String:** Verify that the dual-feed spiral twist 0.095in. string is properly installed and extends from the trimmer head.

## OPERATING INSTRUCTIONS

---

### 1. String Trimmer Operation

- **Starting:** With batteries installed, press the safety lock-off button and then squeeze the trigger to start the trimmer.
- **Cutting:** Use a sweeping motion to cut grass and weeds. The 15-inch cutting width allows for wider coverage.
- **Line Advancement (Bump Feed):** To advance the cutting line, lightly tap the trimmer head on the ground while the motor is running. The professional bump feed mechanism will release more line.
- **Speed Control:** The trimmer features 3-speed control for adjusting cutting power and optimizing run time. Select the appropriate speed for the task.
- **Ergonomics:** The ergonomic rubber handle is designed to reduce work fatigue during extended use.

### 2. Leaf Blower Operation

- **Starting:** With batteries installed, press the safety lock-off button and then squeeze the trigger to start the blower.
- **Speed Control:** The blower offers 4-speed control to adjust airflow for various tasks.
- **Turbo Button:** For maximum clearing power, press the turbo button to achieve up to 600 CFM (Cubic Feet per Minute) airflow.
- **Clearing Debris:** Direct the nozzle towards leaves and debris. Use a sweeping motion to clear areas efficiently.
- **Ergonomics:** The ergonomic rubber handle is designed to reduce work fatigue during extended use.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your tools. Always remove battery packs before

performing any maintenance.

- **Cleaning:** After each use, clean the tools with a damp cloth. Remove any grass, dirt, or debris from vents and cutting areas. Do not use harsh chemicals.
- **String Trimmer Line Replacement:** When the cutting line is depleted, refer to the detailed instructions in the full owner's manual for replacing the 0.095in. spiral twist line.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight. Do not store fully discharged batteries for extended periods. Charge batteries before long-term storage.
- **Storage:** Store the tools in a dry, secure location out of reach of children.

## TROUBLESHOOTING

---

If you encounter issues, consult the following common troubleshooting steps:

Problem	Possible Cause	Solution
Tool does not start	Batteries not charged or improperly installed. Safety lock-off not engaged.	Ensure batteries are fully charged and securely installed. Press safety lock-off before squeezing trigger.
String trimmer line not advancing	Line tangled or depleted. Bump feed mechanism clogged.	Inspect and untangle/replace line. Clear any debris from the bump feed head.
Reduced power/run time	Batteries low on charge. Tool operating in high-demand conditions.	Recharge batteries. Select a lower speed setting if possible.
Leaf blower airflow is weak	Batteries low on charge. Not using turbo mode. Air intake/outlet blocked.	Recharge batteries. Engage turbo button for maximum CFM. Clear any obstructions from air vents.

For issues not listed here, please contact Klutch customer support.

## SPECIFICATIONS

---

Feature	Specification
Brand	Klutch
Model Number	CGK200
Power Source	Battery Powered (KLiQ 20V Lithium-Ion)
Motor Type	Brushless
String Trimmer Cutting Width	15 Inches
String Trimmer Line Diameter	0.095 Inches (Dual-feed spiral twist)
String Trimmer Speed Control	3-speed
Leaf Blower Airflow (Max)	600 CFM
Leaf Blower Speed Control	4-speed + Turbo button
Battery Capacity	4.0Ah (per battery)
Item Weight	23.8 Pounds (Kit)

Feature	Specification
Item Dimensions (L x W)	43.8"L x 8.3"W (Trimmer, approximate)
UPC	840321767844

## WARRANTY AND SUPPORT

---

Klutch products are manufactured to high-quality standards and are backed by a limited warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical assistance, replacement parts, or warranty claims, please contact Klutch customer support. You can find more information and contact details on the official Klutch website or by visiting the [Klutch Store on Amazon](#).

