

[Manuals.plus](#) /

> [Flacchi](#) /

> Flacchi Outdoor Hanging Ball Lights Instruction Manual (Model YZC1PB002)

Flacchi YZC1PB002

Flacchi Outdoor Hanging Ball Lights

INSTRUCTION MANUAL (MODEL YZC1PB002)

Product Overview

The Flacchi Outdoor Hanging Ball Lights are designed to provide decorative illumination for various outdoor and indoor settings. This set includes two battery-operated globe fairy lights, featuring a unique foldable design, 8 lighting modes, a timer function, and waterproof construction. They are suitable for enhancing ambiance during holidays or year-round.



Image: Two Flacchi hanging ball lights illuminated in a snowy outdoor environment.

Setup and Assembly

- 1. Unpack:** Carefully remove the hanging ball lights from their packaging. Each set includes two foldable ball lights and their respective battery boxes.
- 2. Expand the Ball Lights:** The lights are designed to fold flat for storage. Gently expand each ball light into its spherical shape. Locate the small clips or tethers on the frame and connect them to secure the ball's form. Ensure the internal wiring is not pinched or damaged during this process.
- 3. Install Batteries:** Each ball light requires 3 AA batteries (not included). Open the battery compartment on the control box, insert the batteries according to the polarity markings, and securely close the compartment.
- 4. Placement:** Utilize the integrated hook on each ball light for hanging. These lights are suitable for trees, walls, windows, doors, or other desired locations.



Ours

Open to Use
Folds flat
No Need to Assemble
Connectable

Others

Hard to Assemble
Come In a Mess

Image: Illustration showing the foldable design of the ball lights for easy setup and storage.

Operating Instructions

- Power On/Off:** Press the button on the battery box to turn the lights on. Press it again to cycle through modes or turn off.
- Select Lighting Mode:** The lights feature 8 distinct lighting modes. Repeatedly press the button on the battery box to cycle through the following modes:
 - 1. Combination
 - 2. In Wave
 - 3. Sequential
 - 4. Slo-Glo
 - 5. Chasing/Flash
 - 6. Slow Fade
 - 7. Twinkle/Flash
 - 8. Steady On
- Timer Function:** The built-in timer function allows the lights to operate for 6 hours on and 18 hours off

automatically. To activate the timer, select your desired lighting mode. The timer will begin from that point. The memory chip saves your last mode setting, so there is no need to reset it daily.

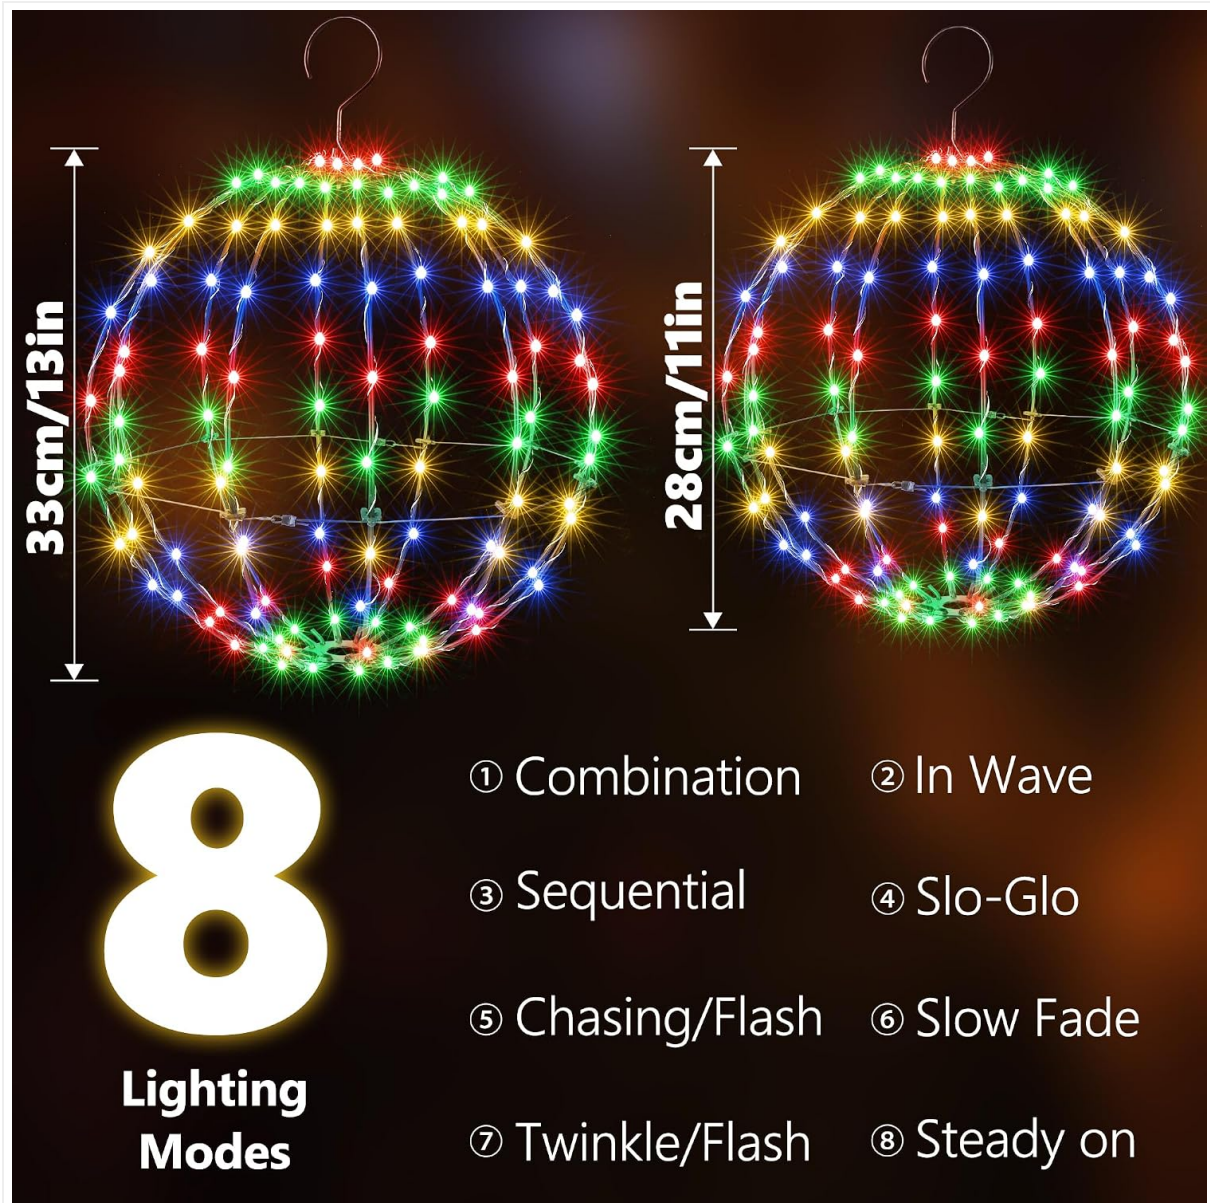


Image: Visual representation of the 8 distinct lighting modes.



Image: Diagram explaining the 6 hours on, 18 hours off timer function.

Your browser does not support the video tag.

Video: A demonstration of the Flacchi Christmas Outdoor Decorations Ball Lights, showcasing various lighting modes and their application in an outdoor setting.

Maintenance

- **Waterproof Design:** The lights are IP44 waterproof, designed to withstand various weather conditions including rain and snow. Ensure the battery box is properly sealed to maintain its waterproof integrity.
- **Cleaning:** To clean the lights, gently wipe them with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the lights or the faux greenery.
- **Battery Replacement:** When the lights dim or stop working, replace the AA batteries in the control box. Always use fresh batteries and dispose of old batteries responsibly.
- **Storage:** For off-season storage, gently fold the ball lights back into their flat configuration. Store them in a cool, dry place away from direct sunlight and extreme temperatures to prolong their lifespan.



Image: The waterproof feature of the lights is demonstrated under simulated rain.

Troubleshooting

- **Lights Not Turning On:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Ensure the batteries are fresh and not depleted.
 - Verify that the battery box is securely closed.
- **Lights Dim or Flicker:**
 - This often indicates low battery power. Replace the batteries with new ones.
- **Timer Function Not Working:**
 - Ensure the timer was activated by pressing the mode button after selecting a desired lighting pattern.
 - If the issue persists, try replacing the batteries.
- **Lights Not Responding to Mode Changes:**
 - Check battery levels. Low power can affect functionality.
 - Ensure the button on the battery box is clean and free from debris.

Specifications

Model Number	YZC1PB002
Power Source	Battery Powered (3 AA batteries per unit, not included)
Light Source Type	LED
Light Color	Multicolor
Number of Light Sources	120 (total for the set)
Indoor/Outdoor Usage	Outdoor
Special Features	Timer, Waterproof (IP44), Memory Function
Item Weight	2.09 Pounds (total for the set)
Product Dimensions	12.13 x 2.32 x 12.6 inches (folded dimensions)

Warranty and Support

Flacchi offers a two-year warranty for these outdoor ball lights. Additionally, a 24-month after-sales guarantee is provided, with online response within 24 hours for any inquiries or support needs.

For product support, warranty claims, or any questions regarding your Flacchi Outdoor Hanging Ball Lights, please refer to the contact information provided with your purchase or visit the official Flacchi store page on Amazon.

Flacchi Store: [Visit the Flacchi Store](#)