

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Enchen](#) /

› [User Manual for Enchen MS003 Electric Shaver](#)

Enchen MS003

Enchen MS003 Electric Shaver User Manual

Model: MS003 | Brand: Enchen

IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the Enchen MS003 Electric Shaver. Failure to follow these instructions may result in injury or damage to the device.

- Always hold the shaver away from your face while turning it on or off.
- Be cautious when using the trimmer to avoid nicks and cuts.
- Keep the shaver clean and dry to prevent bacterial growth.
- Do not use the shaver near water or while charging to avoid electrical hazards.

PRODUCT OVERVIEW

The Enchen MS003 Electric Shaver is a compact and portable foil shaver designed for convenient use at home or while traveling. It features a precision single blade, a pop-up trimmer, and a durable motor for efficient shaving.



Figure 1: Front view of the Enchen MS003 Electric Shaver.

Key Features:

- **Ultra-Portable Compact Design:** Measuring 8.6cm in length and weighing only 123g, this shaver is designed for easy portability, fitting into pockets or bags for use anywhere.
- **Precision Shaving System:** Features a floating single blade that adapts to facial contours and a 0.05mm ultra-thin cutting mesh for a close and comfortable shave.
- **Multifunctional Trimming Configuration:** Includes a built-in pop-up precision trimmer for shaping mustaches and sideburns.
- **Convenient Charging & Long Battery Life:** Supports Type-C universal charging. A full charge takes approximately 45 minutes, providing extended cordless shaving time.
- **Powerful & Durable Motor:** Equipped with a 7000RPM high-speed motor for consistent and efficient shaving performance.



Figure 2: Exploded view showing the internal components of the compact foil shaver, including the protective cover, shaver outer foil, cutter block, pop-up precision trimmer, switch, on/off switch, and charging indicator.

Product Demonstration Video:

Your browser does not support the video tag.

Video 1: A short demonstration of the Enchen MS003 Electric Shaver, showcasing its compact size, pop-up trimmer, and water resistance for cleaning.

SETUP

Package Contents:

Upon opening the package, ensure all items are present:

- Enchen MS003 Electric Shaver
- Type-C Charging Cable
- Cleaning Brush
- User Manual (this document)



Figure 3: Image showing the Enchen MS003 shaver, its packaging, Type-C charging cable, cleaning brush, and user manual.

Initial Charging:

1. Before first use, fully charge the shaver.
2. Connect the Type-C charging cable to the shaver's charging interface and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port).
3. The charging indicator light will illuminate during charging. A full charge takes approximately 45 minutes.
4. Once fully charged, disconnect the shaver from the power source.



Figure 4: The Enchen MS003 shaver being charged via its Type-C port, indicating its cordless operation and 45-minute charge time.

OPERATING INSTRUCTIONS

Basic Shaving:

1. Ensure the shaver is charged.
2. Press the power button (on/off switch) located on the front of the shaver to turn it on.
3. Gently press the shaver head against your skin and move it in short, circular motions or straight strokes against the

direction of hair growth.

4. The floating single blade will adapt to your facial contours for an effective shave.
5. After shaving, press the power button again to turn off the shaver.

COMPACT SHAVER SIMPLIFY LIFE



Figure 5: A man demonstrating the use of the compact Enchen MS003 shaver for daily grooming.

Using the Pop-up Trimmer:

1. Locate the pop-up trimmer switch on the side of the shaver.
2. Slide the switch upwards to engage the precision trimmer.
3. Use the trimmer for precise shaping of mustaches, sideburns, or detailing around the beard line.
4. After use, slide the switch downwards to retract the trimmer.

MAINTENANCE

Cleaning the Shaver:

Regular cleaning ensures optimal performance and hygiene. The shaver is designed for easy cleaning under running water.



Figure 6: Visual guide for cleaning the shaver's foil blades.

1. **Step 1:** Remove the upper shaver foil part by gently pulling it away from the shaver body. Tap it gently against a flat surface to dislodge loose hair.
2. **Step 2:** Use the provided cleaning brush to thoroughly clean the cutter block. Brush away any trapped hair.
3. **Step 3:** Rinse the shaver foil part under running water to remove any remaining debris.

Important Warning: Do not clean the shaver foil with the cleaning brush as it may damage the delicate foil. Only rinse the foil under water.

Storage:

Store the shaver in a cool, dry place away from direct sunlight and moisture. Ensure the shaver is clean and dry before storing. Keep the protective cover on the shaver head when not in use to prevent damage.

TROUBLESHOOTING

If you encounter any issues with your Enchen MS003 Electric Shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery or no charge.	Charge the shaver fully using the provided Type-C cable.
Poor shaving performance.	Clogged shaver head or dull blade.	Clean the shaver head and cutter block thoroughly as per maintenance instructions. Consider replacing the blade if it's old (replacement parts sold separately).
Shaver makes unusual noise.	Debris inside the shaver or misaligned parts.	Turn off and clean the shaver. Ensure all parts are correctly reassembled. If the noise persists, contact customer support.

If the problem persists after trying these solutions, please contact Enchen customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Name	MS003
Brand	Enchen
Power Source	Battery Powered (Rechargeable)
Special Feature	Cordless, Pop-up Trimmer
Recommended Uses	Face Shaving
Motor Speed	7000 RPM
Charging Time	Approx. 45 minutes
Charging Port	Type-C
Dimensions (approx.)	8.6cm (length)
Weight (approx.)	123g
ASIN	B0F21TNXGP
Manufacturer	ENCHEN

WARRANTY AND SUPPORT

Warranty Information:

For detailed warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Enchen website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support:

If you have any questions, require technical assistance, or need to report an issue with your Enchen MS003 Electric Shaver, please contact Enchen customer support. Contact details can typically be found on the official brand website or on the product packaging.