

Manuals.plus /

> Funsicle /

> Funsicle Sports Arena Pool User Manual

Funsicle KB1054000

Funsicle Sports Arena Pool User Manual

Model: KB1054000 | Brand: Funsicle

PRODUCT OVERVIEW

The Funsicle Sports Arena Family Pool is designed for family fun and active play. This spacious inflatable pool measures approximately 9.8 feet in length and features integrated sports elements for enhanced entertainment. It includes a basketball hoop and a detachable volleyball net, complete with inflatable basketball and volleyball, encouraging interactive play for users aged 2 and up.

Key features include a 2-in-1 valve for quick inflation and deflation, DuraSeam dual-weld lines for maximum strength and leak prevention, and an EasyGrip non-slip pull tab for convenient valve operation. A drainage plug is integrated for easy water removal.

SAFETY INFORMATION

- **Adult Supervision Required:** Never leave children unattended in or around the pool. Drowning can occur quickly and silently.
- **Proper Setup:** Set up the pool on a level, stable surface free of sharp objects. Do not set up on concrete, asphalt, or any hard surface.
- **Water Depth:** The pool is designed for shallow water play. Ensure water levels are appropriate for the age and swimming ability of all users.
- **Electrical Safety:** Keep all electrical devices away from the pool area.
- **Chemicals:** Do not use harsh chemicals in the pool. Refer to water treatment guidelines for inflatable pools if necessary.
- **Drainage:** Ensure the drainage area is clear and safe before emptying the pool.
- **Weight Limit:** Do not overload the pool with too many people or excessive weight.
- **No Diving:** This is not a diving pool. Serious injury can result from diving into shallow water.

COMPONENTS LIST

Before beginning assembly, ensure all components listed below are present and undamaged:

- Funsicle Sports Arena Inflatable Pool (1)
- Inflatable Basketball (1)

- Inflatable Volleyball (1)
- Basketball Hoop (integrated)
- Detachable Volleyball Net (1)

SETUP INSTRUCTIONS

1. **Choose a Location:** Select a flat, level, and clear area in your yard. Remove any sharp objects, debris, or rough surfaces. Ensure the area is large enough to accommodate the pool (approx. 9.8 ft long) and allow for safe movement around it.
2. **Unfold the Pool:** Carefully unroll and unfold the Funsicle Sports Arena Pool in your chosen location. Spread it out completely to avoid wrinkles during inflation.
3. **Inflate the Pool:**
 - Locate the 2-in-1 air valves on the pool's various chambers.
 - Open the larger cap of the valve.
 - Using an air pump (not included), inflate each chamber until it is firm to the touch but not overinflated. Overinflation can cause damage.
 - Quickly close the valve cap to prevent air leakage. Ensure the EasyGrip non-slip pull tab is securely closed.



Figure 1: Fully inflated Funsicle Sports Arena Pool, showcasing its oval shape, integrated basketball hoops, and central volleyball net. Two inflatable balls are visible inside the pool.

4. **Attach Volleyball Net:** Once the pool is inflated, attach the detachable volleyball net to the designated inflatable posts in the center of the pool. Ensure it is securely fastened.



Figure 2: Detailed view of the volleyball net securely attached to one of the inflatable posts within the pool, demonstrating the connection mechanism.

5. **Inflate Accessories:** Inflate the included basketball and volleyball using a suitable pump. Do not overinflate.



Figure 3: Close-up of one of the inflatable basketball hoops, showing its yellow rim and white backboard, ready for play.

6. **Fill with Water:** Begin filling the pool with water using a garden hose. Fill to the desired level, ensuring it does not exceed the maximum fill line (if indicated) or overflow. The pool has a capacity of approximately 200 gallons.

OPERATING INSTRUCTIONS

- **Basketball Play:** Use the inflatable basketball with the integrated hoops for friendly games.
- **Volleyball Play:** Utilize the detachable volleyball net and inflatable volleyball for water volleyball.
- **Water Sprayer (if applicable):** If your model includes a water sprayer feature, connect a garden hose to the designated inlet to activate the sprayer for added fun.
- **General Play:** Enjoy general water play within the pool, always under adult supervision.



Figure 4: An aerial perspective of the Funsicle Sports Arena Pool, highlighting its full setup with two basketball hoops and the central volleyball net, along with the inflatable balls.

MAINTENANCE

- **Cleaning:** Regularly clean the pool walls and floor with a soft cloth and mild soap. Rinse thoroughly.
- **Water Quality:** For prolonged use, consider using appropriate pool chemicals designed for inflatable pools to maintain water hygiene. Follow chemical manufacturer's instructions carefully.
- **Draining:** To drain the pool, locate the drainage plug at the bottom. Open the plug and allow water to empty completely. Ensure the drainage area is suitable.
- **Drying:** After draining, thoroughly dry the entire pool, including all crevices, to prevent mold and mildew growth.
- **Storage:** Once completely dry, deflate the pool by opening the air valves. Fold it neatly and store it in a cool, dry place away from direct sunlight and extreme temperatures. Keep away from rodents and insects.
- **Patch Kit:** In case of small punctures, use a vinyl repair patch kit (not included) according to its instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pool is deflating slowly.	Loose valve cap; small puncture.	Ensure all valve caps are securely closed. Check for punctures and repair with a vinyl patch kit.
Water is not draining completely.	Drain plug obstructed; uneven ground.	Clear any debris from the drain plug. Ensure the pool is on a slightly sloped surface towards the drain if possible, or lift edges to assist.
Pool is unstable or leaning.	Uneven setup surface; insufficient inflation.	Drain water, reposition the pool on a perfectly level surface. Re-inflate all chambers firmly.

SPECIFICATIONS

Brand	Funsicle
Model Number	KB1054000
Approximate Inflated Length	9.8 ft (298 cm)
Overall Product Dimensions (including accessories)	50"L x 44"W x 57"H (127 cm L x 112 cm W x 145 cm H)
Shape	Oval / Figure-Eight
Material	Polyvinyl Chloride (PVC)
Water Capacity	Approx. 200 Gallons (757 Liters)
Item Weight	10.63 Pounds (4.82 kg)
Recommended Age	2 years and up (with adult supervision)
Included Components	Inflatable Basketball, Inflatable Volleyball, Basketball Hoop, Detachable Volleyball Net

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Manufacturer: Polygroup North America, Inc.

For further assistance, visit the [Funsicle Store on Amazon](#).

© 2025 Funsicle. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F21Z9ZYY>

More documents and user manuals: <https://manuals.plus/>