

AULCMEET RC-340C

AULCMEET RC-340C Replacement Remote Control User Manual

INTRODUCTION

Welcome to your AULCMEET RC-340C Replacement Remote Control. This manual provides essential information for setting up and operating your new remote control, designed for seamless compatibility with ONKYO DX7211, DX-7011, and DX7011 CD Players. Please read these instructions carefully to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The AULCMEET RC-340C is a dedicated replacement remote control, pre-programmed to work with specific ONKYO CD Player models. It features a standard layout for CD player functions, ensuring ease of use without complex setup procedures.





Image 1: Front view of the AULCMEET RC-340C Replacement Remote Control. This image displays the remote's black casing and the array of buttons, including numerical keys, playback controls, and specific CD player functions like REPEAT, SHUFFLE, and TIME EDIT.



Image 2: Angled view of the AULCMEET RC-340C Replacement Remote Control. This perspective highlights the ergonomic design and the slight curvature of the remote, providing a better view of the button layout and the overall form factor.

SETUP

1. Battery Installation

The AULCMEET RC-340C remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.

2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image 3: Back view of the AULCMEET RC-340C Replacement Remote Control. This image clearly shows the battery compartment cover located on the lower half of the remote's back, indicating where batteries should be inserted.

2. Initial Use

This remote control is designed to work immediately with compatible ONKYO CD Players (DX7211, DX-7011, DX7011) without any programming or pairing required. Once batteries are installed, point the remote at your CD player and begin operation.

OPERATING INSTRUCTIONS

The AULCMEET RC-340C remote provides full functionality for your ONKYO CD Player. Below is a general guide to common button functions:

- **DISPLAY:** Toggles display information on the CD player.
- **CD:** Selects the CD function if your system has multiple inputs.
- **REPEAT:** Repeats the current track or entire disc.
- **PLAY (▶):** Starts CD playback.
- **PAUSE (||):** Pauses CD playback. Press again to resume.
- **STOP (■):** Stops CD playback.
- **SKIP (◀◀ / ▶▶):** Skips to the previous or next track.
- **FAST FORWARD/REWIND (◀◀◀ / ▶▶▶):** Fast forwards or rewinds within a track.
- **Numerical Keys (0-9, +10):** Directly select track numbers. Use +10 for tracks above 9.
- **MEMORY:** Used for programming custom playback sequences. Refer to your CD player's original manual for detailed programming instructions.
- **CLEAR:** Clears programmed memory or other settings.
- **TIME EDIT:** Likely used for editing track times or programming. Refer to your CD player's original manual.
- **NEXT SELECTION:** Navigates through options or selections.
- **PEAK SEARCH:** Scans for the loudest part of a track.
- **A-B:** Repeats a specific section between two points (A and B).
- **SHUFFLE:** Plays tracks in a random order.

For advanced functions or specific settings not detailed here, please consult the original user manual for your ONKYO CD Player model.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote is unresponsive:**
 - Ensure the remote is pointed directly at the infrared sensor on your ONKYO CD player.
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA batteries. Weak batteries are a common cause of unresponsiveness.
 - Ensure there are no obstructions between the remote and the CD player.
- **Certain buttons do not work:**
 - This remote is a replacement for specific ONKYO CD Player models. Verify your CD player model is listed as compatible (DX7211, DX-7011, DX7011).
 - Some functions may be specific to your CD player's capabilities. Refer to your CD player's original manual.
 - Clean the remote's surface and buttons with a soft, dry cloth to remove any dirt or debris that might be obstructing button presses.

SPECIFICATIONS

Brand	AULCMEET
Model	RC-340C
Compatible Devices	ONKYO DX7211, DX-7011, DX7011 CD Player
Power Source	2 x AAA Batteries (not included)
Color	Black
Special Feature	Ergonomic Design
Approximate Dimensions (L x W)	7.68 inches x 2.17 inches



Image 4: AULCMEET RC-340C Remote Control with dimensions indicated. This image shows the remote control alongside measurements, indicating a length of approximately 7.68 inches and a width of 2.17 inches.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:







- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote or subjecting it to strong impacts, which can damage internal

circuitry.

WARRANTY AND SUPPORT

This AULCMEET RC-340C Replacement Remote Control is designed for reliable performance. For any questions, technical assistance, or warranty inquiries, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty claims.

Related Documents - RC-340C

	Onkyo RC-707M Receiver Replacement Remote Control Guide Detailed comparison of original and replacement buttons for the Onkyo RC-707M receiver, explaining function mapping and operational differences for each button.
	Onkyo RC-646S Replacement Remote Control Functions Guide A comprehensive guide detailing the functional mapping for the Onkyo RC-646S replacement remote control. Compare original buttons to their corresponding functions on the new remote.
	Onkyo RC-721S Replacement Remote Control Button Guide Detailed comparison of original and replacement buttons for the Onkyo RC-721S remote control, helping users understand button functions and mappings.
	Onkyo RC-707M Receiver Replacement Remote Control Guide A comprehensive guide comparing the original Onkyo RC-707M receiver remote control buttons with their corresponding functions on a replacement remote, detailing button mappings for easy operation.
	Onkyo RC-666S Remote Control Replacement Guide and Function Comparison A comprehensive guide comparing the original Onkyo RC-666S remote control functions and buttons with those of a compatible replacement, detailing button mappings and operational equivalents. Includes original and replacement labels for various functions.
	Onkyo RC-666S Replacement Remote Control Function Guide A comprehensive comparison of button functions between the original Onkyo RC-666S remote control and its replacement model, detailing each button's operation for user convenience.