#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- WeCool /
- > WeCool Fairwhale FW-5510-2 Analog Quartz Chronograph Watch User Manual

#### **WeCool FW-5510-2**

# WeCool Fairwhale FW-5510-2 Analog Quartz Chronograph Watch User Manual

Model: FW-5510-2

## 1. Introduction

Thank you for choosing the WeCool Fairwhale FW-5510-2 Analog Quartz Chronograph Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Image 1.1: Front view of the WeCool Fairwhale FW-5510-2 watch, showcasing its black dial, brown leather strap, and chronograph sub-dials.

## 2. PRODUCT FEATURES

- Analog Quartz Movement: Equipped with an imported quartz movement for accurate timekeeping and extended battery life.
- Chronograph Functionality: Features a stopwatch with 1/10 second, minute, and second sub-dials.
- Date Display: Convenient date window for daily utility.
- **3ATM Water Resistance:** Designed to withstand splashes, rain, and brief accidental submersion. Not suitable for swimming or diving.
- Enhanced Visibility: Luminous hands and markers ensure readability in low-light conditions.
- **Durable Construction:** Scratch-resistant mineral glass and a robust stainless-steel case.
- Premium Strap: Genuine leather strap for comfort and style.

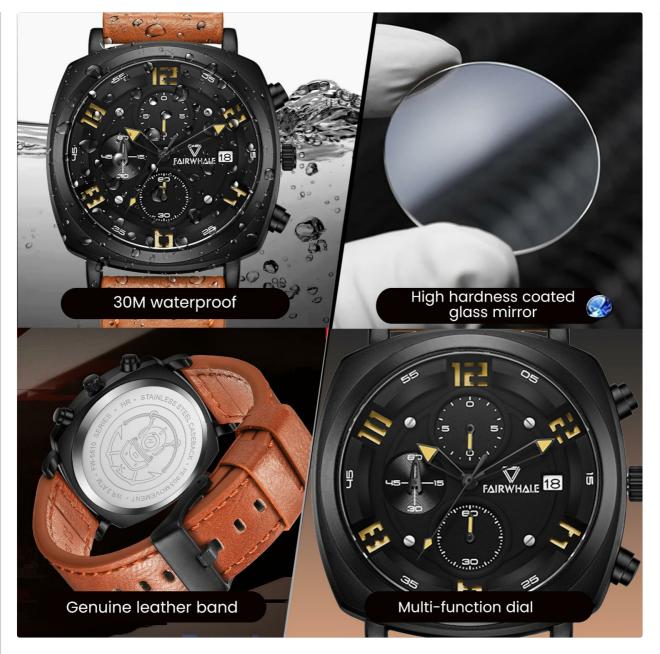


Image 2.1: Visual representation of key features including 30M water resistance, high-hardness coated glass, genuine leather band, and the multi-function dial.

# 3. SETUP AND INITIAL OPERATION

## 3.1 Identifying Watch Components



Image 3.1: Diagram illustrating the various functional components of the watch, including crown and pushers for time, date, and chronograph control.

## 3.2 Setting the Time

- 1. Pull the crown (middle button on the right side) out to position 2.
- 2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
- 3. Push the crown back into position 1 to start the watch.

## 3.3 Setting the Date

- 1. Pull the crown out to position 1 (first click).
- 2. Rotate the crown clockwise to adjust the date.
- 3. Once the correct date is displayed, push the crown back into its original position.

Note: Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

## 3.4 Using the Chronograph (Stopwatch)

- 1. **Start:** Press the top pusher (button A) to start the chronograph. The 1/10 second, minute, and second sub-dials will begin to move.
- 2. Stop: Press the top pusher (button A) again to stop the chronograph. The elapsed time will be displayed.
- 3. **Reset:** After stopping the chronograph, press the bottom pusher (button B) to reset all chronograph hands to their zero positions.

## 4. OPERATING GUIDELINES

#### 4.1 Water Resistance

Your WeCool Fairwhale watch is rated for 3ATM (30 meters) water resistance. This means it is suitable for daily use and can withstand splashes, rain, and brief immersion in water, such as during handwashing. It is **not** suitable for showering, bathing, swimming, diving, or any water sports. Do not operate the crown or pushers when the watch is wet or submerged.



Image 4.1: The watch demonstrating its 30-meter water resistance against splashes.

## 4.2 Luminous Display

The hands and markers on your watch are coated with a luminous material. For optimal glow in the dark, expose the watch dial to a bright light source (natural or artificial) for a few minutes. The intensity and duration of the glow will depend on the exposure time and light intensity.

## 5. MAINTENANCE AND CARE

## **5.1 Cleaning Your Watch**

- Wipe the watch case and crystal with a soft, dry cloth regularly to remove dust and smudges.
- For stubborn dirt, slightly dampen the cloth with water and gently wipe. Avoid using harsh chemicals or abrasive materials.

#### 5.2 Leather Strap Care

- Avoid prolonged exposure of the leather strap to direct sunlight, extreme temperatures, and moisture, as this can cause discoloration, drying, or cracking.
- If the strap gets wet, gently wipe it dry with a soft cloth and allow it to air dry naturally. Do not use artificial heat.
- Periodically clean the strap with a specialized leather cleaner and conditioner to maintain its flexibility and appearance.

#### 5.3 Battery Replacement

The watch is powered by a quartz battery. When the watch stops or the second hand starts skipping, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance integrity.

## 6. TROUBLESHOOTING

- Watch Not Running: Check if the crown is fully pushed in. If it is, the battery might be depleted and requires replacement.
- **Time/Date Incorrect:** Refer to Section 3.2 and 3.3 for instructions on how to correctly set the time and date.
- . Chronograph Hands Not Resetting to Zero: If the chronograph hands do not return to their zero

- position after pressing the reset button, a minor adjustment may be needed. Consult a professional watch repair service.
- Condensation Inside Watch: If you notice condensation inside the watch, it indicates a breach in water resistance. Stop using the watch immediately and have it inspected by a professional to prevent further damage.

## 7. Specifications



Image 7.1: Detailed specifications of the WeCool Fairwhale FW-5510-2 watch.

Feature	Specification
Model Number	FW-5510-2
Watch Movement Type	Quartz
Case Diameter	44 Millimetres
Band Material Type	Genuine Leather

Band Colour	Brown
Item Weight	50 Grams
Water Resistance	3 ATM (30 Meters)
Country of Origin	China

#### 8. WARRANTY AND SUPPORT

## 8.1 Warranty Information

This WeCool Fairwhale watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty. Retain your proof of purchase for any warranty claims.

## **8.2 Customer Support**

Should you have any questions regarding the use, maintenance, or troubleshooting of your watch, please contact WeCool customer support through the Amazon platform. Our professional after-sales team is available to assist you and provide a satisfactory resolution.

© 2025 WeCool. All rights reserved.

#### Related Documents - FW-5510-2



#### WeCool S2 Selfie Stick Tripod User Manual | Features, Setup, and Specifications

User manual for the WeCool S2 Selfie Stick Tripod. Learn how to use the Bluetooth remote, set up the tripod, check compatibility, and find specifications and warranty information for this extendable smartphone accessory.



#### WeCool Gimbal G1 User Manual: Setup, Operation, and Specifications

Detailed user guide for the WeCool Gimbal G1 handheld gimbal stabilizer. Learn how to set up, connect your phone, use tripod and selfie stick modes, charge the device, and understand its specifications and warranty.



#### WeCool Just Dough Premium: Crafting Fuzzy, Quirk, Bunbun & Chip Characters

Discover creative fun with WeCool's Just Dough Premium modeling dough. This guide offers step-by-step instructions to sculpt adorable characters like Fuzzy, Quirk, Bunbun, and Chip, suitable for ages 3+.

	WeCool Moonwalk M1 True Wireless Earbuds: Instruction Manual & Features Comprehensive instruction manual for WeCool Moonwalk M1 True Wireless Earbuds. Learn how to pair, charge, operate, and troubleshoot your Bluetooth 5.0 earbuds.
	WeCool Moonwalk Mini True Wireless Bluetooth Earbuds User Manual User manual for the WeCool Moonwalk Mini True Wireless Bluetooth Earbuds, detailing Bluetooth pairing, button operations, product features, specifications, and brand warranty information.
LACOSTE CONTROL CONTRO	Lacoste Watches Operating Instructions, Care, Maintenance, Warranty & Service Information Comprehensive guide for Lacoste watches, covering operating instructions for various models, care and maintenance tips, product safety, battery information, warranty details, and obtaining service.