



Manuals.plus /

› [Xiaomi](#) /

› [Xiaomi Pad 7 Ai WiFi Version Global \(No Calls or Text\) 11.2 inches 3.2K 144Hz 8850mAh Bluetooth 5.4 Four Speakers 13 Mp Model 2410CRP4CG \(Green, 128GB + 8GB\) User Manual](#)

Xiaomi 2410CRP4CG

Xiaomi Pad 7 Ai User Manual

Model: 2410CRP4CG | Brand: Xiaomi

1. INTRODUCTION AND OVERVIEW

The Xiaomi Pad 7 Ai WiFi Version Global is designed to provide a superior tablet experience with its advanced display, powerful processor, and immersive audio. This manual will guide you through the setup, operation, and maintenance of your new device.

Key features include a vibrant 11.2-inch 3.2K 144Hz display, a robust Snapdragon 7+ Gen 3 Mobile Platform, and an 8850mAh battery for extended use. It also boasts a 13MP rear camera, an 8MP front camera, and quad speakers with Dolby Atmos support for rich audio. The tablet runs on Android 14 with HyperOS 2, offering a smooth and efficient interface.

2. WHAT'S IN THE BOX

Please check the contents of your product package:

- Xiaomi Pad 7 Ai Tablet
- USB Type-C Cable
- Manual
- Fast Car Charger

3. SETUP

3.1 Initial Power On

To power on your Xiaomi Pad 7 Ai for the first time, press and hold the power button located on the side of the device until the Xiaomi logo appears on the screen. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account sign-in.

3.2 Charging the Battery

Before first use, it is recommended to fully charge the tablet's 8850mAh battery. Connect the provided USB Type-C cable to the tablet's charging port and the other end to the Fast Car Charger. A full charge typically takes approximately 1.5 hours with the 45W turbo charging capability.

3.3 Screen Protector Installation (Optional)

If you wish to install a screen protector, ensure the screen is completely clean and free of dust particles. Carefully align the protector with the screen and apply it slowly to avoid air bubbles. Refer to the screen protector's specific instructions for best results.

4. OPERATING INSTRUCTIONS

4.1 Display and Navigation

The 11.2-inch 3.2K 144Hz display offers a smooth and responsive experience. Navigate through the HyperOS 2 interface using touch gestures. Swipe down from the top for quick settings and notifications. Adjust brightness and color schemes in the Display & brightness settings.



Figure 1: Xiaomi Pad 7 Ai front view, showcasing its vibrant display.

4.2 Performance

Equipped with the Snapdragon 7+ Gen 3 Mobile Platform, the tablet handles demanding applications and multitasking efficiently. HyperOS 2 optimizes resource allocation for a smoother user experience. For optimal performance, consider reducing animations in settings and maintaining the 144Hz refresh rate.

4.3 Camera Usage

The tablet features a 13MP rear camera and an 8MP front camera. Access the camera app from the home screen to capture photos and videos. Various modes such as Portrait, Document, Dual video, and Director mode are available.

The front camera is ideal for video calls and online meetings.



Figure 2: Rear view of Xiaomi Pad 7 Ai in different colors, highlighting the camera design.

4.4 Battery Management

The 8850mAh battery provides ample power for a full day of mixed usage. To optimize battery life, manage background app usage and adjust screen brightness. The tablet supports 45W turbo charging via USB Type-C.

4.5 Connectivity

The Xiaomi Pad 7 Ai supports Wi-Fi 6E (2x2 MIMO) and Bluetooth 5.4 for seamless wireless connectivity. It does not support cellular calls or text messages, nor does it have a SIM card or SD slot. For data transfer, use the USB Type-C port.

4.6 Software and AI Features

Running on Android 14 with HyperOS 2, the tablet offers a clean and functional user interface. It includes new AI capabilities for office tasks, text and image generation, and enhanced meeting tools like Fill light and Interpret. Xiaomi HyperConnect provides a seamless experience across compatible Xiaomi devices.

5. MAINTENANCE

To ensure the longevity of your Xiaomi Pad 7 Ai, keep it clean and free from dust. Use a soft, lint-free cloth for cleaning the screen. Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods. Keep the software updated by checking for system updates regularly in the settings menu.

6. TROUBLESHOOTING

If you encounter any issues with your tablet, try the following basic troubleshooting steps:

- **Restart the device:** A simple restart can often resolve minor software glitches.
- **Check for software updates:** Ensure your device is running the latest version of HyperOS.
- **Clear app cache:** If a specific app is causing issues, try clearing its cache in the app settings.
- **Factory reset:** As a last resort, you can perform a factory reset (this will erase all data, so back up important files first).

7. SPECIFICATIONS

Feature	Specification
Brand	Xiaomi
Model Name	Xiaomi Pad 7
Item Model Number	2410CRP4CG
Operating System	Android 14 HyperOS
Screen Size	11.2 inches
Max Screen Resolution	3200 x 2136, 345 ppi Pixels
Refresh Rate	Up to 144Hz
Processor Brand	Snapdragon 7+ Gen 3 Mobile Platform
RAM	8 GB
Memory Storage Capacity	128 GB
Rear Webcam Resolution	13 MP
Front Camera Resolution	8 MP
Battery Capacity	8850mAh (typ)
Charging	45W turbo charging (charger included)
Connectivity	Wi-Fi 6E, Bluetooth 5.4
Dimensions (LxWxH)	9.89 x 0.24 x 6.83 inches
Item Weight	2.59 pounds

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product package or visit the official Xiaomi website. Keep your proof of purchase for any warranty claims.

