

Zerodis Zerodis9w4a35nx6s

Zerodis Sewing Machine Pedal Circuit Board

Model: Zerodis9w4a35nx6s

INTRODUCTION

This instruction manual provides essential information for the installation, operation, and maintenance of your Zerodis Sewing Machine Pedal Circuit Board, model Zerodis9w4a35nx6s. This circuit board is designed to be a replacement or component for compatible sewing machine pedals, specifically models IAC314 and IAC315. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product.

PRODUCT OVERVIEW

The Zerodis Sewing Machine Pedal Circuit Board is a compact and lightweight electronic component engineered for sensitive response and precise control in sewing machine pedal applications. Its design prioritizes ease of use and integration.

- **Compact and Practical:** Features a small size and lightweight design for convenient handling and integration into sewing machine pedals.
- **Applicable Models:** Specifically designed for IAC314 and IAC315 sewing machine pedal models, ensuring strong compatibility.
- **Simple and Intuitive Design:** An uncluttered layout enhances aesthetic appeal and contributes to a streamlined user experience.
- **Durable Electronic Components:** Equipped with robust electronic components for lasting stability and durability, supporting various pedal functions.

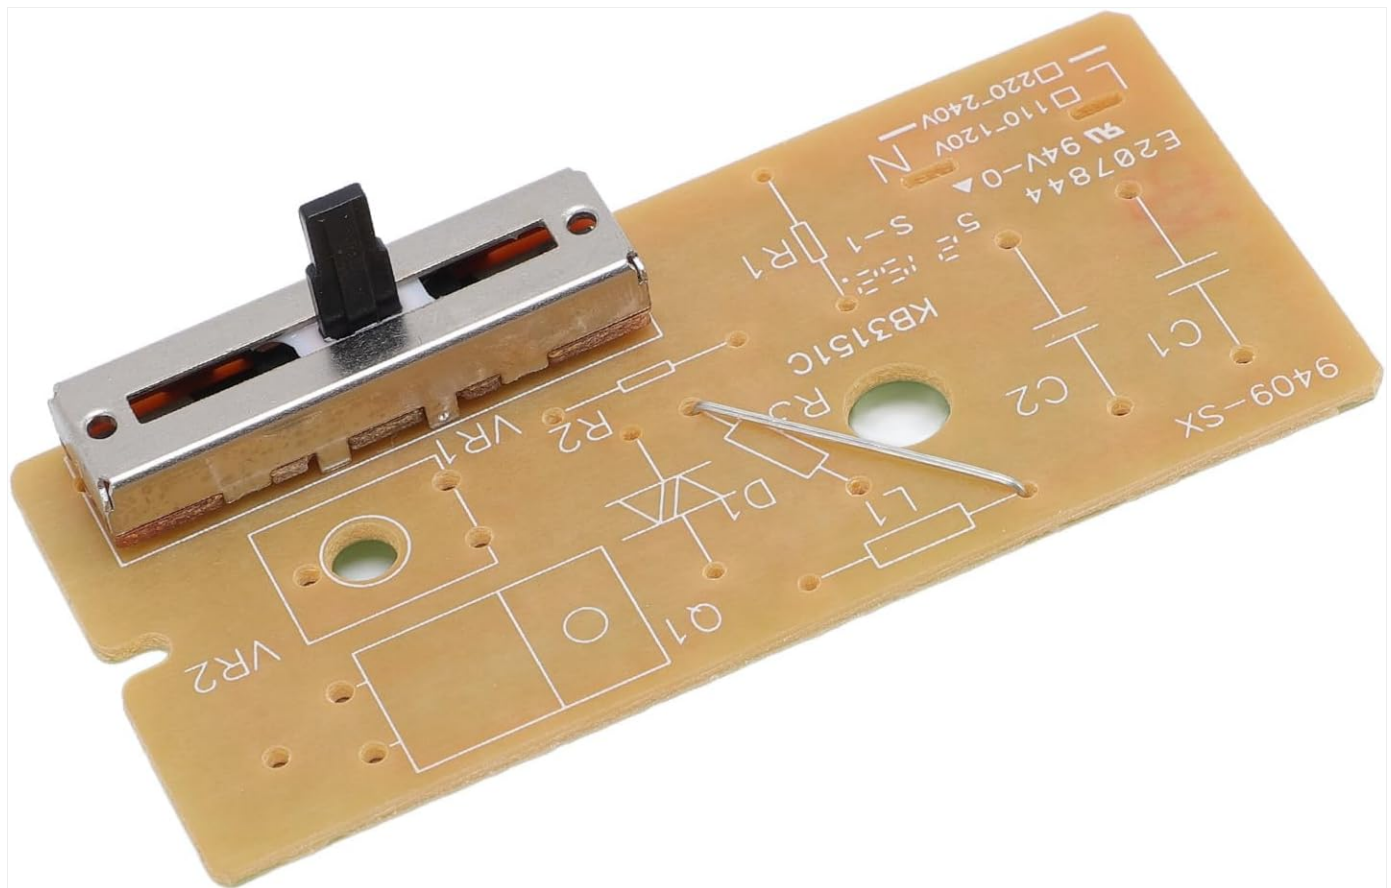 


Image 1: Top view of the circuit board, showing the slider control and various electronic components.

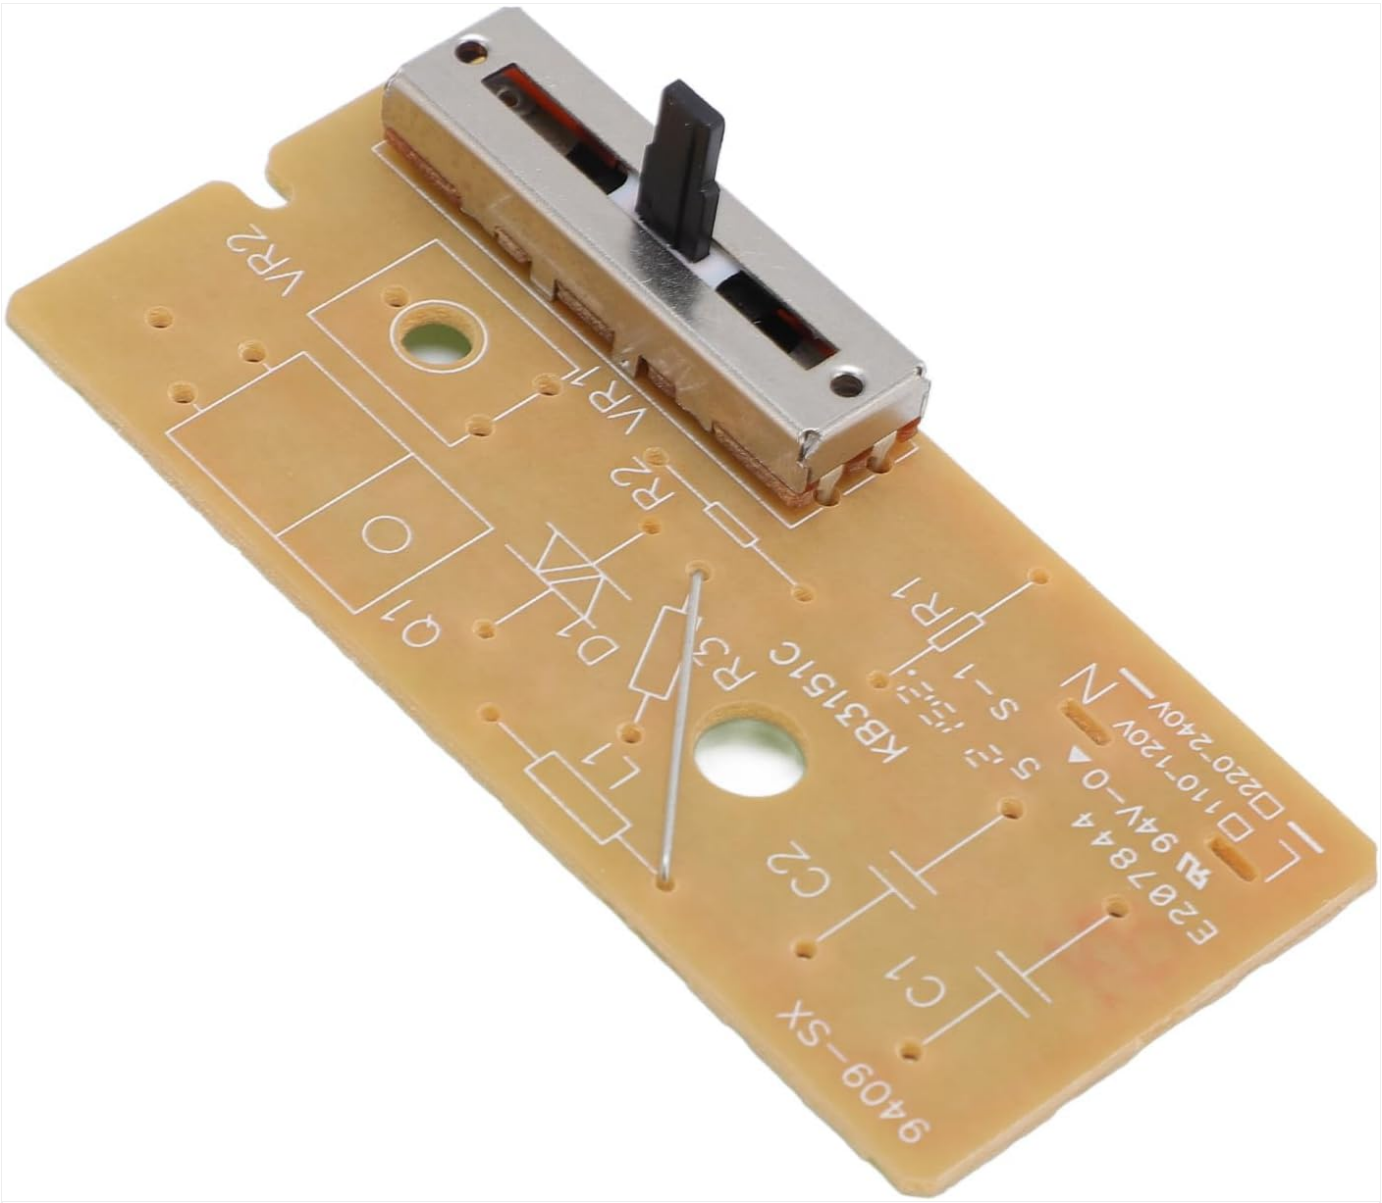 


Image 2: Angled view of the circuit board, highlighting its compact form factor.

SPECIFICATIONS

Feature	Detail
Item Type	Sewing Machine Pedal Circuit Board
Product Material	Metal
Applicable Models	For IAC314, For IAC315 Pedal
Board Dimensions (Approx.)	3.5 x 7.5cm / 1.4 x 3in
Package/Overall Dimensions	5.11 x 3.54 x 0.78 inches
Item Model Number	Zerodis9w4a35nx6s
Item Weight	0.388 ounces
Manufacturer	Zerodis

SETUP AND INSTALLATION

The Zerodis Sewing Machine Pedal Circuit Board is designed for straightforward installation. It is intended to replace or integrate into existing sewing machine pedal enclosures. Please ensure the sewing machine is unplugged from the power source before beginning any installation.

1. **Safety First:** Always disconnect the sewing machine from the main power supply before opening the pedal housing or handling electronic components.
2. **Access Pedal Housing:** Carefully open the housing of your sewing machine pedal (IAC314 or IAC315) according to its specific service instructions.
3. **Identify Existing Board:** Locate the current circuit board within the pedal. Note the orientation and connections of all wires and components. It is recommended to take a photograph for reference.
4. **Disconnect Old Board (if replacing):** Gently disconnect all wires and connectors from the old circuit board. Pay attention to color coding and pin assignments.
5. **Install New Board:** Position the Zerodis circuit board into the pedal housing. Ensure it aligns correctly with mounting points and any external controls (like the slider).
6. **Connect Wires:** Reconnect all wires and connectors to the new circuit board, matching them to the appropriate terminals. Refer to your photograph or the pedal's wiring diagram if necessary.
7. **Secure Board:** Secure the circuit board in place using any screws or clips provided in the pedal housing.
8. **Close Housing:** Carefully close and secure the pedal housing.
9. **Test Functionality:** Reconnect the sewing machine to power and test the pedal's functionality to ensure proper operation.

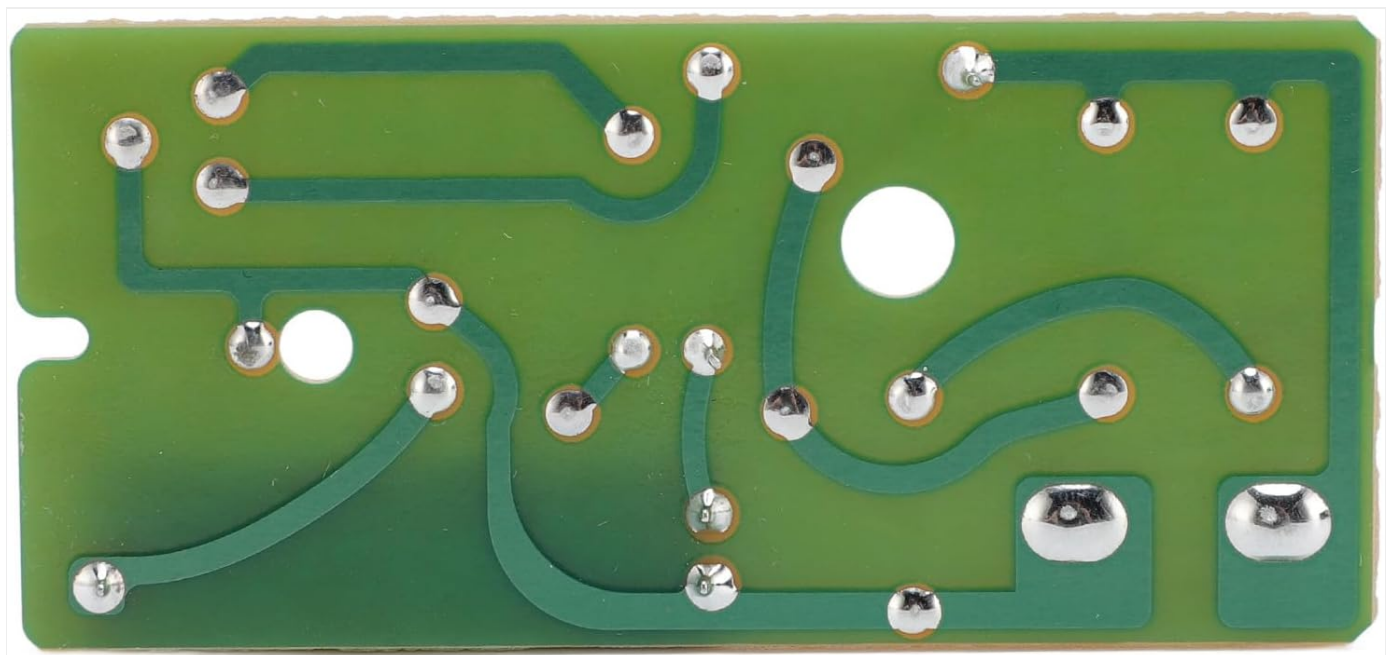 


Image 3: Bottom view of the circuit board, illustrating the solder points and traces for connection.

OPERATING INSTRUCTIONS

Once installed, the Zerodis Sewing Machine Pedal Circuit Board functions as the core electronic component of your sewing machine's foot pedal. Its operation is directly tied to the design and functionality of the specific pedal it is integrated into (IAC314 or IAC315).

- **Speed Control:** The circuit board translates the physical input from the pedal (e.g., pressure applied to the foot pedal, or the position of a slider control) into an electrical signal that controls the sewing machine's motor speed.

- **Responsive Control:** The design ensures a sensitive response, allowing for precise and effortless control over the sewing speed, from slow stitching to high-speed operation.
- **Integration:** This board is designed to seamlessly integrate with the existing mechanical and electrical systems of compatible pedals, maintaining the original operational feel and performance.

For detailed operational procedures, refer to the user manual provided with your specific sewing machine and foot pedal model (IAC314 or IAC315).

MAINTENANCE

The Zerodis Sewing Machine Pedal Circuit Board is a robust electronic component designed for durability. Minimal maintenance is required for the circuit board itself, but proper care of the entire foot pedal assembly is recommended.

- **Keep Dry:** Protect the foot pedal from moisture and liquids, as these can damage electronic components.
- **Clean Gently:** If cleaning is necessary, ensure the pedal is unplugged. Use a soft, dry cloth to wipe the exterior. Avoid using harsh chemicals or abrasive cleaners.
- **Avoid Physical Damage:** Prevent dropping the pedal or subjecting it to heavy impacts, which could damage the internal circuit board.
- **Dust Prevention:** Keep the pedal in a clean environment to prevent dust and lint from accumulating inside the housing, which could affect performance over time.

TROUBLESHOOTING

If you experience issues with your sewing machine pedal after installing the Zerodis circuit board, consider the following troubleshooting steps:

- **No Power/No Response:**
 - Ensure the sewing machine is properly plugged into a working power outlet.
 - Verify all connections to the circuit board are secure and correctly wired. Refer to your installation notes or photographs.
 - Check the sewing machine's power switch and any safety interlocks.
- **Inconsistent Speed Control:**
 - Inspect the slider mechanism on the circuit board for any obstructions or damage.
 - Ensure the pedal's internal mechanical linkage to the circuit board's slider is functioning smoothly.
 - Confirm the circuit board is securely mounted and not shifting within the housing.
- **Burning Smell or Smoke:**
 - Immediately unplug the sewing machine from the power source.
 - Do not attempt to use the pedal or machine. Contact a qualified technician for inspection.

If these steps do not resolve the issue, it is recommended to consult a qualified sewing machine technician or contact Zerodis customer support for further assistance.

WARRANTY AND SUPPORT

Zerodis products are manufactured to high-quality standards. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For technical support, inquiries, or to report a defective product, please contact Zerodis customer service through the retailer where the product was purchased or visit the official Zerodis website for contact information.

Manufacturer: Zerodis
Date First Available: March 20, 2025

© 2025 Zerodis. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question