

[Manuals.plus](#) /

› [Nexgrill](#) /

› Nexgrill 5 & 6-Burner Grill Cover Instruction Manual

Nexgrill 700-20144

Nexgrill 5 & 6-Burner Grill Cover Instruction Manual

Model: 700-20144 | **Brand:** Nexgrill

INTRODUCTION

Thank you for choosing the Nexgrill 5 & 6-Burner Grill Cover. This manual provides essential information for the proper use, care, and maintenance of your grill cover. Designed to protect your outdoor grill from various environmental elements, this cover ensures your grill remains in optimal condition for extended periods. Please read this manual thoroughly before first use and retain it for future reference.

KEY FEATURES

- **Vented Mesh Design:** Includes vented mesh panels to allow moisture and condensation to escape, reducing the risk of rust and corrosion while promoting interior airflow.
- **Rugged & Water-Resistant:** Made from heavy-duty polyester with a PVC coating, offering superior resistance to daily wear and tear and repelling water.
- **Designed for 5 & 6-Burner Grills:** Specifically tailored to fit standard 5 and 6-burner grills perfectly, ensuring a streamlined and secure fit.
- **Year-Round All-Weather Protection:** Shields your grill from rain, snow, wind, and UV rays, preventing sun fading and keeping it clean and dry in all seasons.
- **Full Grill Protection:** Sized at 66" W x 23" D x 43" H, providing generous and comprehensive coverage for standard-sized grills.
- **Built-In Pouch:** A convenient built-in pouch allows for storage of small accessories.

- **Adjustable Buckle Straps:** Ensures the cover remains snug and secure, even in windy conditions.
- **Easy Lift Handles:** Durable handles facilitate convenient cover removal and placement.



 
The Nexgrill 66-inch Gas Grill Cover provides comprehensive protection for your outdoor grill.



SECURE FIT STRAPS

Velcro straps keep cover snug and secure in windy conditions

Adjustable buckle straps ensure a secure fit, preventing the cover from being dislodged by wind.

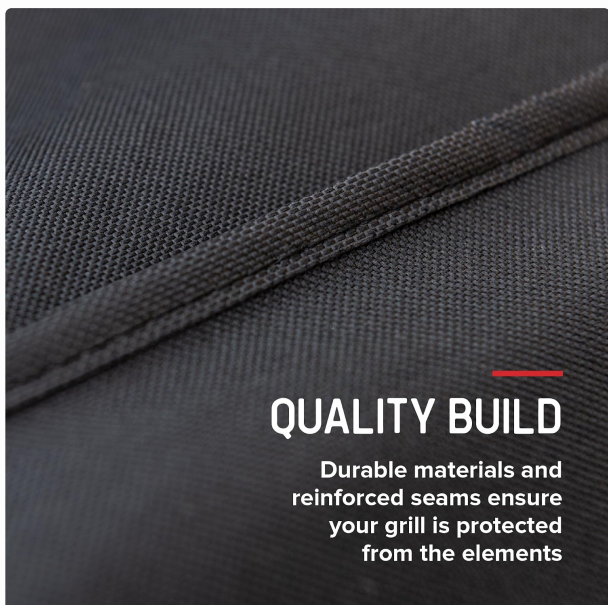

QUALITY BUILD

Durable materials and reinforced seams ensure your grill is protected from the elements

Constructed with heavy-duty polyester and reinforced seams

for enhanced durability.

WATER REPELLENT MATERIAL

Keeps grill protected from
wet conditions



The water-resistant coating repels moisture, keeping your grill dry in wet conditions.



EASY TO CLEAN MATERIAL

QUALITY
BUILD



 
REPELS
WATER



SECURE
STRAPS



The material is designed for easy cleaning, maintaining its appearance and protective qualities.

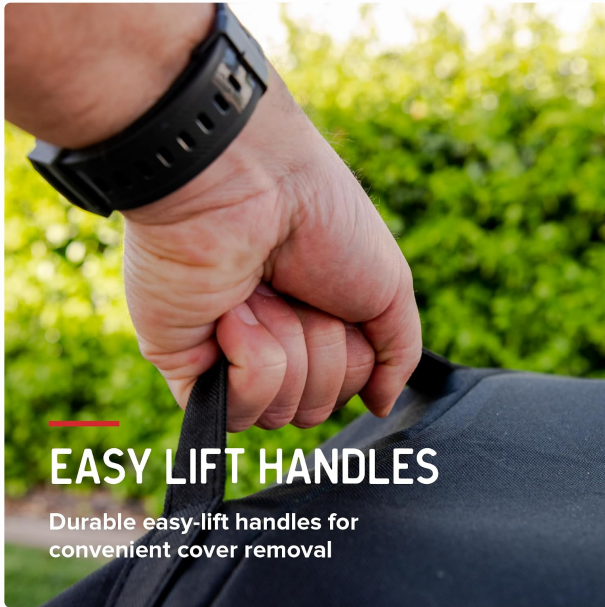


EASY LIFT HANDLES

Durable easy-lift handles for convenient cover removal

Convenient easy-lift handles facilitate quick and effortless removal and placement of the cover.

 DIMENSIONS

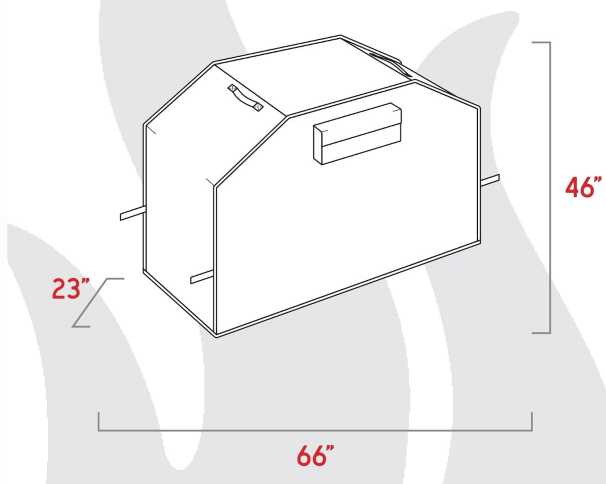

The full-length design provides complete coverage, protecting the entire grill from top to bottom.



Designed to fit standard 5 and 6-burner grills, measuring 66 inches wide, 23 inches deep, and 43 inches high.

SETUP

Before First Use

1. **Unpack:** Carefully remove the grill cover from its packaging.
2. **Inspect:** Check the cover for any signs of damage or defects. If any are found, contact customer support.
3. **Prepare Grill:** Ensure your grill is completely cool and clean before covering. *Allow the grill to dry completely before covering.*

Applying the Cover

1. Position the cover over the top of your grill.
2. Gently pull the cover down over all sides of the grill, ensuring it fully covers the entire unit.
3. Secure the adjustable buckle straps located at the bottom of the cover to prevent it from being blown off by wind.

OPERATING INSTRUCTIONS

The Nexgrill cover is designed for simple, daily use. When you are finished using your grill and it has cooled down completely, simply place the cover over it to protect it from the elements. When ready to grill, use the easy-lift handles to remove the cover. Fold or roll the cover neatly for storage to prevent creases and prolong its life.

MAINTENANCE

Cleaning the Cover

- Wipe down the cover regularly with a damp cloth to remove dust, dirt, and debris.
- For tougher stains, use a mild soap solution and a soft brush. Rinse thoroughly with water.
- Allow the cover to air dry completely before storing or placing it back on the grill.

Storage

- When not in use for extended periods, store the cover in a cool, dry place.
- Fold it neatly to prevent excessive creasing.
- *Keep the grill cover away from heat sources and do not leave it in direct sunlight for extended periods to prevent damage to the PVC material.*

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cover blows off in wind	Straps not secured or not tightened enough.	Ensure all buckle straps are securely fastened and tightened around the grill legs or base.
Moisture buildup under cover	Grill was covered while still wet or hot; insufficient airflow.	Always ensure the grill is completely dry and cool before covering. The vented mesh panels are designed to help, but proper drying is crucial.
Cover appears faded or brittle	Prolonged exposure to direct sunlight or extreme temperatures.	While designed for outdoor use, extreme conditions can affect material longevity. Avoid leaving in direct, intense sunlight for extended periods if possible. Ensure it's not near heat sources.

SPECIFICATIONS

Attribute	Detail
Brand	Nexgrill
Model Name	700-20144
Product Dimensions (L x W x H)	23"D x 66"W x 43"H

Attribute	Detail
Color	Black
Material	Polyester, PVC
Item Weight	5.33 pounds
Recommended Uses	Outdoor Grill Protection
UPC	044376299880

WARRANTY AND SUPPORT

This Nexgrill product is manufactured to high-quality standards and is warranted against defects in materials and workmanship. For specific warranty details, including duration and coverage, please refer to the warranty information provided at the time of purchase or contact Nexgrill customer support directly.

For technical assistance, replacement parts, or any questions regarding your grill cover, please contact Nexgrill Customer Service. Contact information can typically be found on the product packaging or the official Nexgrill website.