

LETIME B0F237NF8L

LETIME 5 FT Animatronic Witch Halloween Decoration User Manual

1. INTRODUCTION

Thank you for choosing the LETIME 5 FT Animatronic Witch Halloween Decoration. This life-sized animatronic witch is designed to enhance your Halloween display with its eerie movements, glowing eyes, and sound activation. Please read this manual thoroughly before assembly and operation to ensure safe and correct usage.



Figure 1: The LETIME 5 FT Animatronic Witch Halloween Decoration.

2. SAFETY INFORMATION

- This product is intended for decorative purposes only. It is not a toy. Keep out of reach of children and pets.
- Use only the specified battery type (3 AA batteries, not included). Do not mix old and new batteries, or different types of batteries.
- Ensure the product is placed on a stable, level surface to prevent tipping.
- If using outdoors, place in a sheltered area to protect from extreme weather conditions (heavy rain, strong winds).
- Do not attempt to modify or repair the product. Contact customer support for assistance.
- Keep away from open flames and heat sources.

3. PACKAGE CONTENTS

Please verify that all components are present before assembly:

- 1x Animatronic Witch Body (with attached robes and head)

- 1x Base Assembly (multiple pieces)
- Support Rods (multiple pieces)
- Instruction Manual

4. SETUP INSTRUCTIONS

Follow these steps to assemble your LETIME Animatronic Witch:

1. **Install the Base:** Connect the pieces of the base assembly to form a stable foundation.
2. **Connect Support Rods to Base:** Securely attach the lower support rod to the assembled base.
3. **Connect Support Rods:** Join the remaining support rod sections together to achieve the full height.
4. **Connect Support Rod to Head:** Carefully attach the top of the support rod to the designated connection point within the animatronic witch's body/head.
5. **Install Batteries:** Locate the battery compartment (typically on the back or base of the animatronic). Insert 3 AA batteries (not included), ensuring correct polarity.
6. **Activate:** Turn on the power switch, usually located near the battery compartment or as a separate button.



Figure 2: Step-by-step assembly guide for the animatronic witch.

5. OPERATING INSTRUCTIONS

The LETIME Animatronic Witch features both sound activation and manual control:

- **Sound Activation:** The animatronic is equipped with a sound sensor. A sudden loud noise, such as a clap or scream, will trigger its movements and sounds.
- **Manual Activation:** A button is provided (refer to Figure 3) to manually activate the witch's effects. Press the button to initiate the sequence.
- **Animated Features:** When activated, the witch's head will slowly turn from side to side, and its red LED eyes will glow intensely, accompanied by unsettling sounds.



Figure 3: Sound and button activation methods.

6. MAINTENANCE

- **Cleaning:** Gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use, disassemble the product and store it in its original packaging or a

protective container in a cool, dry place, away from direct sunlight.

- **Battery Replacement:** If the animatronic's performance diminishes, replace all batteries with new ones. Remove batteries if storing for extended periods to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Animatronic does not activate.	Batteries are dead or incorrectly installed. Power switch is off.	Check battery polarity and replace if necessary. Ensure power switch is in the 'ON' position.
Lights or sounds are weak.	Low battery power.	Replace batteries with new ones.
Head movement is erratic or non-existent.	Obstruction or internal mechanism issue.	Ensure no fabric or external objects are blocking movement. If problem persists, contact customer support.
Sound activation is not working.	Sensor is obstructed or in a very noisy environment.	Clear any obstructions from the sensor. Test in a quieter environment or use manual activation.

8. SPECIFICATIONS

- **Brand:** LETIME
- **Model:** B0F237NF8L
- **Product Dimensions:** 5 x 4 x 8 inches (L x W x H)
- **Item Weight:** 4.55 pounds
- **Material:** Plastic
- **Power Source:** 3 AA Batteries (not included)
- **Features:** Sound Activation, Moving Head, Glowing Red Eyes



Figure 4: Product dimensions illustrated.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact LETIME customer service through the retailer's platform or the official brand website. Keep your purchase receipt as proof of purchase.