

Manuals.plus /

› Yatao /

› Yatao YT01-RM 75MP 4K Digital Camera Instruction Manual

## Yatao YT01-RM

# Yatao YT01-RM 75MP 4K Digital Camera Instruction Manual

Model: YT01-RM | Brand: Yatao

## 1. INTRODUCTION

Thank you for choosing the Yatao YT01-RM 75MP 4K Digital Camera. This compact and versatile camera is designed for photography enthusiasts, vlogging, and content creation, offering high-resolution images and videos with ease of use. Key features include 75MP photo resolution, 4K video recording, 10X optical zoom, a convenient flip touchscreen, and built-in WiFi for instant sharing. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and longevity.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Yatao YT01-RM Digital Camera
- 10X Optical Zoom Lens (pre-attached)
- Lens Cap
- Lens Hood
- 2 x 1500mAh Lithium-Ion Batteries
- Dual Battery Charger
- 64GB TF (Micro SD) Card
- Card Reader (2-in-1 for Lightning/USB-C)
- Type-C USB Cable
- Camera Strap
- Cleaning Cloth
- User Manual

## INNOVATIVE SELFIES 180° FLIP SCREEN



Figure 2.1: Yatao YT01-RM Digital Camera with all included accessories, neatly arranged.

### 3. GETTING STARTED (SETUP)

#### 3.1 Inserting the Battery

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert a charged Lithium-Ion battery into the compartment, ensuring the correct orientation (refer to the diagram inside the compartment).
4. Close the battery compartment cover until it clicks securely into place.

#### 3.2 Inserting the Memory Card

1. Open the battery compartment cover. The TF (Micro SD) card slot is usually located next to the battery.
2. Insert the 64GB TF card into the slot with the gold contacts facing the front of the camera, until it clicks into place.
3. Close the battery compartment cover.

### 3.3 Attaching the Camera Strap

1. Thread the ends of the camera strap through the strap lugs on both sides of the camera.
2. Secure the strap by passing the ends through the plastic buckles and adjusting the length for comfortable wear around your neck or wrist.

Video 3.1: Unboxing and initial setup of the camera, demonstrating battery and memory card insertion, and strap attachment.

### 3.4 Attaching the Lens Hood

1. Align the lens hood with the front of the camera lens.
2. Twist the lens hood clockwise until it locks securely into place. The lens hood helps reduce glare and lens flare.

## 4. OPERATING THE CAMERA

### 4.1 Power On/Off

Press and hold the power button (usually located on the top of the camera) for a few seconds to turn the camera on or off.

### 4.2 Using the Flip Touchscreen

The 3-inch IPS HD touchscreen can be flipped out and rotated 180 degrees, making it ideal for selfies and vlogging. Navigate menus and settings by tapping or swiping on the screen.

 


Figure 4.1: Demonstrating the 180-degree flip screen for easy self-recording and selfies.

### 4.3 Mode Dial

Rotate the mode dial on the top of the camera to select different shooting modes:

- **Photo Mode:** For capturing still images (up to 75MP).
- **Video Mode:** For recording high-quality videos (up to 4K).
- **Loop Recording:** Continuously records video, overwriting older footage.
- **Slow Motion:** Records video at a higher frame rate for slow-motion playback.
- **Time-Lapse:** Captures a series of photos over time to create a time-lapse video.
- **Scene Modes:** Pre-set modes for specific shooting conditions (e.g., Portrait, Landscape, Sports).

## SECURE YOUR SHOT WITH THE INCLUDED CAMERA STRAP



Figure 4.2: Visual representation of different video recording modes available on the camera.

### 4.4 Zoom Function

The camera features 10X optical zoom for clear, detailed images even from a distance. Use the zoom controls (usually 'W' for wide and 'T' for telephoto) to adjust the focal length.



Figure 4.3: Illustrating the 10X optical zoom capability, showing image clarity at different zoom levels.

### 4.5 Flash Control

The camera has an external flash. To activate the flash, manually pop it up (if applicable) or select the flash mode from the settings menu (Auto, Fill-in, Red-eye Reduction, Off).

### 4.6 Filters and Effects

Explore various built-in filters and effects (e.g., Black & White, Sepia, Negative) to enhance your photos and videos. These can usually be accessed through the menu settings or a dedicated button.



Figure 4.4: A selection of creative filters and color effects that can be applied to images.

## 5. CONNECTIVITY & DATA TRANSFER

### 5.1 WiFi Sharing

The camera supports WiFi connectivity for instant sharing of photos and videos to your smartphone or other devices. Download the companion app (details in the user guide) to connect your camera via WiFi and manage your media.



Figure 5.1: Illustrating the camera's WiFi connectivity for seamless sharing of content to a smartphone and social media.

### 5.2 Using the Card Reader

Use the included 2-in-1 card reader to transfer files directly from your TF card to iPhones, iPads, or other devices with USB-C ports. This provides a fast and convenient way to access your media without needing a computer.

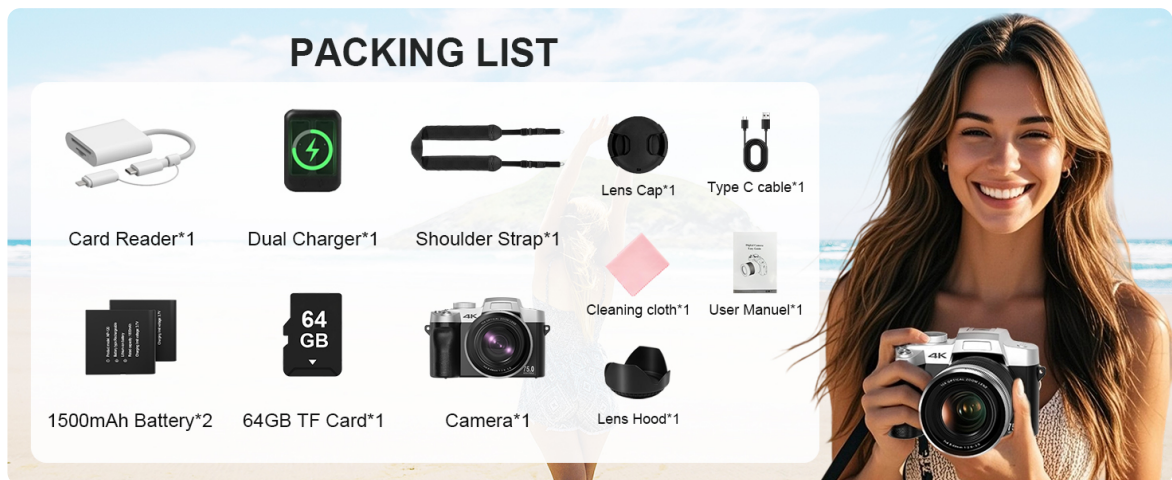


Figure 5.2: The versatile 2-in-1 card reader for transferring files to various devices.

### 5.3 USB-C Connection

Connect the camera to a computer using the provided Type-C USB cable to transfer files or charge the camera directly.

## 6. MAINTENANCE

### 6.1 Cleaning the Camera

- Use the included cleaning cloth to gently wipe the lens and touchscreen. Avoid using harsh chemicals or abrasive materials.
- For stubborn smudges on the lens, use a specialized lens cleaning solution and a microfiber cloth.
- Keep the camera body clean and free from dust and debris.

### 6.2 Battery Care

- Always use the provided dual charger and USB cable to charge the batteries.
- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the batteries frequently to prolong their lifespan.

## 7. TROUBLESHOOTING

If you encounter any issues with your Yatao YT01-RM Digital Camera, please refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted. Try using the spare battery.
- **Memory card error:** Ensure the TF card is correctly inserted. If the issue persists, try formatting the card (this will erase all data) or use a different TF card.
- **Poor image/video quality:** Check the selected resolution and quality settings. Ensure the lens is clean and free from smudges. Adjust lighting conditions or use the flash if necessary.
- **Autofocus issues:** Ensure there is sufficient light for the camera to focus. Try focusing on a high-contrast subject.
- **WiFi connection problems:** Ensure WiFi is enabled on the camera and your device. Restart both devices and try connecting again.

For further assistance, please contact Yatao customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Yatao
Model Name	YT01
Model Number	YT01-RM
Maximum Image Resolution	75 MP
Video Resolution	2160p (4K)
Optical Zoom	10X
Image Stabilization	Optical
Screen Size	3 Inches
Display Type	Ultra HD Flip Touchscreen
Wireless Technology	Wi-Fi
Memory Storage Capacity	64 GB (TF Card included)
Battery Type	Lithium Ion (2 x 1500mAh included)
Supported File Format	JPEG, MP4
Auto Focus Technology	Hybrid
Water Resistance Level	Not Water Resistant

## 9. WARRANTY & SUPPORT

Your Yatao YT01-RM Digital Camera comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting, or any inquiries, please visit the official Yatao website or contact their customer service team.