

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOMCOM](#) /

› [HOMCOM 4 Cu.Ft Mini Fridge with Freezer Instruction Manual - Model 800-256V80BK](#)

### HOMCOM 800-256V80BK

# HOMCOM 4 Cu.Ft Mini Fridge with Freezer Instruction Manual

Model: 800-256V80BK

## INTRODUCTION

---

Thank you for purchasing the HOMCOM 4 Cu.Ft Mini Fridge with Freezer. This manual provides important information regarding the installation, operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the refrigerator to ensure proper function and safety. Keep this manual for future reference.



This image shows the HOMCOM 4 Cu.Ft Mini Fridge with Freezer, black in color, positioned next to kitchen cabinets and a trash can, demonstrating its compact size and modern design.

## SAFETY INFORMATION

---

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the appliance.
- This appliance must be properly grounded. Connect only to properly grounded outlets.
- Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Unplug the refrigerator before cleaning or making any repairs.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **Child Safety:** Do not allow children to play with, operate, or crawl inside the refrigerator.

## SETUP AND INSTALLATION

---

### Unpacking

- Remove all packaging materials, including the foam base and adhesive tape.
- Inspect the refrigerator for any damage during transit. If damage is found, contact customer service immediately.
- Keep packaging materials away from children.

### Placement

- Place the refrigerator on a firm, level floor.
- Ensure there is adequate space around the unit for proper ventilation. Allow at least 4 inches (10 cm) of space at the back and sides for air circulation.
- Avoid placing the refrigerator in direct sunlight or near heat sources such as stoves, heaters, or radiators.
- The overall dimensions of the unit are approximately 17.9" W x 18.3" D x 45.1" H.



# COMPACT DESIGN

Only take up small footprint

The mini fridge is shown in a small kitchen area, demonstrating its compact design that occupies minimal floor space, making it suitable for various room sizes.

## Leveling the Refrigerator

Your refrigerator has two adjustable feet at the front. Adjust these feet to ensure the unit is stable and level on uneven floors. This helps to reduce vibrations and noise.



## ADJUSTABLE FOOT

Keeping this cooler unit stable on uneven floors

A detailed view of the adjustable foot at the bottom of the mini fridge, which helps in stabilizing the unit on uneven surfaces.

### Door Reversal

The refrigerator door is reversible, allowing it to open from either the left or right side. This feature provides flexibility for placement in various locations. Refer to the detailed instructions in the separate door reversal guide (if provided) or contact customer support for assistance with this procedure.

# REVERSIBLE DOOR

Door Opening Angle: 135°



The mini fridge is shown with both doors open wide at a 135-degree angle, illustrating the reversible door design which allows for flexible placement in various room layouts.

## Initial Operation

- After placing the refrigerator, allow it to stand upright for at least 2-4 hours before plugging it into a power outlet. This allows the refrigerant to settle.
- Plug the refrigerator into a dedicated, grounded electrical outlet.
- Set the thermostat to the desired cooling level (see Operating Instructions).
- Allow the unit to cool for several hours before placing food inside.

## OPERATING INSTRUCTIONS

### Temperature Control

The refrigerator features an adjustable thermostat with five levels to control the internal temperature. Rotate the thermostat dial located inside the refrigerator compartment to select your desired cooling level. A higher number typically indicates a colder setting.

- Freezer Temperature Range: -4°F to 10.4°F
- Refrigerator Temperature Range: 28.4°F to 50°F

# 5 LEVEL TEMPERATURE SETTING

Making your food always fresh



Freezer:  
-4 °F to 10.4 °F

Refrigerator:  
28.4 to 50°F

This image illustrates the temperature ranges for the freezer (-4°F to 10.4°F) and refrigerator (28.4°F to 50°F) sections, emphasizing the 5-level temperature setting for optimal food freshness.

## Storage Compartments

The refrigerator is designed with various storage options to organize your food and beverages efficiently:

- **Freezer Compartment:** Located at the top, this 0.96 Cu.Ft section is suitable for storing frozen items like ice cream, meat, and seafood.
- **Adjustable Glass Shelves:** The main refrigerator compartment (3.04 Cu.Ft) includes adjustable glass shelves that can be repositioned to accommodate items of different heights.
- **Door Racks:** Shelving on the inside of the door provides convenient storage for bottles, cans, and smaller items.
- **Crisper Drawer:** A dedicated crisper drawer is included for storing fruits and vegetables, helping to maintain their freshness.



## FREEZER



For ice cream,  
meat and sea food

## REFRIGERATOR



For fruit, vegetable,  
beverage, and egg

An interior view of the mini fridge with its doors open, highlighting the 0.96 Cu.Ft freezer compartment at the top and the 3.04 Cu.Ft refrigerator section below. Examples of food items like ice cream, meat, seafood, fruits, vegetables, beverages, and eggs are shown in their respective sections.



A close-up view of the mini fridge's interior, pointing out key features such as the interior light, adjustable glass shelves for customizable storage, a crisper drawer for produce, and convenient door racks for bottles and smaller items.

## MAINTENANCE

### Cleaning Your Refrigerator

- **Interior Cleaning:** Unplug the refrigerator before cleaning. Wash the interior with a solution of mild detergent and warm water. Dry thoroughly. Do not use abrasive cleaners or harsh chemicals.
- **Exterior Cleaning:** Clean the exterior surface with a soft cloth and mild soapy water. Wipe dry.
- **Door Gaskets:** Clean door gaskets regularly to ensure a proper seal.

### Defrosting the Freezer

This refrigerator features a manual defrost system for the freezer compartment. Frost buildup can reduce cooling efficiency. Defrost the freezer when the frost layer is approximately 1/4 inch (6 mm) thick.

1. Unplug the refrigerator from the power outlet.

2. Remove all food items from the freezer and refrigerator compartments. Store frozen items in another freezer or cooler to prevent thawing.
3. Leave the freezer door open to allow frost to melt naturally. You can place towels at the bottom to absorb water.
4. Do not use sharp objects or heating devices to remove frost, as this can damage the cooling system.
5. Once all frost has melted, clean and dry the interior of the freezer.
6. Plug the refrigerator back in and allow it to cool for a few hours before returning food items.

## TROUBLESHOOTING

---

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough.	Thermostat setting too warm; door opened too frequently; warm food placed inside; poor ventilation.	Adjust thermostat to a colder setting; minimize door openings; allow hot food to cool before storing; ensure adequate space around the unit.
Excessive noise.	Refrigerator not level; items vibrating inside; normal compressor operation.	Adjust leveling feet; rearrange items; some noise from compressor is normal.
Door does not close completely.	Food packages obstructing; door gasket dirty or damaged; refrigerator not level.	Rearrange items; clean or replace gasket; level the unit.

## SPECIFICATIONS

---

Detailed specifications for your HOMCOM Mini Fridge with Freezer:



This image provides the overall dimensions of the mini fridge: 17.9 inches width, 18.3 inches depth, and 45.1 inches height, presented on a white pedestal.

Feature	Specification
Brand	HOMCOM
Model Number	800-256V80BK
Overall Dimensions	17.9" W x 18.3" D x 45.1" H
Total Capacity	4 Cubic Feet
Refrigerator Fresh Food Capacity	3.04 Cubic Feet
Freezer Capacity	0.96 Cubic Feet
Item Weight	55 Pounds
Color	Black

Feature	Specification
Voltage	115 Volts
Wattage	75 Watts
Annual Energy Consumption	75 Watts
Installation Type	Freestanding
Number of Doors	2
Defrost System	Manual
Special Features	Adjustable Shelves, Reversible Door
Shelf Type	Glass
Crispers/Drawers	1
Included Components	Ice Box, Ice Shovel
Certification	UL

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or any questions regarding your HOMCOM 4 Cu.Ft Mini Fridge with Freezer, please refer to the warranty card included with your purchase or contact HOMCOM customer service directly. Please have your model number (800-256V80BK) and purchase date available when contacting support.