

Bellemave TH-00349-T-B

Bellemave Twin Over Twin Metal Bunk Bed Instruction Manual

Model: TH-00349-T-B

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Bellemave Twin Over Twin Metal Bunk Bed. Please read all instructions carefully before assembly and use. Keep this manual for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always ensure proper assembly to avoid instability.
- Be careful around sharp edges during assembly and use.
- The top bunk is not suitable for children under 6 years of age.
- Do not allow more than one person on the upper bunk.
- Prohibit jumping on the bed.
- Always use the ladder for entering and leaving the upper bunk.
- Ensure guardrails are securely in place on the upper bunk.
- Periodically check and ensure that all connections are tight.

SAFE AND REINFORCED GUARD RAIL

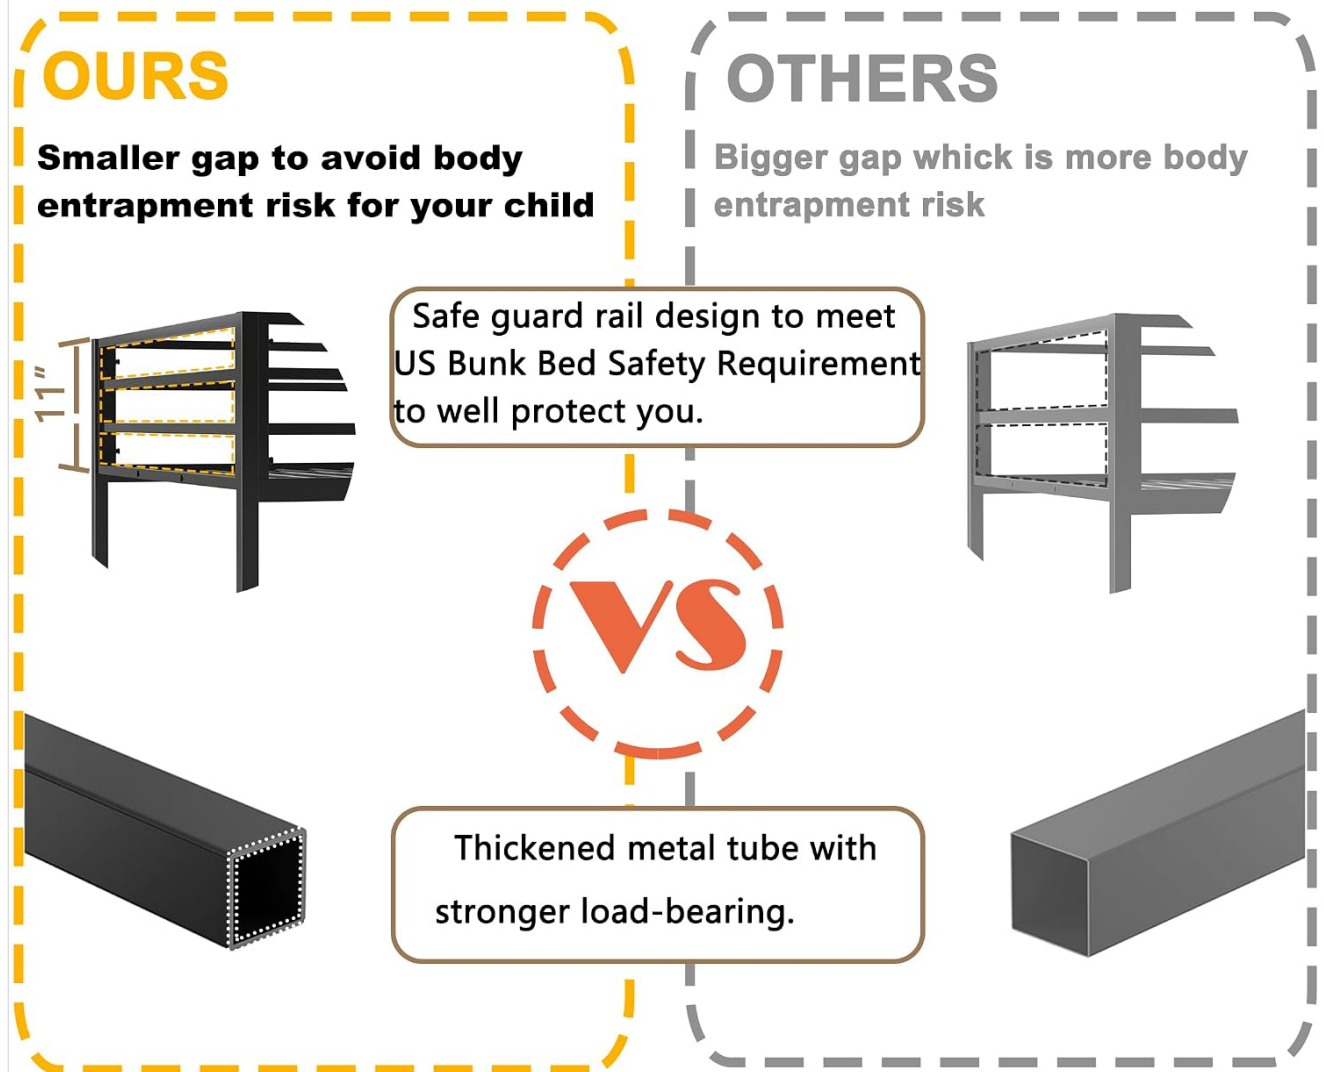


Image: The 11-inch full-length guardrail provides enhanced safety for the top bunk user.

3. COMPONENTS LIST

Before beginning assembly, verify that all parts are present and undamaged. Refer to the included hardware pack for specific component identification.



Image: Overview of the Bellemave Twin Over Twin Metal Bunk Bed.

4. SETUP AND ASSEMBLY

Follow these steps for assembling your bunk bed. It is recommended to have two adults for assembly.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Assemble the main frame according to the detailed diagrams in the separate assembly guide.
3. Attach the metal slats using the rapid embedded design. Ensure each slat is securely in place.
4. Install the guardrails on the upper bunk. Confirm they are firmly attached.
5. Attach the ladder to either side of the bed, based on your room layout.



Image: Detail of the easy assembly slats with a rapid embedded design for quick setup.



Image: The low profile design of the bunk bed facilitates easy climbing for users.

Your browser does not support the video tag.

Video: An overview of the Twin over Twin Bunk Beds, demonstrating its features and design.

Your browser does not support the video tag.

Video: A detailed look at the Black Twin Floor Bunk Beds, highlighting its construction and benefits.

5. OPERATING INSTRUCTIONS

To ensure safe and comfortable use of your bunk bed:

- **Mattress Placement:** Place a standard twin-size mattress on both the upper and lower bunks. A recommended mattress thickness is 6 inches.
- **Weight Capacity:** The upper bunk has a maximum weight capacity of 350 lbs. The lower bunk has a maximum weight capacity of 400 lbs. Do not exceed these limits.
- **Ladder Use:** Always use the integrated ladder for safe access to and from the upper bunk. The ladder can be installed on either the left or right side during assembly to suit your room's configuration.

- **Guardrails:** Ensure the 11-inch full-length guardrails on the top bunk are always in place and secure to prevent falls.

Fits 2 Standard Twin Mattresses

(not included)

**UPPER BUNK TWIN
SIZE 350LBS**

**LOWER BUNK
TWIN SIZE 400LBS**

NO BOXSPRING

**RECOMMENDED
MATTRESS THICKNESS**

Image: Key dimensions and weight capacities for the Bellemave Twin Over Twin Metal Bunk Bed.

6. MAINTENANCE

Regular maintenance will prolong the life and safety of your bunk bed.

- **Cleaning:** Wipe down metal surfaces with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- **Hardware Check:** Periodically inspect all bolts, screws, and connections to ensure they are tight. Re-tighten as necessary.
- **Noise Reduction:** The bed features an EVA center support beam designed to reduce squeaking. If any noise occurs, check the tightness of all connections and ensure the EVA beam is properly seated.

- **Floor Protection:** Non-marring foot pads are included to protect your floors and prevent squeaks. Ensure these are in place.



Easy to Assemble

Rapid Embedded Design

Image: Features contributing to the bunk bed's noise-free design and strong frame.

7. TROUBLESHOOTING

If you encounter any issues with your bunk bed, refer to the following common solutions:

- **Squeaking Noises:** Check all bolts and connections for tightness. Ensure the EVA center support beam is correctly positioned. Loose connections are the most common cause of squeaking.
- **Instability/Wobbling:** Verify that all assembly steps have been completed correctly and all hardware is fully tightened. Ensure the bed is placed on a flat, level surface.
- **Ladder Feels Loose:** Re-tighten the bolts securing the ladder to the bed frame.

8. SPECIFICATIONS

Feature	Detail
Model Number	TH-00349-T-B
Size	Twin over Twin
Material	Metal
Product Dimensions (L x W x H)	76.69" x 40.94" x 54.09"
Style	Industrial
Color	Black Floor
Upper Bunk Weight Capacity	350 lbs
Lower Bunk Weight Capacity	400 lbs
Recommended Mattress Thickness	6 inches
Box Spring Required	No
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided at the point of purchase or visit the official Bellemave website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

