

## kaitol KAF06

# User Manual

## KAITOL 12QT DUAL LAYER AIR FRYER OVEN

Model: KAF06

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a dual basket air fryer as they may create a fire or risk of electric shock.
- A fire may occur if the air fryer is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation. Do not place any items on top of the appliance when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of

electric shock.

- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than manufacturer's recommended accessories, in this air fryer when not in use.
- Do not place any of the following materials in the air fryer: paper, cardboard, plastic, or similar materials.
- Do not cover the air vents while the appliance is in operation.

## PRODUCT OVERVIEW

---

The Kaitoi 12QT Dual Layer Air Fryer Oven features a unique vertical 2-basket design, allowing for simultaneous cooking of different foods. It combines an intuitive LED touchscreen with a rotary knob for precise control over various cooking functions.

### Components

- Main Unit with Control Panel
- Upper 6QT Air Fryer Basket
- Lower 6QT Air Fryer Basket
- Non-stick Crisper Plates (2 included)
- Power Cord



**Figure 1:** Front view of the Kaitoi 12QT Dual Layer Air Fryer Oven with both cooking baskets partially extended. The top basket contains french fries, and the bottom basket holds a roasted chicken, demonstrating the dual cooking capability.

# STACKED BASKETS

## COOK **2-4** FOODS AT ONCE

Double the space, zero flavor mixing

Upper  
Air Fryer  
Basket

**6QT**

Lower  
Air Fryer  
Basket

**6QT**



Figure 2: Illustration highlighting the two independent 6-quart air fryer baskets. The image labels the "Upper Air Fryer Basket 6QT" and "Lower Air Fryer Basket 6QT", emphasizing the vertical stacking design for increased capacity.

### BEFORE FIRST USE

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the appliance.
2. **Clean Components:** Wash the removable baskets and crisper plates with warm, soapy water. Rinse thoroughly and dry completely. The baskets and crisper plates are dishwasher safe.

3. **Wipe Main Unit:** Wipe the exterior of the main unit with a clean, damp cloth. Do not immerse the main unit in water.
4. **Initial Run (Optional):** It is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor may be present, which is normal and will dissipate. Ensure good ventilation during this process.

## SETUP

---

1. **Placement:** Place the air fryer on a stable, level, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space on all sides and above the appliance to allow for proper air circulation. Do not place it directly under cabinets.
2. **Insert Crisper Plates:** Place the crisper plates into the bottom of each air fryer basket.
3. **Insert Baskets:** Slide the air fryer baskets firmly into the main unit until they click into place.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The control panel will illuminate.



## SPACE-SAVING DESIGN

Cook double the food in nearly half the space

**Figure 3:** The Kaito 12QT Dual Layer Air Fryer Oven positioned on a kitchen countertop, illustrating its compact, vertical design that saves counter space. Ensure adequate clearance around the unit for ventilation.

### OPERATING INSTRUCTIONS

The Kaito 12QT Dual Layer Air Fryer Oven features a user-friendly control panel with both a touchscreen and a rotary knob for precise adjustments.

#### Control Panel Overview



**Figure 4:** Detailed view of the air fryer's control panel. It displays the digital timer and temperature settings, along with touch buttons for functions like Air Fry, Broil, Bake, Reheat, Dehydrate, and Roast, and a central rotary knob for fine-tuning settings.

- **LED Touchscreen:** Displays time, temperature, and selected functions.
- **Rotary Knob:** Used to adjust time and temperature settings.
- **Function Buttons:** Dedicated buttons for Air Fry, Broil, Roast, Bake, Reheat, Dehydrate, and Fries.
- **Power Button:** Turns the unit on/off.
- **Basket Select Button (1/2):** Toggles between controlling Basket 1 (Upper) and Basket 2 (Lower).
- **SYNC Button:** Synchronizes the finish time for both baskets when cooking different items.
- **MATCH Button:** Applies the same cooking settings to both baskets.

## Basic Operation

1. **Prepare Food:** Place ingredients into the air fryer basket(s) on top of the crisper plate. Do not overfill.
2. **Select Basket:** Press the "1" or "2" button to select the basket you wish to program.
3. **Choose Function:** Press the desired cooking function button (e.g., Air Fry, Roast). The default time and temperature for that function will appear.
4. **Adjust Settings:** Use the rotary knob to adjust the time and temperature as needed. Temperature can be set up to 450°F (230°C).
5. **Start Cooking:** Press the Start/Pause button to begin cooking.
6. **Monitor Cooking:** You can pull out the baskets during cooking to shake or check food. The unit will pause automatically and resume when the basket is reinserted.
7. **End of Cooking:** The unit will beep when cooking is complete. Carefully remove the baskets.

## Advanced Functions

### Match Cook

Use the Match Cook function to apply the exact same cooking settings (time and temperature) to both baskets simultaneously. This is ideal when cooking a large quantity of the same food.

1. Prepare food and place in both baskets.
2. Select Basket 1. Choose desired function, time, and temperature.
3. Press the **MATCH** button. The settings from Basket 1 will be copied to Basket 2.
4. Press Start/Pause to begin cooking.

### Smart Finish (SYNC)

The Smart Finish function allows you to cook two different foods with different settings, ensuring they both finish cooking at the same time. The air fryer will automatically adjust the start time for the basket that requires less cooking time.

1. Prepare food and place in both baskets.
2. Select Basket 1. Choose desired function, time, and temperature for Basket 1.
3. Select Basket 2. Choose desired function, time, and temperature for Basket 2.
4. Press the **SYNC** button. The display will show "SYNC" and indicate which basket will start first.
5. Press Start/Pause to begin cooking.

## FEED EVERY NEED WITH ONE DEVICE



WHISPER QUIET

**Figure 5:** This image explains the "Match Cook" and "Smart Finish" features. "Match Cook" allows identical settings for both baskets, perfect for cooking larger quantities of the same food. "Smart Finish" synchronizes the cooking end times for different foods in each basket, ensuring everything is ready simultaneously.

## Cooking Functions

The Kaito! 12QT Dual Layer Air Fryer Oven offers 7 versatile cooking functions:

- **Air Fry:** Ideal for crispy results with little to no oil. Perfect for fries, chicken wings, and nuggets.
- **Broil:** Uses direct top heat for browning and crisping.
- **Roast:** For cooking meats and vegetables to tender perfection.
- **Bake:** Suitable for cakes, pastries, and other baked goods.
- **Reheat:** Quickly warms up leftovers while maintaining texture.
- **Dehydrate:** Removes moisture from food for snacks like fruit chips or jerky.
- **Fries:** A dedicated preset for optimal french fry cooking.



**Figure 6:** A collage demonstrating the versatility of the air fryer, showcasing foods prepared using its various functions: Air Fry (crispy fries), Bake (golden rolls), Broil (charred corn), Roast (whole chicken), Reheat (pizza slice), and Dehydrate (dried orange slices).


## CLEANING AND MAINTENANCE

Regular cleaning of your Kaitol Air Fryer Oven will ensure optimal performance and extend its lifespan.

### Daily Cleaning

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

2. **Clean Baskets and Crisper Plates:** The removable baskets and crisper plates are non-stick coated and BPA-free. They are dishwasher safe for easy cleaning. Alternatively, wash them with warm, soapy water using a non-abrasive sponge. Rinse and dry thoroughly.
3. **Wipe Exterior:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild dish soap solution.

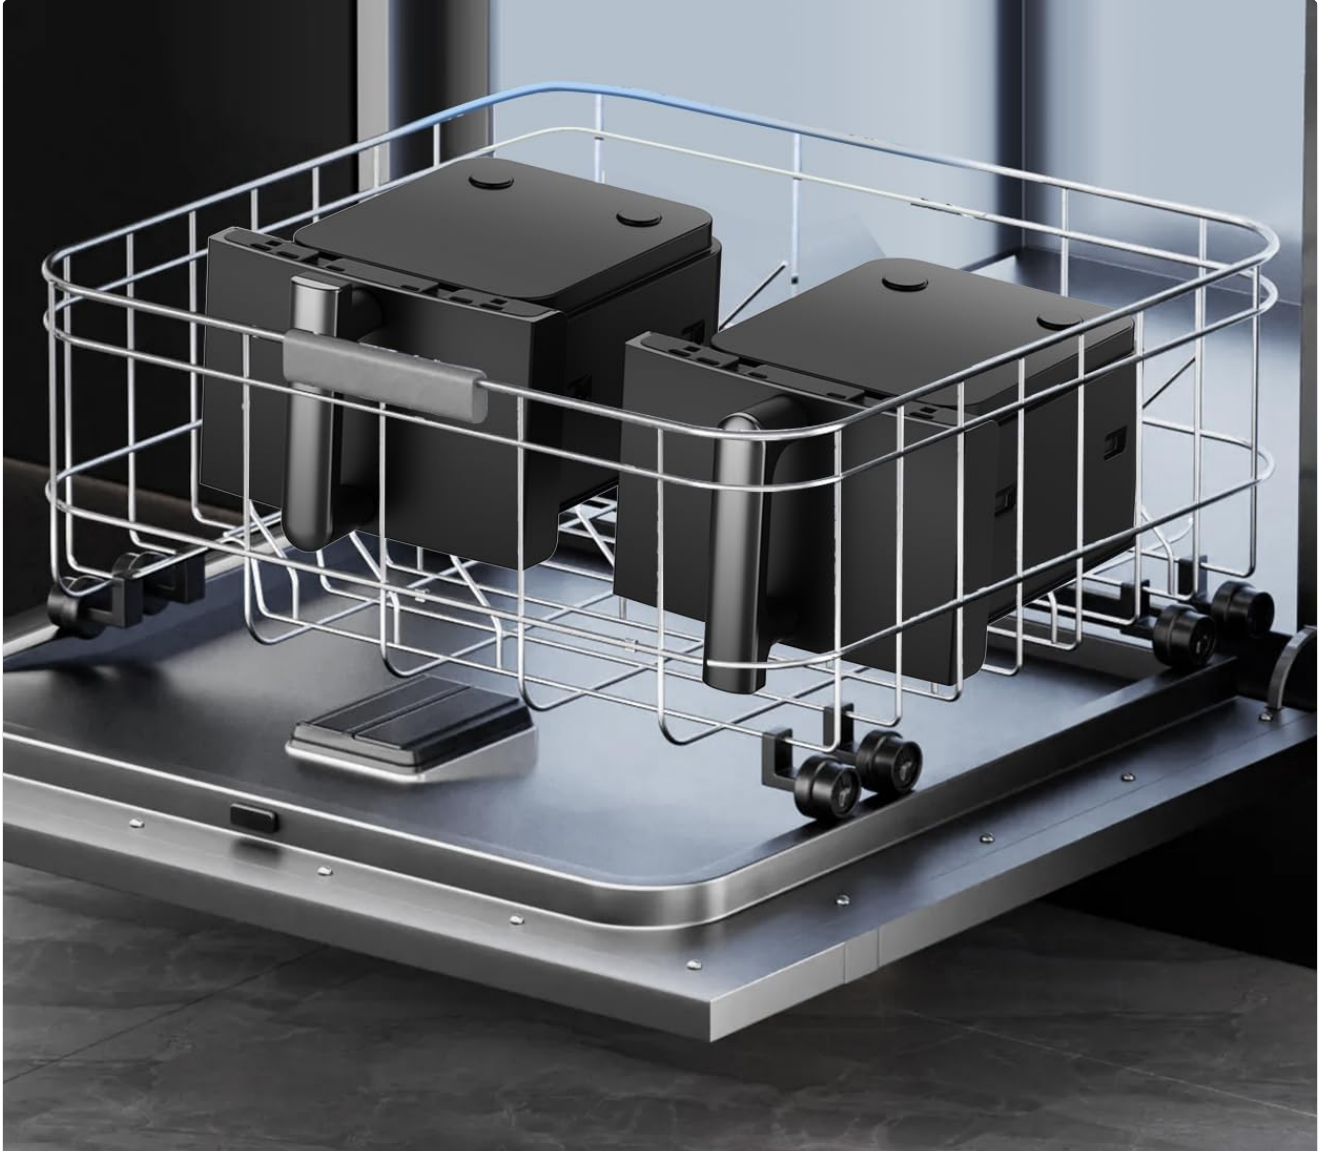

## Easy to Clean

Baskets, and Crisper Plates are dishwasher safe for easy cleanup.

**Figure 7:** The air fryer baskets and crisper plates are shown being loaded into a dishwasher, highlighting their dishwasher-safe design for convenient and easy cleanup after use.

### Storage

Ensure the appliance is clean and completely dry before storing. Store the air fryer in a cool, dry place, away from direct sunlight and out of reach of children.

## TROUBLESHOOTING

If you encounter any issues with your Kaitol 12QT Dual Layer Air Fryer Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Basket not fully inserted.	Ensure the power cord is securely plugged into a grounded outlet. Check the circuit breaker. Push the basket(s) firmly until they click into place.
Food is not cooked evenly.	Baskets are overcrowded; Food not shaken/flipped.	Do not overcrowd the baskets; cook in smaller batches if necessary. Shake or flip food halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean the baskets and crisper plates thoroughly after each use. For fatty foods, consider using parchment paper liners or draining excess fat during cooking.
Food is not crispy.	Too much moisture; Not enough oil (for certain foods); Temperature too low or time too short.	Pat food dry before air frying. Lightly spray or toss food with oil for crispier results. Increase temperature or cooking time as needed.
Unit smells during first use.	Manufacturing residues burning off.	This is normal. Ensure good ventilation. The smell will dissipate after a few uses.

## SPECIFICATIONS

<b>Brand</b>	Kaitol
<b>Model Name</b>	KAF06 Air Fryer
<b>Capacity</b>	12 Quarts (6QT x 2 Baskets)
<b>Product Dimensions</b>	7"D x 7"W x 7"H (Note: Customer review indicates actual height may be closer to 17.5 inches)
<b>Item Weight</b>	19.71 pounds
<b>Wattage</b>	1800 watts (Output Wattage: 2500 Watts)
<b>Voltage</b>	110 Volts
<b>Min Temperature Setting</b>	100 Degrees Fahrenheit
<b>Max Temperature Setting</b>	450 Degrees Fahrenheit
<b>Material</b>	Aluminum (with Nonstick Coating)

<b>Special Features</b>	Broil, Bake, Roast, Dehydrate, Vertical Air Fryer, BPA-Free, Nonstick, Family Size
-------------------------	--

## WARRANTY AND SUPPORT

---

For warranty information, product support, or to inquire about replacement parts, please contact Kaitol customer service. Refer to the product packaging or the official Kaitol website for the most up-to-date contact details.

**Online Support:** Visit the official Kaitol store on Amazon: [KAITOL Store](#)

---