

DUSONLAP E6

DUSONLAP E6 Open Ear Earbuds User Manual

Model: E6

INTRODUCTION

Thank you for choosing DUSONLAP E6 Open Ear Earbuds. These earbuds are designed to provide a comfortable and immersive audio experience while allowing you to stay aware of your surroundings. This manual will guide you through the setup, operation, and maintenance of your new earbuds.



The DUSONLAP E6 Open Ear Earbuds in Dark Blue, shown with their charging case.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before using this product to ensure safe and proper operation.

- Do not expose the earbuds or charging case to extreme temperatures, humidity, or corrosive substances.
- Avoid dropping, impacting, or disassembling the device.
- Keep out of reach of children and pets.
- Do not use the earbuds at excessively high volumes for prolonged periods to prevent hearing damage.
- Be aware of your surroundings when using the earbuds, especially in traffic or hazardous environments.
- Dispose of batteries and electronic components responsibly according to local regulations.

WHAT'S IN THE Box

Verify that all items are present in your package:

- Open-ear headphones x2 (Left & Right)
- Quick charging case x1
- USB-C fast charging cable x1
- User Manual x1



The complete package contents of the DUSONLAP E6 Open Ear Earbuds.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

- Place the earbuds into the charging case. Ensure they are correctly seated.
- Connect the USB-C fast charging cable to the charging port on the case and plug the other end into a USB power source (e.g., computer, wall adapter).
- The LED indicator on the case will show charging status. A full charge provides up to 8 hours of playtime for the earbuds and up to 32 hours with the charging case.



Up to 32H Long Playtime

8  Hrs
Single Charge

32  Hrs
With Charging Case

The charging case indicates battery life and total playtime.

2. Pairing with Your Device (Bluetooth 5.4)

The earbuds utilize Bluetooth 5.4 for fast and stable connections.

1. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light.
2. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
3. Search for available devices and select "DUSONLAP E6" from the list.
4. Once connected, the LED indicator on the earbuds will stop flashing.
5. The earbuds will automatically reconnect to the last paired device when taken out of the case.


Bluetooth 5.4 & Superior Call Clarity

① Bluetooth 5.4 Enhanced

Bluetooth 5.4 – Faster Data Transfer, Reliable Performance.

② 14.2mm Dynamic Drivers

Crystal-Clear Sound – Elevate Your Listening.

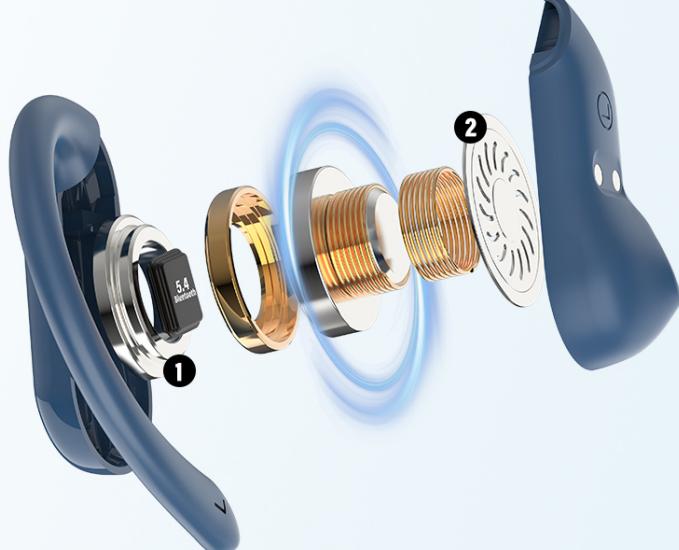

The DUSONLAP E6 features Bluetooth 5.4 for enhanced connectivity and 14.2mm dynamic drivers for clear sound.



Wide Compatibility

Whether it is iOS or various Android smartphones and tablets, laptops, etc, you can easily pair them for a fast and stable connection

The DUSONLAP E6 earbuds are compatible with a wide range of Bluetooth-enabled devices.

3. How to Wear

For optimal comfort and sound quality, follow these steps to properly wear your earbuds:

1. **Step 1:** Simply remove the headphones from the charging case.
2. **Step 2:** Hang the headphones on your ear bone for a perfect fit.
3. **Step 3:** Turn the earphones and slide it behind the ear.
4. **Step 4:** Adjust the ear hook, wear, and pull down the ear hook for a secure fit.

How to wear?

Step 1



Simply remove the headphones

Step 2



Hang the headphones on your ear bone for a perfect fit.

Step 3



Turn the earphones and slide it behind the ear.

Step 4




Adjust ear hook, wear and pulldown ear hook for secure fit.

Visual guide for wearing the DUSONLAP E6 earbuds securely and comfortably.

OPERATING INSTRUCTIONS

The DUSONLAP E6 earbuds feature smart touch controls for easy management of your audio and calls.

Smart Touch Control

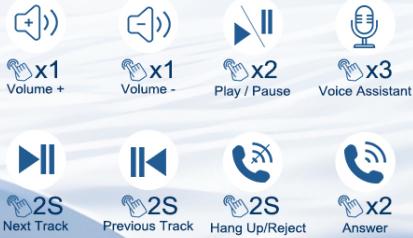

Detailed touch control functions for the DUSONLAP E6 earbuds.

Touch Control Functions

Action	Function
Single Tap (x1)	Volume + (Right Earbud), Volume - (Left Earbud)
Double Tap (x2)	Play / Pause
Triple Tap (x3)	Activate Voice Assistant
Long Press (2S)	Next Track (Right Earbud), Previous Track (Left Earbud)
Long Press (2S) during call	Hang Up / Reject Call
Double Tap (x2) during call	Answer Call

MAINTENANCE

Cleaning

Regular cleaning helps maintain the performance and longevity of your earbuds.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive materials.
- Ensure charging contacts on both earbuds and case are clean and free of debris.

Storage

When not in use, store your earbuds in their charging case to protect them and keep them charged.

- Store in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the earbuds and case periodically to maintain battery health.

IPX7 Water-Resistant

Resistant to rain and sweat, perfect for intense workouts and outdoor activities.



The DUSONLAP E6 earbuds are IPX7 water-resistant, making them suitable for workouts and outdoor activities.

TROUBLESHOOTING

If you encounter issues with your DUSONLAP E6 earbuds, try the following solutions:

Common Issues and Solutions

Problem	Possible Cause	Solution
Earbuds not turning on	Low battery	Place earbuds in the charging case and charge fully.
Cannot pair with device	Bluetooth off, earbuds not in pairing mode, interference	Ensure Bluetooth is on your device. Open case to enter pairing mode. Move closer to device. Forget device and re-pair.
No sound or low volume	Volume too low, earbuds not connected, dirty contacts	Increase volume on both earbuds and device. Reconnect earbuds. Clean charging contacts.
Earbuds disconnect frequently	Out of range, interference, low battery	Stay within 15 meters of your device. Avoid strong electromagnetic interference. Charge earbuds.
Touch controls not responding	Temporary software glitch, dirty sensor	Restart earbuds by placing them in the case and taking them out. Clean the touch sensor area.

SPECIFICATIONS

DUSONLAP E6 Technical Specifications

Feature	Detail
Model Name	E6
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 5.4

Feature	Detail
Bluetooth Range	Up to 15 Meters
Control Type	Touch Control
Water Resistance Level	IPX7 Waterproof
Frequency Range	20 Hz - 20,000 Hz
Battery Life (Single Charge)	8 Hours
Total Playtime (with Charging Case)	Up to 32 Hours
Audio Driver Type	Dynamic Driver
Earpiece Shape	Ear Hook
Item Weight	4.2 ounces
Manufacturer	DUSONLAP

WARRANTY AND SUPPORT

DUSONLAP E6 Open Ear Earbuds come with a **Two-year warranty** from the date of purchase, covering manufacturing defects.

For technical support, warranty claims, or any questions regarding your product, please contact DUSONLAP customer service through the retailer's platform or visit the official DUSONLAP website for contact information.

Why choose DUSONLAP E6?

- ① Open design
- ② Flexible and skin-friendly material
- ③ Ultra-light design
- ④ 24-hour customer service
- ⑤ Two-year warranty



Key benefits of choosing DUSONLAP E6, including the two-year warranty.