



[Manuals.plus](#) /

› [EROMMY](#) /

› EROMMY Double Tilt Out Trash Can Cabinet Instruction Manual

EROMMY Kitchen Trash Can-BK

EROMMY Double Tilt Out Trash Can Cabinet Instruction Manual

Brand: EROMMY | **Model:** Kitchen Trash Can-BK

1. INTRODUCTION

Thank you for choosing the EROMMY Double Tilt Out Trash Can Cabinet. This versatile and functional cabinet is designed to enhance your kitchen, living room, or bathroom by providing a discreet and odor-free solution for waste management and storage. Featuring a built-in negative ion generator for deodorizing, smooth-rolling wheels for easy mobility, and ample storage space, this cabinet is a practical addition to any home. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your product.



Figure 1.1: The EROMMY Double Tilt Out Trash Can Cabinet in a kitchen environment, showcasing its design and functionality.

2. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure all parts are present and undamaged before beginning assembly. Do not use if any parts are missing or broken.
- Assemble the cabinet on a soft, clean surface to prevent scratches.
- Follow the assembly steps precisely. Incorrect assembly may lead to instability or damage.
- Do not overload the cabinet or drawers. Adhere to recommended weight limits.
- Keep small parts and packaging materials away from children and pets to prevent choking hazards.
- Use the locking casters to secure the cabinet in place when not moving it to prevent accidental movement.
- Avoid exposing the cabinet to excessive moisture or direct sunlight, which can damage the wood material.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Cabinet Panels (various sizes)
- 2 x Drawers (components for assembly)
- 4 x Wheels (casters)
- Hardware Pack (screws, dowels, cam locks, handles, hinges, etc.)
- Instruction Manual



Figure 3.1: An illustration detailing the various components and hardware included in the package for assembly.

4. ASSEMBLY

The EROMMY Double Tilt Out Trash Can Cabinet is designed for straightforward DIY setup. All necessary hardware and clear instructions are included. Please follow the step-by-step guide provided in the physical manual that came with your product for precise assembly. Below are general guidelines:

1. **Unpack and Identify Parts:** Lay out all panels and hardware. Compare them with the parts list in your manual to ensure everything is accounted for.
2. **Assemble the Base:** Attach the casters to the bottom panel of the cabinet. Ensure they are securely fastened.
3. **Construct the Side Panels:** Connect the side panels to the base and back panel using the provided hardware.
4. **Install Internal Supports:** Insert any internal shelves or dividers as indicated in the manual.
5. **Assemble Drawers:** Put together the two large capacity drawers. Install drawer slides onto the cabinet frame.
6. **Attach Tilt-Out Doors:** Secure the tilt-out doors using the hinges. Ensure they open and close smoothly.
7. **Install Handles:** Attach the handles to the drawers and tilt-out doors.
8. **Place Top Panel:** Secure the top panel to complete the cabinet structure.

Note: Some steps, particularly hinge installation, may require careful attention to detail. Refer to the specific diagrams in your manual for correct orientation and placement.



Figure 4.1: Product dimensions and internal bin capacity details, useful for planning placement and bin selection.

5. SETUP

Once assembled, follow these steps for initial setup:

- **Placement:** Position the cabinet in your desired location (kitchen, living room, laundry room, dining room). Its compact size (39.4" L x 12.9" W x 38.2" H) allows it to fit seamlessly.
- **Insert Trash Bins:** The left side accommodates a 10-gallon trash bin, and the right side accommodates a 9-gallon trash bin. Ensure bins fit properly within the tilt-out compartments. (*Note: Trash bins are not included.*)
- **Activate Deodorizing Function:** Locate the control panel for the negative ion generator. Press the ON/OFF button to activate the deodorizing function. Refer to the operating section for detailed instructions on modes and settings.
- **Lock Casters:** If the cabinet is in its final position and you do not intend to move it frequently, engage the locks on the casters to prevent accidental rolling and ensure stability.

6. OPERATING INSTRUCTIONS

6.1. Tilt-Out Trash Bins

To access the trash bins, simply pull the handle on the front of the tilt-out door. The door will pivot forward, allowing easy access to the bin for waste disposal or removal. Push the door back into place to conceal the bin and maintain a tidy appearance.

6.2. Deodorizing Function (Negative Ion Generator)

The cabinet features a built-in negative ion generator to help remove odors, formaldehyde, and purify the air around the trash bins, ensuring a fresh environment.

- **Power ON/OFF:** Press the power button on the control panel to turn the deodorizing function on or off.
- **Operation Modes:** In ON mode, press the mode button to select from P1, P2, P3, P4 operation modes. These modes may vary in intensity or duration.
- **Speed/Timer Setting:** Press the speed button to adjust the system default mode (e.g., O5) or set a minute countdown (e.g., 15, 30, 60 minutes).



Easy-to-Clean



Ample Storage Space



Casters for Mobility with Brakes

Figure 6.1: Detail of the upgraded air sanitizer control panel and its odor removal and air purification capabilities.

6.3. Hideaway Drawers

The two top drawers provide ample storage space for kitchen supplies, pet food, or other household items. Simply pull the handles to open and push to close.

6.4. Mobility and Stability

The cabinet is equipped with smooth-rolling casters for easy movement. To move the cabinet, unlock the casters. To secure it in place, engage the locks on the casters. This feature allows you to effortlessly move it between rooms or for cleaning purposes.



**Multifunctional
Trash Cabinet**



Pet-proof Tilting Out



Conceal Trash



Cover Smell

Figure 6.2: Key features including the easy-to-clean surface, spacious drawers, and lockable casters for mobility.



Living Room



Dining Room



Laundry Room



Kitchen

Figure 6.3: The cabinet's multifunctional design, including pet-proof features and effective trash concealment and odor control.

7. MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your EROMMY cabinet.

- **Cleaning:** The cabinet is made from materials resistant to stains. Wipe surfaces with a soft, damp cloth. For tougher spots, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Spills:** Promptly wipe up any spills to prevent water damage or staining, especially on the wooden surfaces.
- **Deodorizer Maintenance:** Periodically check the negative ion generator for any dust buildup and clean gently with a dry cloth if necessary.
- **Hardware:** Occasionally check all screws and fasteners to ensure they remain tight. Tighten if necessary to maintain structural integrity.
- **Casters:** Keep the wheels free of debris to ensure smooth mobility.

8. TROUBLESHOOTING

If you encounter any issues with your EROMMY Double Tilt Out Trash Can Cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Loose fasteners; uneven floor; casters not locked.	Ensure all screws and connections are tightened. Move to a level surface. Lock the casters.
Tilt-out door does not close properly.	Hinges misaligned; obstruction; bin not seated correctly.	Check hinge alignment and adjust if needed. Remove any obstructions. Ensure the trash bin is fully seated inside.
Deodorizing function not working.	Not powered on; incorrect mode selected.	Press the ON/OFF button. Cycle through the operation modes (P1-P4) to ensure one is active.
Drawers are stiff or difficult to open/close.	Drawer slides need lubrication; debris in slides; drawer overloaded.	Apply a silicone-based lubricant to the drawer slides. Clean any debris from the slides. Reduce the weight in the drawer.
Cabinet makes noise when moving.	Debris in casters; casters need lubrication.	Clean any hair or debris from the caster wheels. Apply a small amount of lubricant to the caster axles.

9. SPECIFICATIONS

Key technical specifications for the EROMMY Double Tilt Out Trash Can Cabinet:

- **Product Dimensions:** 12.9 x 39.4 x 38.2 inches (L x W x H)
- **Item Model Number:** Kitchen Trash Can-BK
- **Brand:** EROMMY
- **Capacity:** 19 Gallons (10-gallon bin + 9-gallon bin)
- **Color:** Black
- **Opening Mechanism:** Pull-Out (Tilt-Out)
- **Material:** Wood
- **Recommended Uses:** Kitchen Island, Kitchen, Laundry Room, Living Room, Dining Room
- **Special Feature:** Lockable Casters, Deodorizing Function (Negative Ion Generator)
- **Shape:** Rectangular
- **Finish Type:** Powder Coated

10. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official EROMMY website. EROMMY is committed to providing high-quality products and customer satisfaction.

EROMMY Official Store: [Visit the EROMMY Store on Amazon](#)

If you require further assistance or have questions not covered in this manual, please contact EROMMY customer service through their official channels.

