

Bergner BG-51027-BK

Bergner XTRA 0.57L 300W Travel Blender User Manual

Model: BG-51027-BK

INTRODUCTION

Thank you for purchasing the Bergner XTRA Travel Blender. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate the blender with the lid in place.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Bergner XTRA Travel Blender:

- Motor Base (300W)
- Blade Assembly with 4 Stainless Steel Blades
- Portable Blending Bottle (0.57L capacity)
- Anti-slip Silicone Band
- Drinking Lid with Foldable Hook





Image: The Bergner XTRA Travel Blender fully assembled, showing the motor base, blending bottle, and lid.



Image: Close-up of the four-blade stainless steel assembly, designed for efficient blending.





Image: The 0.57L portable blending bottle with its anti-slip silicone band and drinking lid, featuring a foldable hook.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the blending bottle, blade assembly, and lid with warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
3. **Assemble:**
 - Ensure the motor base is unplugged.
 - Place the ingredients into the blending bottle. Do not overfill beyond the maximum fill line (if indicated).
 - Screw the blade assembly firmly onto the open end of the blending bottle. Ensure it is tightly

sealed to prevent leaks.

- Invert the bottle so the blade assembly is facing down, and align it with the motor base.
- Place the assembled bottle onto the motor base and twist clockwise until it locks securely into place.

OPERATING INSTRUCTIONS

The Bergner XTRA Travel Blender features simple one-touch operation.

1. **Prepare Ingredients:** Cut fruits, vegetables, and other ingredients into small pieces (approximately 1-2 cm) to ensure optimal blending. Add liquid (water, milk, juice) to facilitate blending.
2. **Load Bottle:** Place prepared ingredients into the 0.57L blending bottle. Do not exceed the maximum fill line.
3. **Attach Blade:** Screw the blade assembly securely onto the blending bottle.
4. **Mount on Base:** Invert the bottle and place it onto the motor base, twisting clockwise until it clicks into position.
5. **Plug In:** Connect the power cord to a standard 220V-240V AC outlet.
6. **Blend:** Press and hold the power button on the motor base to start blending. Blend for short intervals (e.g., 30-60 seconds) to achieve desired consistency. Release the button to stop. For tougher ingredients, use pulse blending by pressing and releasing the button repeatedly.
7. **Remove Bottle:** Once blending is complete, release the power button, unplug the blender, and twist the bottle counter-clockwise to remove it from the motor base.
8. **Enjoy:** Unscrew the blade assembly and replace it with the drinking lid. Your smoothie is ready to go!



Image: A hand pressing the illuminated power button on the blender's motor base to initiate blending.



Image: A freshly blended green smoothie in the portable bottle, with the drinking lid open and ready for consumption.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your blender.

1. **Unplug:** Always unplug the blender from the power outlet before cleaning.
2. **Disassemble:** Separate the blending bottle, blade assembly, and lid from the motor base.
3. **Wash Components:**
 - Wash the blending bottle, blade assembly, and lid in warm, soapy water. Use a brush to clean around the blades carefully. **Caution: Blades are sharp.**
 - Rinse all parts thoroughly under running water.
 - These parts are generally dishwasher-safe (top rack recommended), but hand washing is preferred for blade longevity.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing. Store the blender in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; bottle not securely attached; power outage.	Ensure power cord is firmly plugged into a working outlet. Twist bottle clockwise until it locks into the motor base. Check household circuit breaker.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use pulse blending.
Blender stops during operation.	Overheating (thermal protection activated); motor overload.	Unplug the blender and let it cool down for at least 15 minutes. Reduce ingredients and/or add more liquid before restarting.
Leakage from the bottle.	Blade assembly not tightened properly; bottle overfilled.	Ensure the blade assembly is screwed on tightly. Do not fill ingredients past the maximum fill line.

SPECIFICATIONS

Feature	Detail
Brand	Bergner
Model Number	BG-51027-BK
Power	300W
Voltage	AC 220V-240V, 50/60Hz
Capacity	0.57 Liters (570ml)
Blades	4 Stainless Steel Blades
Operation	One-touch blending
Special Features	Anti-slip silicone band, drinking spout, foldable hook on lid
Dimensions (L x W x H)	23 x 24 x 14 cm
Weight	1.5 kg
Material	Stainless Steel, Plastic

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Bergner website or contact your retailer. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the [Bergner Store on Amazon](#).

