

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SimpliSafe](#) /

› [SimpliSafe 6-Piece Wireless Home Security System User Manual](#)

**SimpliSafe KT071-01RUS**

# SimpliSafe 6-Piece Wireless Home Security System User Manual

Model: KT071-01RUS

## INTRODUCTION

---

Welcome to the SimpliSafe 6-Piece Wireless Home Security System. This manual provides essential information for setting up, operating, and maintaining your security system. Designed for ease of use and robust protection, your SimpliSafe system offers advanced security solutions to keep your home safe and secure.

The system is simple to set up and seriously secure, ready to protect right out of the box. With optional professional monitoring services, agents are ready to instantly alert emergency responders when you need it most, all without long-term contracts or hidden fees.



Figure 1: Overview of the SimpliSafe 6-Piece Wireless Home Security System components.

## INCLUDED COMPONENTS

Your SimpliSafe 6-Piece Wireless Home Security System includes the following:

- **Base Station:** The central hub of your security system.
- **Keypad:** For arming, disarming, and system control.
- **Entry Sensors (x3):** To protect doors, windows, and cabinets.
- **Outdoor Camera Series 2:** For outdoor surveillance with advanced features.
- **Power Cables:** For the Outdoor Camera Series 2.
- **Key Fob:** For convenient arming and disarming.



Figure 2: All components included in the SimpliSafe 6-Piece Wireless Home Security System.

## SETUP

Setting up your SimpliSafe system is designed to be quick and straightforward, requiring no drilling or special tools. Follow these steps to get your system up and running:

- 1. Power On the Base Station:** Plug in your Base Station. It is the brain of the system and will guide you through the initial setup process. Place it in a central location in your home for optimal signal coverage.

# Protects an entire room

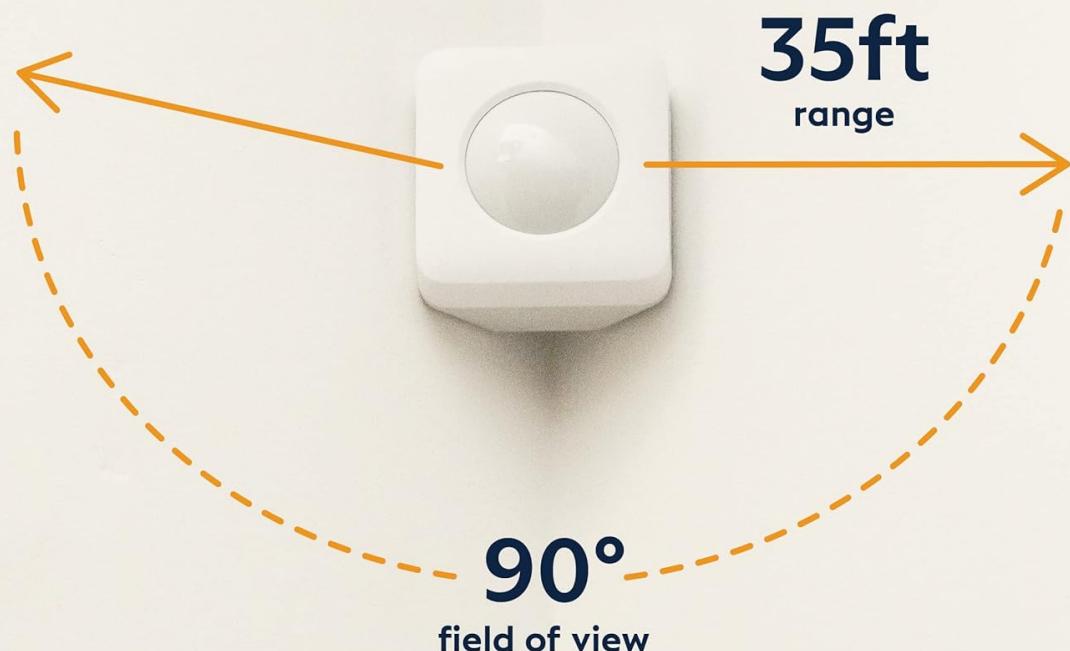


Figure 3: Plug in the Base Station to power it on.

2. **Install the Keypad:** Place the Keypad near an entrance you use every day. It features a wire-free design and lights up when needed.



**AI-powered  
motion detection  
alerts you to threats**

Figure 4: The Keypad provides easy access to arm and disarm your system.

3. **Place Entry Sensors:** Install the Entry Sensors on your doors, windows, or cabinets. These sensors alert you the instant they are opened.

**Works with any kind of door, window or cabinet and alerts you the instant it's opened**

Can be customized to send silent alerts



Figure 5: Entry Sensors can be customized to send silent alerts.

4. **Install Outdoor Camera:** Position the Outdoor Camera Series 2 to monitor key outdoor areas. It offers a 140-degree field of view, 1080p HD resolution, and color night vision. It can be installed wirelessly with its rechargeable battery or wired using the included power cables.

# Professional monitoring agents keep your home safe 24/7

We get help to your home fast when you need it most. Authorities dispatched\* include:



**Police**



**Fire department**



**Emergency  
medical care**

\*Requires a subscription to 24/7 Professional Monitoring.

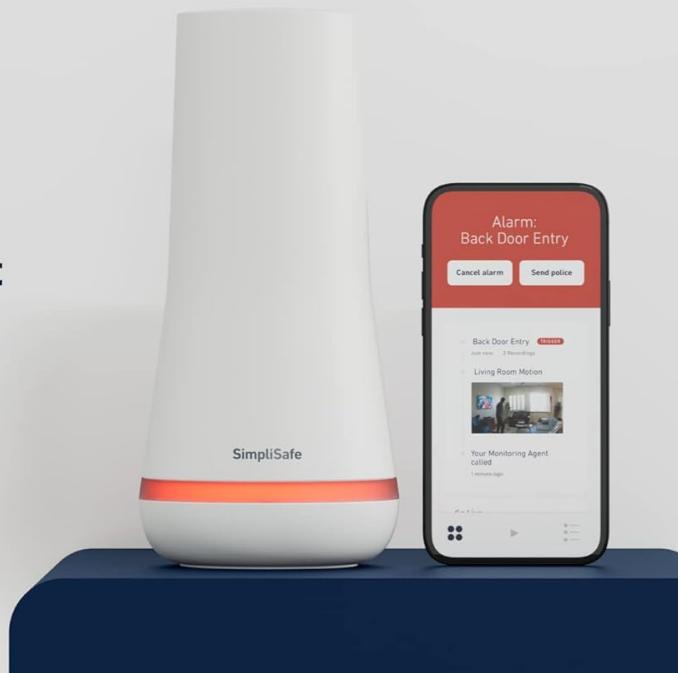


Figure 6: The Outdoor Camera provides 24/7 surveillance and AI-powered motion detection.

5. **Download the SimpliSafe App:** For complete control of your system anytime, anywhere, download the SimpliSafe App on your smartphone. The app will guide you through connecting all components and customizing settings.

# Choose the monitoring plan that's right for you.

## Self Monitoring

Unlimited camera recordings  
+ 30-day cloud storage

## Core

24/7 professional monitoring for  
police, fire, and medical dispatch

Priority police dispatch  
with verified alarms + unlimited  
camera recordings

## Pro

Includes all Core plan features

Live agents help stop crime  
before it starts using the Outdoor  
Camera (8pm - 6am, local)

## Pro Plus

Includes all Core plan features

Live agents help stop crime  
before it starts using the Outdoor  
Camera (day and night)

**No long-term contracts**

Figure 7: Control your system and view live feeds through the SimpliSafe App.

## OPERATING YOUR SYSTEM

Your SimpliSafe system offers various modes and features to ensure your home's security.

### Arming and Disarming

- **Off Mode:** The system is disarmed. All sensors are inactive.
- **Home Mode:** Designed for when you are home. Entry sensors on doors and windows are active, but motion sensors (if added) are typically inactive to allow free movement inside.
- **Away Mode:** Activates all sensors, including entry and motion sensors, for full protection when no one is home.

You can arm or disarm your system using the Keypad, the Key Fob, or the SimpliSafe mobile application.

### Panic Button

The Keypad includes a hidden panic button for emergencies. Pressing this button will immediately trigger the alarm and, with professional monitoring, alert emergency services.

## Outdoor Camera Features


The Outdoor Camera Series 2 provides continuous surveillance. Key features include:

- **1080p HD Resolution:** Clear video quality day and night.
- **Color Night Vision:** Enhanced visibility in low-light conditions.
- **140-Degree Field of View:** Wide coverage of your outdoor areas.
- **2-Way Audio:** Communicate with visitors or deter intruders.
- **SimpliSafe Active Guard Outdoor Protection (Optional):** With select monitoring plans, advanced AI identifies threats, and live agents can see, speak to, and sound a siren to deter intruders, even requesting police dispatch if necessary.

## Professional Monitoring

SimpliSafe offers optional 24/7 professional monitoring services. With this service, trained agents respond to alarms, verify threats, and dispatch police, fire, or emergency medical services as needed. This service provides an added layer of security and peace of mind.

# Complete control of your system anytime, anywhere with the Simplisafe® App

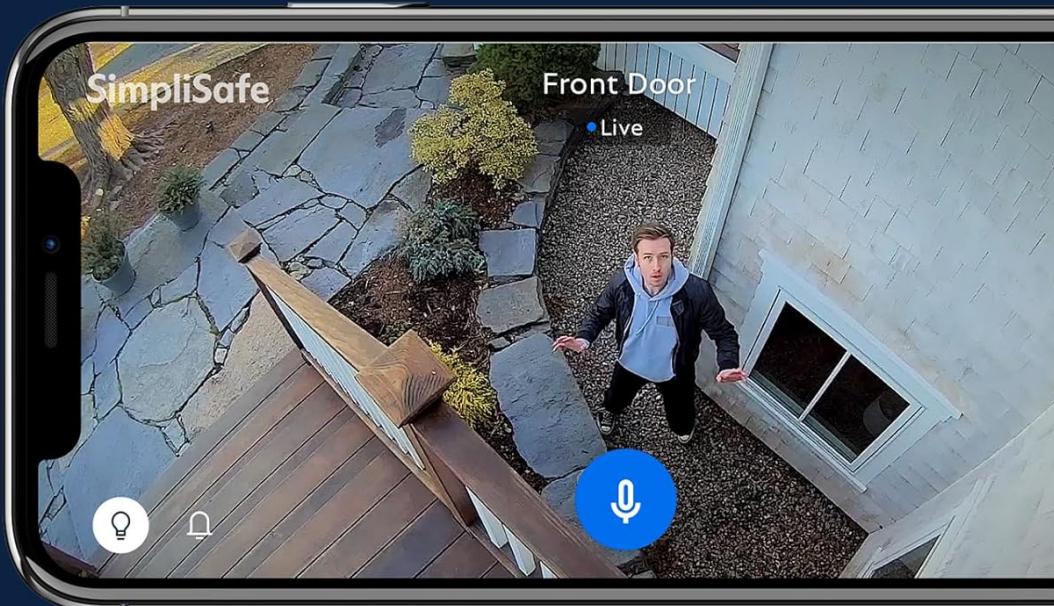

**SimpliSafe**

Front Door

• Live

💡

🔒

▶

**Simplisafe**

Download on the App Store

GET IT ON Google Play

★★★★★ 4.8 · 300K Ratings (as of 6/24)

★★★★★ 4.6 · 23K Ratings (as of 6/24)

Figure 8: Professional monitoring agents keep your home safe 24/7.

## MAINTENANCE

---

To ensure the optimal performance of your SimpliSafe system, regular maintenance is recommended:

- **Battery Replacement:** All wireless components, including Entry Sensors, Keypad, and Key Fob, are battery-powered. The Base Station has a backup battery that lasts up to 24 hours during a power outage. Replace batteries as indicated by system alerts or approximately every 3-5 years for sensors and key fobs, and as needed for the Outdoor Camera's rechargeable battery.
- **Cleaning:** Gently wipe down components with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Software Updates:** Ensure your Base Station and other components receive regular software updates, which are typically pushed automatically. These updates provide new features and security enhancements.

## TROUBLESHOOTING

---

If you encounter any issues with your SimpliSafe system, consider the following common troubleshooting steps:

- **No Power to Base Station:** Ensure the power cable is securely plugged into both the Base Station and a working electrical outlet. Check the outlet with another device.
- **Sensor Not Responding:** Check the battery in the sensor. Ensure the sensor and its magnet (for Entry Sensors) are properly aligned and within range of the Base Station.
- **Connectivity Issues:** Verify your home Wi-Fi network is active and the Base Station is connected. If issues persist, try restarting your router and the Base Station.
- **App Not Connecting:** Ensure your smartphone has a stable internet connection. Try logging out and back into the SimpliSafe App.

For more detailed troubleshooting or persistent issues, please refer to the official SimpliSafe support resources or contact customer service.

## SPECIFICATIONS

---

Feature	Detail
Brand	SimpliSafe
Model Number	KT071-01RUS
Color	White
Power Source	Battery Powered
Compatible Devices	Alexa, Google Assistant
Item Dimensions (L x W x H)	12.3 x 12.38 x 4.4 inches
Video Capture Resolution	1080p (Outdoor Camera)
Connectivity Technology	Wireless
Installation Type	Wireless DIY
Alert Type	Entry

Feature	Detail
Item Weight	6.59 Pounds
Battery Cell Composition	Alkaline
Unit Count	6.0 Count

## WARRANTY AND SUPPORT

For detailed warranty information and customer support, please visit the official SimpliSafe website or contact their customer service team directly. SimpliSafe products and professional monitoring services are offered for sale and supported in the US.

You can find additional resources and FAQs on the SimpliSafe support page [simplisafe.com/support](https://simplisafe.com/support)

© 2025 SimpliSafe. All rights reserved.

### Related Documents - KT071-01RUS

	<p><a href="#">SimpliSafe 8 Piece Wireless Home Security System User Manual</a></p> <p>Comprehensive user manual for the SimpliSafe 8 Piece Wireless Home Security System, covering installation, setup, operation, monitoring, and safety information. Compatible with Alexa and Google Assistant.</p>
	<p><a href="#">SimpliSafe CMOB1 Camera Quick Start and Regulatory Compliance</a></p> <p>This document provides a quick start guide for the SimpliSafe CMOB1 camera, including battery charging and mobile app setup instructions. It also details the Federal Communication Commission (FCC) and Industry Canada (ISED) compliance statements, outlining interference regulations and radiation exposure limits for the device.</p>
<p><b>Installation Instructions</b></p> <p><b>Add the Siren to your System</b></p> <p>The Siren is added to your system differently than other components. Please add the Siren to your list of sensors, you program it as follows:</p> <ol style="list-style-type: none"> <li>1) Remove the battery activation strip. If the Siren has a porous surface the device does not provide good adhesion, use the included screws to secure the Siren.</li> <li>2) Hold down the programming button. Press and hold the programming button until the programming light on the Siren begins to flash. Once the programming light begins to flash, the Siren is now on your keypad.</li> <li>3) Enter the PIN that was programmed by your Base Station, the Siren will provide a confirmation beep.</li> </ol> <p><b>Mounting</b></p> <p>Mount the Siren to a wall using the pre-applied adhesive strips. If the wall has a porous surface the device does not provide good adhesion, use the included screws to secure the Siren.</p> <p><b>Testing</b></p> <p>Press the "Home" button on your Keypad to arm your alarm. Once your alarm is armed, press "Off" on your Keypad. If your Siren will provide entry beeps, confirming it is properly installed. Enter your PIN and press "Off" on your Keypad. Remove the programming strip from the Siren. If the programming strip remains attached to your Siren, please re-enter your PIN.</p> <p>Warning: risk of hearing loss - do not stand directly in front of the Siren when it is beeping.</p> <p>To disable entry delay beeps, press the programming button 5 times quickly. You will hear one long tone to confirm the beeps are disabled.</p> <p>Note: The siren beeps on your keypad if it triggers the siren. All other panic buttons will not trigger the siren or alarm.</p>	<p><a href="#">SimpliSafe Siren WS1000: Installation and Setup Guide</a></p> <p>Comprehensive installation, setup, and battery replacement guide for the SimpliSafe Wireless Siren (model WS1000). Learn how to add the siren to your system, mount it, test it, and maintain it.</p>

<p><b>Installation Instructions</b></p> <p><b>Add the Siren to your System</b></p> <p>The Siren is added to your system differently than other components. To add the Siren to your list of sensors, you program it in as follows:</p> <ol style="list-style-type: none"> <li>1) Remove the battery activation strip. Press the small tab on the side of the activation strip to reveal the programming button.</li> <li>2) Hold down the programming button. You will hear a short tone and see a row of 8 dashes appear on your Keypad.</li> <li>3) If your Siren is then recognized by your Base Station, the Siren will provide a confirmation beep.</li> </ol> <p><b>Installation</b></p> <p>Mount the Siren to a wall using the pre-applied adhesive strips. If the wall has a porous surface the adhesive does not provide good adhesion, use the included screws to secure the Siren to the wall.</p> <p><b>Testing</b></p> <p>Press the "Home" button on your Keypad to arm your alarm. Then 10 seconds later press the "Home" button to trigger the alarm. Your alarm will then sound. If entry beeps, confirm the alarm is armed. Enter your PIN or press "Off" on your Keypad. Remote to Siren communication is not available. If you do not receive a confirmation from your Sirens, please re-enter your PIN.</p> <p><b>Warning: risk of hearing loss - do not use</b> without proper ear protection. Do not use while sleeping.</p> <p>To disable entry delay beeps, press the programming button 5 times quickly. You will hear one long tone to confirm the beeps have been disabled.</p> <p><small>Note: The panic button on your Keypad will not trigger the siren when armed. All other panic buttons and devices will trigger the alarm as desired.</small></p>	<p><b>SimpliSafe Wireless Siren Installation Guide</b></p> <p>Step-by-step instructions for installing, testing, and maintaining the SimpliSafe Wireless Siren (WS1000), including battery replacement and FCC compliance details.</p>
 <p><b>SimpliSafe Camera Setup Guide - Quick Start</b></p> <p>Step-by-step instructions for setting up your SimpliSafe camera, including connecting power and adding it to the app. Features diagrams described textually and important warnings.</p>	<p><b>SimpliSafe Camera Setup Guide - Quick Start</b></p> <p>Step-by-step instructions for setting up your SimpliSafe camera, including connecting power and adding it to the app. Features diagrams described textually and important warnings.</p>