

[manuals.plus](#) /› [Hama](#) /› [Hama Ultimate Pro Portable Bluetooth Speaker User Manual](#)**Hama 00188232**

Hama Ultimate Pro Portable Bluetooth Speaker User Manual

Model: 00188232

1. INTRODUCTION

Thank you for choosing the Hama Ultimate Pro Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient use of your device. Please read it carefully before use and keep it for future reference.

Package Contents:

- 1x Hama Ultimate Pro Portable Bluetooth Speaker
- 1x USB-C Charging Cable
- 1x Carrying Strap
- 1x User Manual

2. SAFETY INSTRUCTIONS

- Do not open the device. Incorrect assembly can lead to electric shock, fire, or damage.
- Keep the device away from extreme temperatures, direct sunlight, and humidity.
- This speaker is rated IPX6, meaning it is protected against strong continuous rain and splashing water. Do not submerge the speaker in water.
- Use only the provided USB-C cable for charging.
- Do not use the device if it is visibly damaged.
- Protect the battery from overheating.

3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's features and connections.



24h



IPX6



120 W



The Hama Ultimate Pro speaker highlights its key features: 24-hour battery life, IPX6 waterproof rating, Bluetooth connectivity, and 120W sound output.

Control Panel:



Detailed view of the speaker's top control panel, showing buttons for power, volume adjustment, play/pause, mode selection, and equalizer settings.

- **Power Button:** Press and hold to turn on/off. Short press to check battery status.
- **Volume Down (-):** Decrease volume.
- **Play/Pause Button:** Play or pause audio.
- **Volume Up (+):** Increase volume.
- **Mode Button (M):** Switch between input modes (Bluetooth, AUX, USB).
- **Equalizer Button (EQ):** Cycle through equalizer presets (Bass Sound, Power Sound, Balanced Sound).

Ports and Connections:



The speaker's rear port panel includes a USB-C charging port, a USB-A port for external devices, a reset button, and a 6.3mm jack input.

- **USB-C Port:** For charging the speaker and for Power Bank output.
- **USB-A Port:** For playing music from USB storage devices or for Power Bank output.
- **AUX Input (3.5mm Jack):** For connecting external audio devices via a 3.5mm audio cable.
- **Microphone/Guitar Input (6.3mm Jack):** For connecting a microphone or guitar.
- **Reset Button:** Use a thin object to press and reset the speaker if needed.

4. SETUP

4.1 Charging the Speaker

1. Connect the supplied USB-C charging cable to the USB-C port on the speaker.
2. Connect the other end of the USB-C cable to a suitable USB power adapter (not included). A 30W charger is recommended for fast charging.
3. The charging indicator will show the charging status. The speaker is fully charged in approximately 2.5 hours.

4.2 Powering On/Off

- To turn on: Press and hold the Power button for a few seconds until you hear an audible prompt.
- To turn off: Press and hold the Power button for a few seconds until you hear an audible prompt.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the Mode button (M) to switch to Bluetooth mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Hama Ultimate Pro" from the list of devices.
4. Once paired, the LED indicator will turn solid blue, and you will hear a confirmation sound.

4.4 Connecting via AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end to the audio output of your external device.
3. Press the Mode button (M) on the speaker to switch to AUX mode.

4.5 Connecting USB Storage

1. Insert a USB flash drive containing audio files into the USB-A port on the speaker.
2. Press the Mode button (M) to switch to USB mode. The speaker will automatically begin playing audio from the USB drive.

4.6 Connecting Microphone or Guitar



The speaker can be used as an amplifier by connecting an electric guitar via its 6.3mm jack input.



A microphone can be connected to the speaker's 6.3mm jack input for karaoke or public speaking.

1. Connect your microphone or guitar to the 6.3mm jack input on the speaker.
2. Adjust the volume on your connected device and the speaker as needed.

4.7 True Wireless Stereo (TWS) Pairing

The Hama Ultimate Pro supports TWS for connecting two speakers for a stereo sound experience. Refer to the specific TWS pairing instructions in the full manual if available, as this feature typically involves pressing a dedicated TWS button on both speakers simultaneously.

5. OPERATING THE SPEAKER

5.1 Basic Playback Controls

- **Play/Pause:** Short press the Play/Pause button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.


5.2 Equalizer Modes

The speaker offers three distinct equalizer modes to optimize your listening experience:

- **Bass Sound:** Enhances low frequencies for a deeper bass response.
- **Power Sound:** Provides a balanced, powerful sound profile.
- **Balanced Sound:** Offers a neutral and clear audio output.

To switch between modes, short press the EQ button on the control panel.

5.3 Hama Smart Home App Control

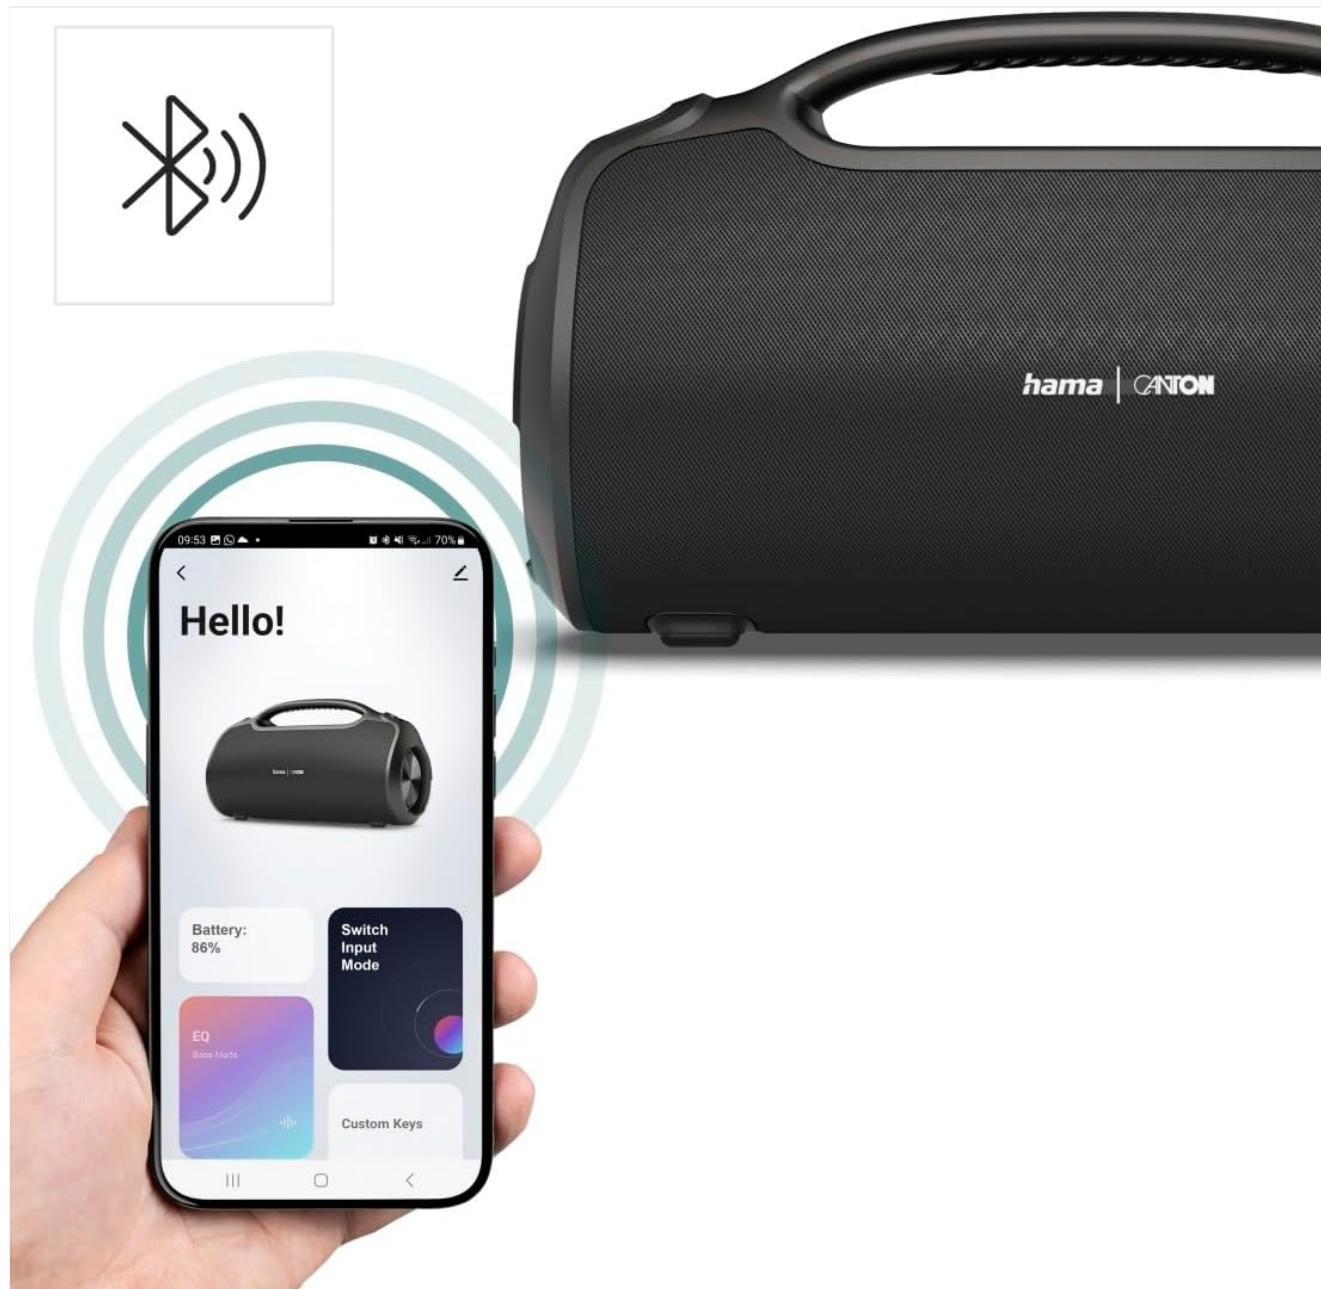

The Hama Smart Home app allows for convenient control and customization of the speaker, including battery status and sound settings.

Download the "Hama Smart Home" app from your device's app store to access additional features:

- Custom equalizer settings.
- Change the speaker's name.
- View precise battery status in percentage.
- Remote control of playback and settings.

5.4 Power Bank Function



The speaker's integrated power bank allows you to charge external devices like smartphones via its USB-C or USB-A ports. The Hama Ultimate Pro speaker features an integrated power bank function, allowing you to charge other devices:

1. Connect your smartphone, tablet, or other USB-powered device to the USB-C or USB-A port on the speaker using a compatible charging cable.
2. The speaker's internal battery will begin charging your connected device.

6. MAINTENANCE

6.1 Cleaning

The speaker has a resistant and washable surface. To clean:

- Ensure the speaker is turned off and all cables are disconnected.
- Use a soft, damp cloth to wipe the surface. Do not use harsh cleaning agents or solvents.
- For stubborn dirt, a mild soap solution can be used, followed by wiping with a clean, damp cloth.
- Allow the speaker to dry completely before use.

6.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every few months to maintain battery health.

6.3 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the battery to heat sources or direct flame.
- Dispose of batteries according to local regulations.

7. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common solutions:

- **No Power:** Ensure the speaker is charged. Connect it to a power source using the USB-C cable.
- **Cannot Pair via Bluetooth:**
 - Ensure the speaker is in Bluetooth pairing mode (flashing blue LED).
 - Make sure Bluetooth is enabled on your device and it is within 10 meters of the speaker.
 - Forget the speaker from your device's Bluetooth list and try pairing again.
 - Restart both the speaker and your device.
- **No Sound:**
 - Check the volume levels on both the speaker and your connected device.
 - Ensure the correct input mode (Bluetooth, AUX, USB) is selected on the speaker.
 - If using AUX, ensure the cable is fully inserted and functional.
- **Charging Issues:**
 - Verify the USB-C cable is not damaged and is properly connected.
 - Try a different USB power adapter.
- **Speaker Unresponsive:** If the speaker becomes unresponsive, use a thin object (like a paperclip) to press the Reset button located on the port panel.

8. SPECIFICATIONS



Physical dimensions of the Hama Ultimate Pro speaker for reference.

Model Number	00188232
Brand	Hama
Color	Black
Connectivity Technology	Bluetooth 5.3
Max Range	10 meters
Audio System	Stereo
Max Music Power	120 W
Battery Type	Integrated Lithium-Ion
Battery Capacity	4500 mAh
Battery Voltage	11.4 V
Battery Power	51.3 Wh
Max Battery Life	24 hours

Charging Time	Approx. 2.5 hours
USB PD Support	Yes
IP Rating	IPX6 (Protection against strong continuous rain)
Dimensions (L x W x H)	46.5 x 19.2 x 25.4 cm
Weight	5200 g (5.2 kg)
Compatible Devices	MP3 Player, Personal Computer, Smartphone, Tablet, Television

9. WARRANTY

Hama GmbH & Co KG provides a warranty for this product. Please refer to the warranty card included in your package or visit the official Hama website for detailed warranty terms and conditions specific to your region.

10. SUPPORT

For technical support, troubleshooting assistance, or further inquiries, please contact Hama customer service. Contact details can typically be found on the official Hama website or on the product packaging.

You can also visit the Hama website for FAQs and additional product information: www.hama.com