



Manuals.plus /

› **TIMU** /

› TIMU M10 Pro Wireless Portable Bluetooth Speaker User Manual

## TIMU M10 Pro

# TIMU M10 Pro Wireless Portable Bluetooth Speaker User Manual

MODEL: M10 PRO

## Introduction

---

Thank you for purchasing the TIMU M10 Pro Wireless Portable Bluetooth Speaker. This manual provides important information regarding the setup, operation, and maintenance of your speaker. Please read it carefully before use and retain it for future reference.



Image: TIMU M10 Pro Wireless Portable Bluetooth Speaker. This image displays the overall design of the speaker, highlighting its portable form factor and robust exterior.

## Safety Information

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- While the speaker is IPX7 waterproof, ensure the charging port cover is securely closed before exposure to water. Do not submerge for longer than 30 minutes or deeper than 1 meter.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Contact qualified service personnel.
- Keep the speaker away from medical devices, as it contains magnets.

- Use only the provided charging cable or a certified Type-C cable for charging.

## Package Contents

---

Please check the package for the following items:

- 1 x TIMU M10 Pro Portable Bluetooth Speaker
- 1 x Type-C Charging Cable
- 1 x User Manual (Instructions for use)
- 1 x Nylon Braided Hanging Rope
- 1 x AUX Connecting Cable

## Product Overview

---

Familiarize yourself with the speaker's buttons and ports. (Refer to the physical product for exact button placement and iconography.)

- **Power Button:** Press and hold to power on/off. Short press for play/pause.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode Button (M):** Short press to switch between Bluetooth, AUX, and SD card modes. Long press to cycle EQ modes.
- **RGB Light Button:** Short press to cycle through RGB light modes. Long press to turn lights off.
- **Type-C Charging Port:** For charging the speaker.
- **AUX-in Port:** For wired audio connection.
- **Micro SD Card Slot:** For playing music directly from an SD card.
- **LED Indicator:** Shows charging status, Bluetooth pairing status, and operating mode.

## Setup

---

### 1. Charging the Speaker

1. Open the waterproof cover on the side of the speaker.
2. Connect the provided Type-C charging cable to the speaker's charging port and the other end to a 5V USB power adapter (not included).
3. The LED indicator will illuminate during charging and turn off when fully charged.
4. A full charge takes approximately 3 hours and provides up to 30 hours of playtime (without RGB lights).
5. Ensure the waterproof cover is securely closed after charging.

### 2. Power On/Off

- **Power On:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED indicator flashes.
- **Power Off:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED indicator turns off.

### 3. Bluetooth Pairing

1. Power on the speaker. The LED indicator will flash blue, indicating it is in Bluetooth pairing mode.
2. Enable Bluetooth on your device (smartphone, tablet, laptop).
3. Search for "TIMU M10 Pro" in the list of available Bluetooth devices.
4. Select "TIMU M10 Pro" to connect. Once connected, the LED indicator will turn solid blue, and you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

#### 4. AUX Connection

- Connect one end of the provided AUX cable to the speaker's AUX-in port and the other end to the audio output of your device.
- Press the Mode button (M) to switch to AUX mode. The LED indicator will change to a steady green light.

#### 5. Micro SD Card Playback

- Insert a Micro SD card (up to 32GB, FAT32 format) with MP3 audio files into the Micro SD card slot.
- The speaker will automatically switch to SD card mode and begin playing music. If not, press the Mode button (M) to select SD card mode.

## Operating

---

### 1. Music Playback

- **Play/Pause:** Short press the Power button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.
- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.

### 2. TWS (True Wireless Stereo) Pairing

To achieve a stereo sound experience, you can pair two TIMU M10 Pro speakers together.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. You will hear a prompt, and the speaker will search for another M10 Pro.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound, and the LED indicator on the primary speaker will flash blue, while the secondary speaker's LED will be solid blue.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.
5. To disconnect TWS, double-press the Power button on either speaker.

### 3. RGB Lighting Modes

The speaker features dynamic RGB lighting with multiple modes.

- **Cycle Modes:** Short press the RGB Light button to switch between Rhythm, Rainbow, Breathing, and Gradient modes.
- **Turn Off Lights:** Long press the RGB Light button to turn off the lighting.

### 4. EQ Modes

The speaker offers different EQ modes to optimize your listening experience.

- **Switch EQ:** Long press the Mode button (M) to cycle through available EQ modes (e.g., Bass Boost, Vocal, Standard).

## 5. Hands-free Calling

When connected via Bluetooth, you can use the speaker for hands-free calls.

- **Answer/End Call:** Short press the Power button.
- **Reject Call:** Long press the Power button.

## Maintenance

- **Cleaning:** Use a soft, damp cloth to wipe the speaker's surface. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, fully charge the speaker at least once every three months if not used regularly. Avoid completely draining the battery frequently.

## Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing blue LED). Turn off and on Bluetooth on your device. Move closer to the speaker. Forget the device on your phone and try pairing again.
No sound or low volume.	Increase volume on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, SD card) is selected. Check if the speaker is muted.
TWS pairing fails.	Ensure both speakers are M10 Pro models and are not connected to any other Bluetooth device. Place them close to each other and try TWS pairing again.
Sound distortion.	Reduce the volume on both the speaker and your device. Ensure there are no obstructions between the speaker and your device.

## Specifications

Feature	Specification
Model Name	M10 Pro
Brand	TIMU
Output Power	25W (RMS), up to 30W Peak
Speaker Type	Portable Outdoor Speaker
Connectivity Technology	Bluetooth 5.3, AUX, Micro SD Card
Bluetooth Range	Up to 20 meters (66 feet)
Waterproof Rating	IPX7
Battery Capacity	4000mAh Lithium Battery
Playtime	Up to 30 hours (at 50% volume, lights off)
Charging Time	Approximately 3 hours
Input Voltage	5 Volts
Speaker Size	55 mm (Full-range speakers)
Impedance	4 Ohms
Signal-to-Noise Ratio	85 dB
Product Dimensions	8D x 8W x 19.5H Centimeters
Item Weight	760 g
Special Features	IPX7 Waterproof, Bass Boost, Built-in Microphone, Dustproof, RGB Lights, Portable, USB Port (for charging), Stereo Pairing (TWS)

## Warranty and Support

TIMU products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official TIMU website. Please retain your proof of purchase for warranty claims.

