

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ouaken](#) /
- › [Ouaken 4L Smart Countertop Electric Composter JF6001A User Manual](#)

Ouaken JF6001A

Ouaken 4L Smart Countertop Electric Composter JF6001A User Manual

Model: JF6001A

INTRODUCTION

The Ouaken 4L Smart Countertop Electric Composter is designed to transform kitchen food waste into nutrient-rich fertilizer efficiently and conveniently. This manual provides essential information for the safe and effective operation and maintenance of your composter, helping you reduce waste and enrich your garden.



Image: The Ouaken Electric Composter on a countertop, with food scraps being added and a small pile of finished compost next to it.

SAFETY INFORMATION

Please read all safety instructions before operating the device.

- Always use caution when handling sharp objects in food waste.
- Keep the composter clean to prevent pest attraction.
- Ensure proper ventilation in the area where the composter is placed.
- The machine's surface becomes very hot during operation. Avoid direct contact.
- Do not immerse the main unit in water.
- Do not put large bones, sugary items, or non-biodegradable materials into the composter.

PRODUCT OVERVIEW

The Ouaken Electric Composter is a smart countertop appliance designed to simplify food waste management. It features a 4-liter capacity, efficient waste reduction, odor-free operation, and easy maintenance.

Key Features:

- **Smart Electric Composter:** Reduces food waste by up to 90% within 3 hours.

- **Efficient Waste Reduction:** Utilizes high-temperature drying, grinding, and cooling methods.
- **Odor-Free Composting:** Equipped with a large capacity carbon filter for effective odor elimination.
- **Large yet Compact:** 4L capacity suitable for daily family food waste, with a sleek countertop design.
- **Easy to Use & Maintain:** Features an easy-touch interface, transparent lid, and dishwasher-safe detachable bucket.
- **Low Noise Operation:** Operates at a quiet noise level below 40dba.



Image: The Ouaken Electric Composter showcasing its key benefits: 3 smart modes, neutralizes odors, 4L large capacity, and runs below 40dB.

Before first use, ensure all packaging materials are removed. Place the composter on a stable, flat surface with adequate ventilation around all sides.

1. Install Carbon Filter:

Locate the filter compartment on the side of the unit. Insert the carbon filter as instructed in the user manual. The composter will alert you when the filter needs replacement (after approximately 1000 hours of usage).



Image: A hand demonstrates inserting the carbon filter into its designated slot on the side of the composter.

2. Place Inner Bucket:

Ensure the detachable inner bucket is correctly placed inside the main unit. The bucket has a handle for easy removal and insertion.

3. Power Connection:

Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. Adding Food Waste:

Open the lid and place your food scraps into the inner bucket. Ensure not to overfill past the maximum fill line.



Image: A woman carefully adds kitchen food waste into the open Ouaken Electric Composter.

2. Selecting a Mode:

The composter offers different modes for processing food waste. Use the easy-touch interface to select your desired mode:

- **Crush Mode (3-8 hours):** Primarily reduces waste volume and odor with low energy usage.
- **Ferment Mode (12-17.5 hours):** Focuses on creating high-quality compost/fertilizer through an accelerated fermentation process.
- **Clean Mode:** For automatic cleaning of the inner bucket.



Image: A finger presses a button on the composter's control panel, indicating mode selection.

3. Starting the Process:

After selecting the mode, press the start button. The composter will begin its cycle, indicated by the transparent lid and display.

4. What You Can and Cannot Compost:

What You Can Put Into the Composter

 Fruit & Vegetable Scraps	 Coffee & Tea Grounds	 Food Leftovers	 Yard Trimmings & Houseplants
 Soft Shelled	 Grains & Nuts	 Meat	 Tissues & Papers

Image: A visual guide illustrating various types of food waste that can be safely composted in the unit.

What You Can NOT Put Into the Composter

 Hard Bones	 Tough Husks	 Glass & Metal	 Plastic
 Cooking Oils	 Foil Wrap	 Paper & Tape	 Disposable Tableware

Image: A visual guide illustrating items that should NOT be placed in the composter.

Official Product Videos:

Your browser does not support the video tag.

Video: Demonstrates the electric composter in a kitchen setting, showing food being added and the composting process.

Your browser does not support the video tag.

Video: An official product video showcasing the JF6001A Electric Composter, its features, and ease of use.

MAINTENANCE

1. Cleaning the Inner Bucket:

The detachable inner bucket is dishwasher safe for convenient cleaning. For manual cleaning, rinse with water and mild detergent.



Image: The composter's auto-clean function in action, showing water swirling inside the bucket.

2. Carbon Filter Replacement:

The composter will alert you when the carbon filter reaches its 1000-hour usage limit. Replace the filter to ensure continued odor-free performance. Refer to the user manual for specific filter replacement instructions.

TROUBLESHOOTING

If you encounter any issues with your Ouaken Electric Composter, please refer to the following common troubleshooting tips:

- **Device Not Starting:** Ensure the power cord is securely plugged into a working outlet. Check if the lid is properly closed and locked.
- **Unpleasant Odors:** Verify that the carbon filter is correctly installed and has not exceeded its 1000-hour usage limit. Replace the filter if necessary. Avoid composting prohibited items.
- **Processing Time is Longer Than Expected:** This may occur with larger volumes of food waste or items with high moisture content. Ensure food items are cut into smaller pieces.
- **Lid Not Opening/Closing:** Check for any obstructions around the lid mechanism. Ensure the unit is powered off before attempting to force the lid.
- **Unusual Noises:** If the device makes unusual noises, power it off immediately and check for any foreign objects or blockages in the grinding mechanism.

For further assistance, please contact Ouaken customer support.

SPECIFICATIONS

Brand	Ouaken
Model Number	JF6001A
Capacity	4 Liters
Color	Black
Material	Aluminum
Product Dimensions	10.4"L x 13.3"W x 12.8"H
Item Weight	18.61 pounds (8.46 Kilograms)
UPC	652726711984

Perfectly Sized Elegant Design



Image: The Ouaken Electric Composter with its dimensions (10.4"L x 13.3"W x 12.8"H) clearly indicated.

WARRANTY AND SUPPORT

Ouaken is committed to creating a greener, cleaner future with innovative kitchen solutions. We specialize in electric kitchen composters that transform food waste into nutrient-rich compost quickly and efficiently.



Image: Ouaken's 100% Guarantee, including 24-hour customer service, a 1-year warranty, and a 30-day refund policy. For customer service or warranty inquiries, please contact Ouaken LLC. We offer a 1-year warranty and a 30-day refund policy.