

18.5-inch LED Touch Screen Karaoke Machine

Generic 18.5-inch LED Touch Screen Karaoke Machine User Manual

Model: 18.5-inch LED Touch Screen Karaoke Machine

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Generic 18.5-inch LED Touch Screen Karaoke Machine. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PRODUCT FEATURES

- **18.5-inch Capacitive Touch Screen:** Offers a responsive and intuitive user interface.
- **4K Resolution Support:** Displays content in 4X1080P ultra-clear 4K resolution for enhanced visual quality.
- **U-segment Wireless Microphones:** Includes two high-end wireless microphones with U-band smart chip for stable signal, anti-interference, howling suppression, dynamic microphone core, and dual antenna reception.
- **Cloud Song Downloads:** High-speed built-in hard disk with capability to download songs from the cloud.
- **Extensive Song Library:** Access to a large music library with weekly real-time updates.
- **Multi-language Support:** Supports 27 languages, allowing users to switch as needed.
- **Multiple Song Ordering Methods:** Order songs via touch screen, mobile app, WeChat, or voice assistant.
- **Connectivity:** Supports both Bluetooth and Wi-Fi connections. Network cable option also available.
- **Advanced Audio Features:** Built-in Reverberation DSP sound effect adjustment, tone adjustment (high/low key), singing mode, and microphone settings.
- **Dual Android System:** Provides flexibility and supports online viewing (e.g., YouTube) and installation of office and game applications.
- **Real-time Scoring Function:** Evaluate singing performance.
- **Storage Options:** Available with various hard disk capacities (e.g., 500GB, 1TB, 2TB, 3TB, 4TB, 8TB) for storing thousands of songs.

4K HD Touch Screen

4X1080P ultra-clear 4K resolution presents a clear picture that is visible in every detail, with more realistic colors

4K
HD Decoding

19.5/22-inch
Large Touch Screen

IPS Capacitive Screen
Wide Viewing Angle



Image: Visual comparison highlighting the clarity of 4K HD display and the 18.5-inch touch screen.

SPECIFICATIONS

Product Name	Karaoke Machine with Microphone
Screen Type	Capacitive Touch Screen
Screen Size	18.5 inches (46.5cm x 28.5cm)
Height	20cm (7.9 inches)
Built-In Features	Reverberation DSP sound effect adjustment
Microphone Type	U-segment wireless high-end microphone
Connectivity	Bluetooth, Wi-Fi, Network Cable
Resolution	4X1080P ultra-clear 4K

Storage Options	500GB (20,000 songs), 1TB (30,000 songs), 2TB (60,000 songs), 3TB (80,000 songs), 4TB (100,000 songs), 8TB (200,000 songs)
Languages Supported	27 languages
Brand	Generic
ASIN	B0F26DMNY2

PACKAGE CONTENTS

- 1 × Karaoke Machine
- 2 × Microphones

Note: The karaoke machine requires external speakers for operation. Speakers are not included.

SETUP INSTRUCTIONS

1. **Connect to Display:** Connect the karaoke machine to a TV, projector, or other display device using an appropriate cable (e.g., HDMI, not included).
2. **Connect to Speakers:** Connect the karaoke machine to external speakers (not included) for audio output. Ensure the speakers are powered on and properly connected.
3. **Power On:** Plug the karaoke machine into a power outlet and turn it on.
4. **Microphone Activation:** Turn on the wireless microphones. They should automatically pair with the karaoke machine.
5. **Initial Software Access:** The karaoke machine comes with pre-installed software. Once powered on, the interface will load. You can then click on the interface or software to begin.

U-BAND MICROPHONE

UHF

U-band Smart Chip

Stable signal and not easy to interfere.



Anti-interference

Anti-interference, restore the real human voice.



Howling Suppression

Intelligent suppression of excessive frequency.



Dynamic Microphone Core

Accurate sound pickup without loss of sound.



Dual Antenna Reception

Long-distance reception range.

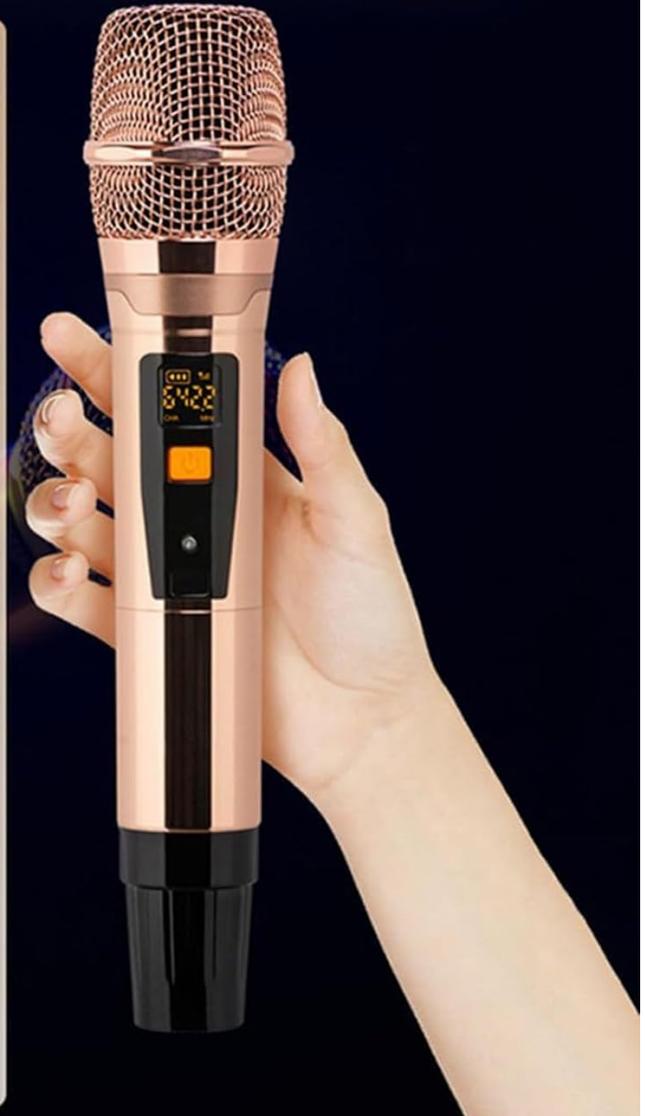


Image: The main karaoke machine unit with its 18.5-inch touch screen and two wireless microphones, ready for setup.

OPERATING INSTRUCTIONS

1. Song Ordering Methods

The karaoke machine offers four convenient ways to select and manage songs:

- **Touch Screen:** Directly interact with the 18.5-inch touch screen to browse, select, and queue songs.
- **Mobile App:** Use a dedicated mobile application on your smartphone or tablet to control the machine.
- **WeChat Scan Code:** Scan a QR code with WeChat to access song selection features.
- **Voice Assistant:** Utilize the built-in voice assistant for hands-free song requests and control.

Common functions like pause, play, next song, original singing, and backing singing can be controlled through these methods.

FOUR DIFFERENT WAYS TO ORDER SONGS



By Wechat
Scan Code



By Mobile
App



By Intelligent
Voice Assistant



By Touch
Screen

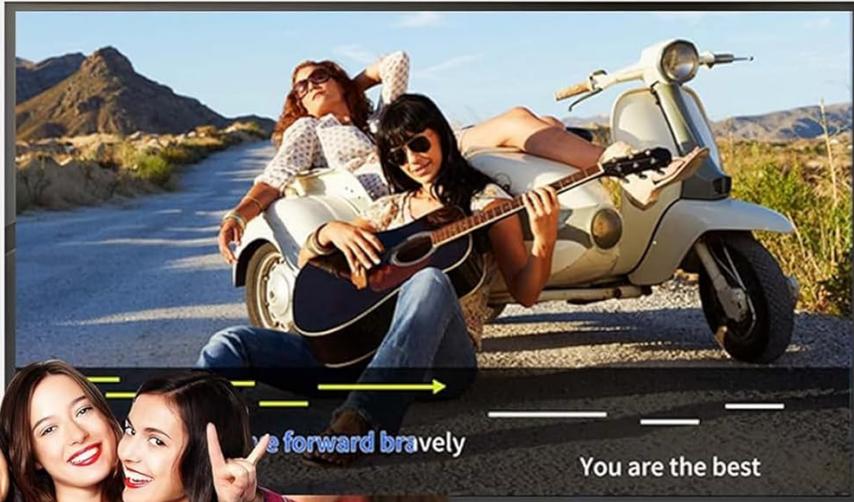


Image: Demonstrates the four song ordering methods: WeChat, mobile app, intelligent voice assistant, and touch screen, shown with a group enjoying karaoke.

2. Network Connection and Song Downloads

Connect the machine to the internet via Wi-Fi or an Ethernet cable to access cloud song downloads and online content.

- **Wi-Fi Connection:** Navigate to the settings menu on the touch screen, select Wi-Fi, and connect to your preferred network.
- **Network Cable:** Plug an Ethernet cable into the designated port on the back of the machine.
- Once connected, you can download songs from the extensive cloud library. Downloaded songs are stored on the internal hard disk and can be played offline.
- The system also supports online streaming of TV or movies and access to YouTube.

3. Audio and Microphone Settings

Adjust audio parameters to enhance your singing experience:

- **Tone Adjustment:** Access the audio settings to adjust the high and low keys of the music.

- **Singing Mode:** Select different singing modes (e.g., original singing, backing singing) to suit your preference.
- **Microphone Settings:** Adjust microphone volume, echo, and other effects through the system interface. The built-in DSP effector provides various microphone and music modes.

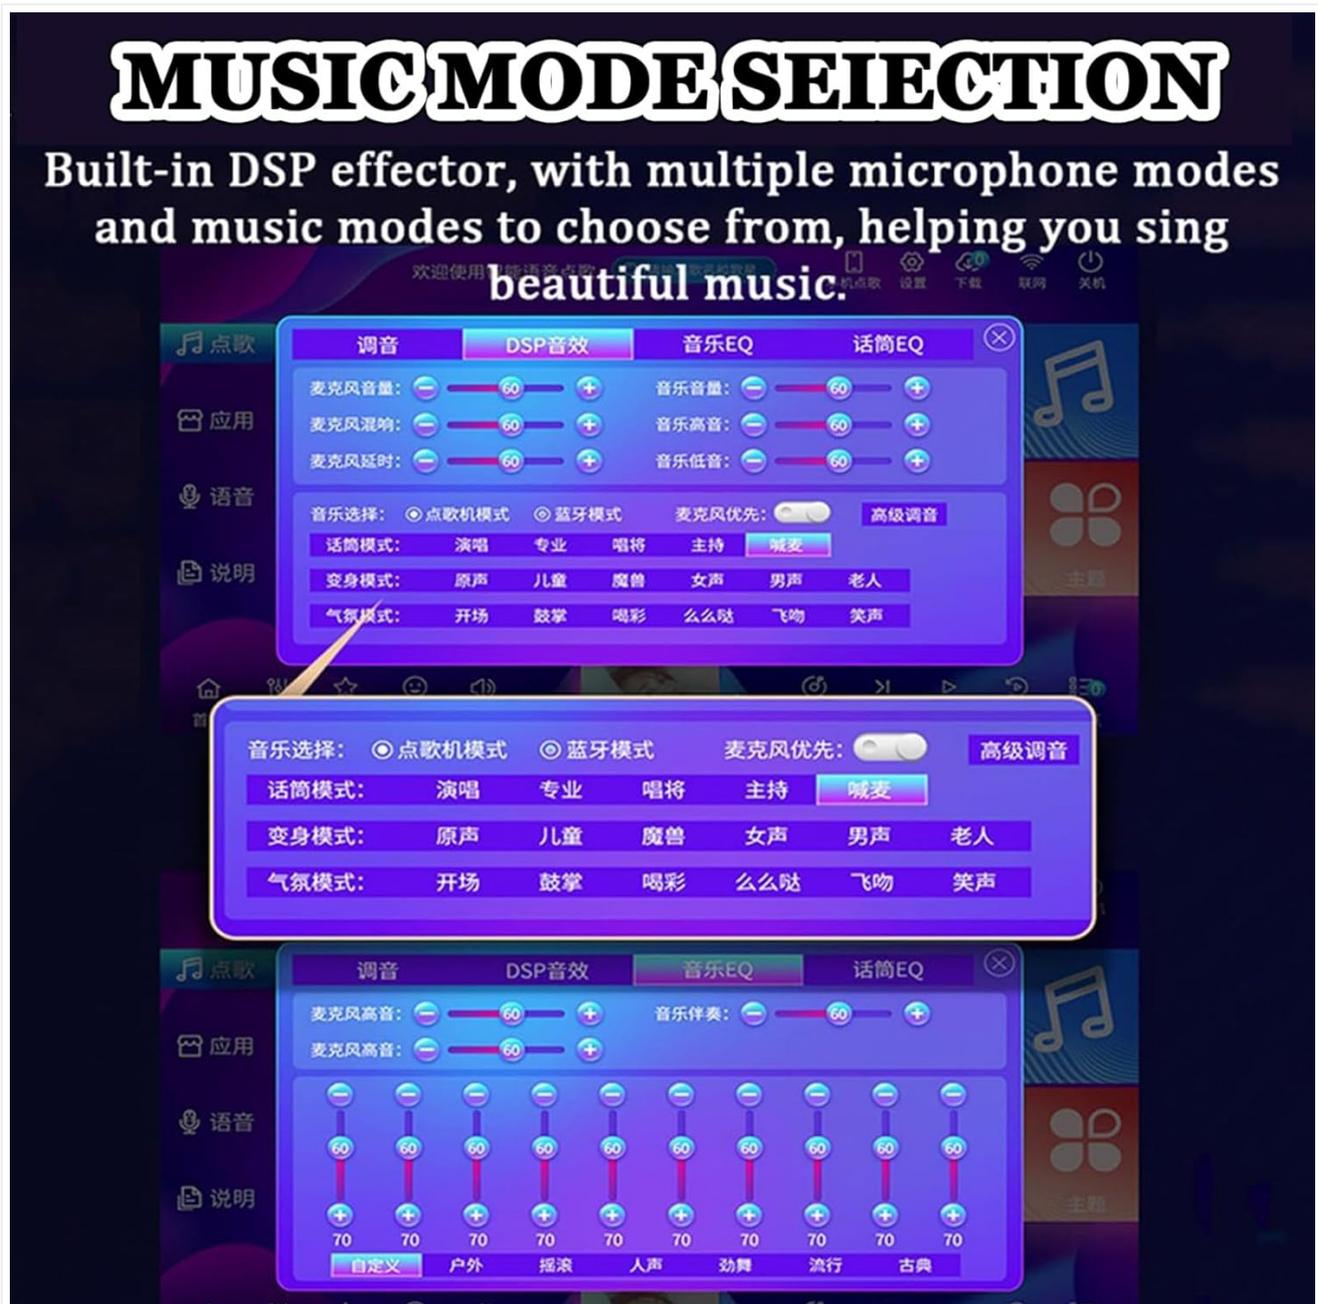


Image: The user interface displaying options for music mode selection, DSP effects, and microphone adjustments.

4. Language Switching

The system supports 27 languages. To change the interface language:

- Navigate to the system settings.
- Select the "Language" option.
- Choose your desired language from the list of 27 available options.

27 LANGUAGES SWITCH



English



Japanese

27 Languages

Chinese	Traditional	English	Japanese	Korean	French
Thai	Russian	German	Vietnamese	Greek	Dutch
Polish	Danish	Swedish	Danish	Finnish	Czech
Spanish	Hungarian	Portuguese	Italian	Arabic	Bulgarian
	Slovenian	Estonian	Romanian	Malaysian	

Image: The language selection screen, showing English and Japanese interfaces and a list of 27 supported languages.

5. Real-time Scoring

Activate the real-time scoring function from the interface to receive immediate feedback on your singing performance.

6. Microphone Usage

The included U-band wireless microphones are designed for clear audio capture. Ensure they are charged and powered on before use. Maintain a reasonable distance from speakers to prevent feedback.

Microphone host =

Pre-effects =

Amplifier =

Song machine \ host =

Amplifier, Microphone, Reverb, Song Requesting Machine

- No installation required
- No debugging required
- Plug and play
- Easy to carry

Image: Detailed features of the U-band wireless microphone, highlighting its smart chip, anti-interference, howling suppression, dynamic core, and dual antenna reception.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the touch screen and exterior surfaces. Avoid abrasive cleaners or solvents.
- **Software Updates:** Periodically check for software updates through the system settings to ensure optimal performance and access to new features.
- **Storage:** When not in use for extended periods, store the karaoke machine in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Microphone Care:** Keep microphones dry and clean. Recharge them as needed.

TROUBLESHOOTING

- **No Power:** Ensure the power cable is securely connected to both the machine and a working power outlet.
- **No Sound:**

- Verify that external speakers are connected and powered on.
- Check the volume settings on both the karaoke machine and your speakers.
- Ensure the correct audio output is selected on your display device (TV/projector).
- **Microphone Not Working:**
 - Ensure microphones are charged and powered on.
 - Check microphone volume settings on the karaoke machine.
 - Confirm microphones are paired with the machine.
- **No Display on Screen:**
 - Check the connection cable (e.g., HDMI) between the karaoke machine and your display device.
 - Ensure the display device is set to the correct input source.
- **Cannot Connect to Internet:**
 - For Wi-Fi, ensure the password is correct and the signal is strong.
 - For wired connection, check the Ethernet cable and router status.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your karaoke machine, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact information.