

A32211

User Manual for Generic Rose Toy A32211

Model: A32211 | Brand: Generic

INTRODUCTION

Thank you for choosing the Generic Rose Toy A32211. This manual provides essential information for the safe and effective use, care, and maintenance of your device. Please read it thoroughly before first use and retain it for future reference.

SAFETY INFORMATION

Important: Statements regarding this product have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. Always consult with a healthcare professional if you have any concerns.

- Do not use if the device appears damaged.
- Keep out of reach of children.
- Discontinue use immediately if you experience any discomfort or irritation.
- Clean the device thoroughly before and after each use.
- Store in a cool, dry place away from direct sunlight.

PRODUCT FEATURES

The Generic Rose Toy A32211 is designed with user comfort and experience in mind. Key features include:

- Material:** Made from soft, skin-friendly silicone for comfort and safety.
- Vibration Modes:** Features 10 distinct vibration patterns for varied experiences.
- Waterproof Design:** Fully waterproof, allowing for use in baths or showers and easy cleaning.
- Quiet Operation:** Engineered for discreet use with a low noise level (below 40dB).
- Portable Size:** Compact and lightweight, making it convenient for travel and discreet storage.
- Rechargeable:** Equipped with a quick-charge function for convenience.



Figure 1: Portable size of the Rose Toy, approximately 2.4 inches wide and 2.6 inches high.

Soft Touch Silicone

Skin Friendly for Intimate Areas

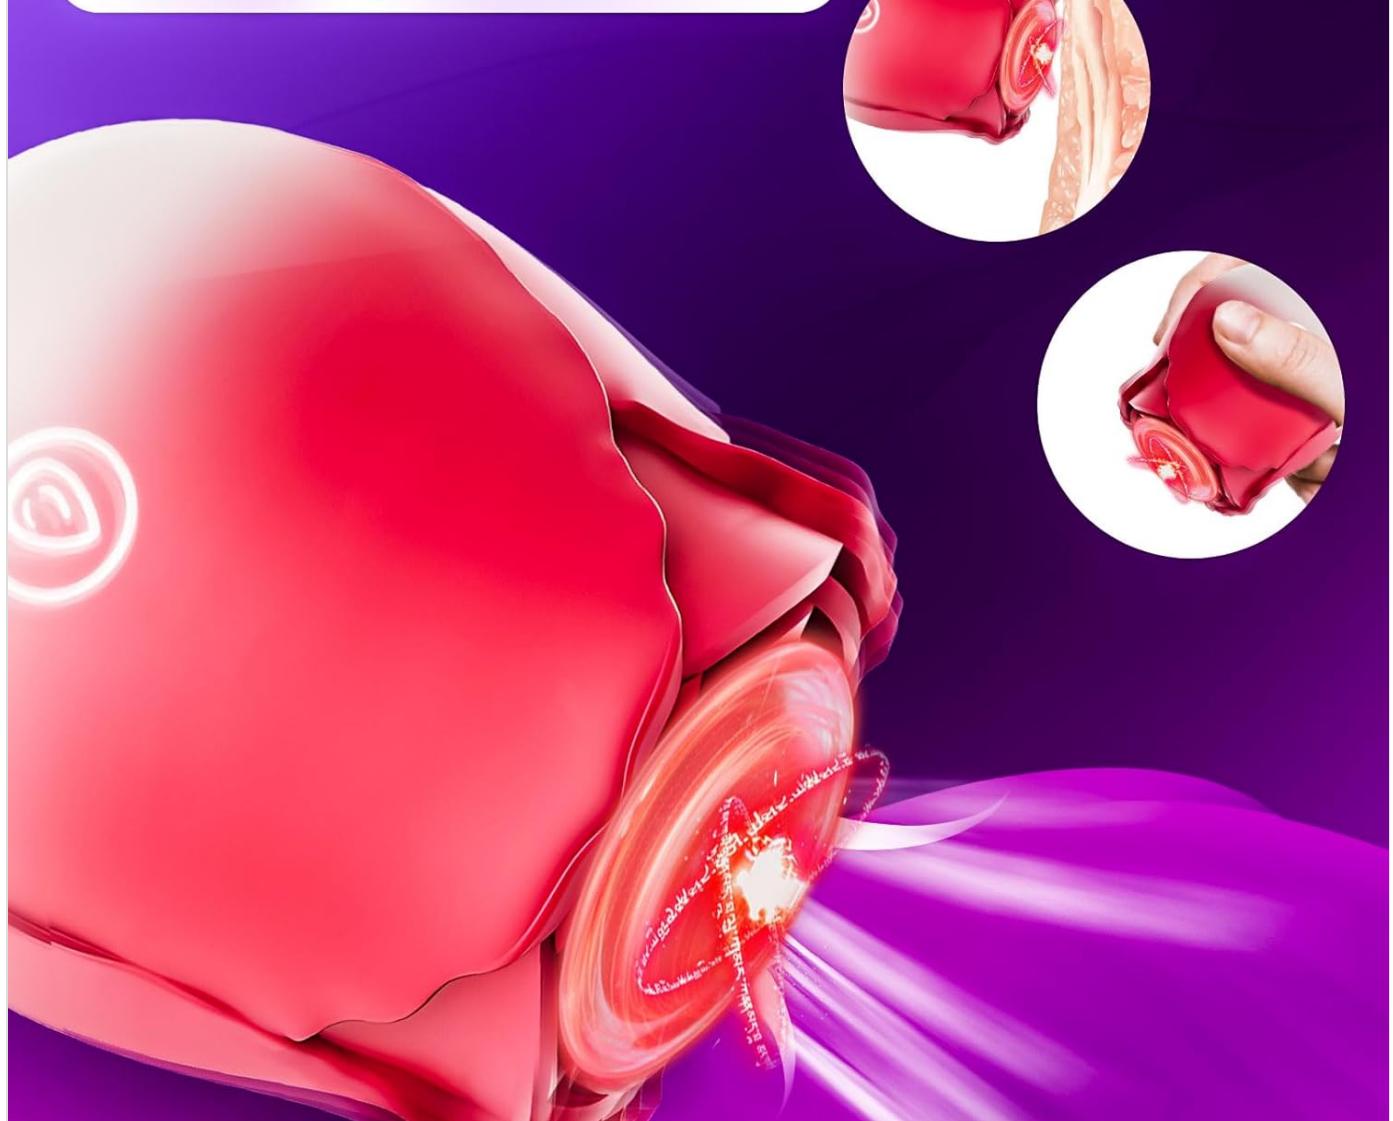


Figure 2: Soft-touch silicone material, designed to be skin-friendly.



Figure 3: The device is 100% waterproof for versatile use and easy cleaning.

Whisper Quiet

Enjoy Your Big "O" Freely!



<40dB



50dB



60dB



65dB



<40dB

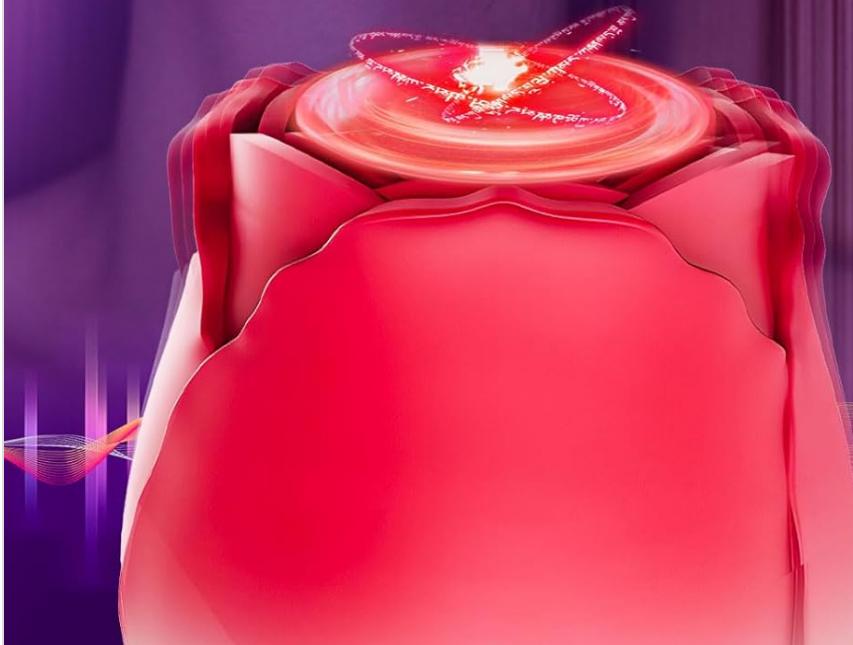


Figure 4: Whisper-quiet operation, ensuring discretion during use.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Generic Rose Toy A32211
- 1 x USB Charging Cable
- 1 x User Manual (this document)

SETUP

1. **Initial Charge:** Before first use, fully charge the device. Connect the USB charging cable to the charging port on the device and plug the other end into a standard USB power adapter (not included) or computer USB port. The indicator light will show charging status and turn solid when fully charged.
2. **First Cleaning:** Clean the device thoroughly with warm water and a mild, toy-safe soap before its initial use. Rinse

completely and pat dry with a lint-free cloth.

OPERATION

1. **Power On/Off:** Press and hold the power button (usually located on the base or side) for 2-3 seconds to turn the device on or off.
2. **Change Modes:** Once powered on, short press the power button to cycle through the 10 different vibration modes.
3. **Usage:** Apply a water-based lubricant to the device and the desired area for enhanced comfort and sensation.

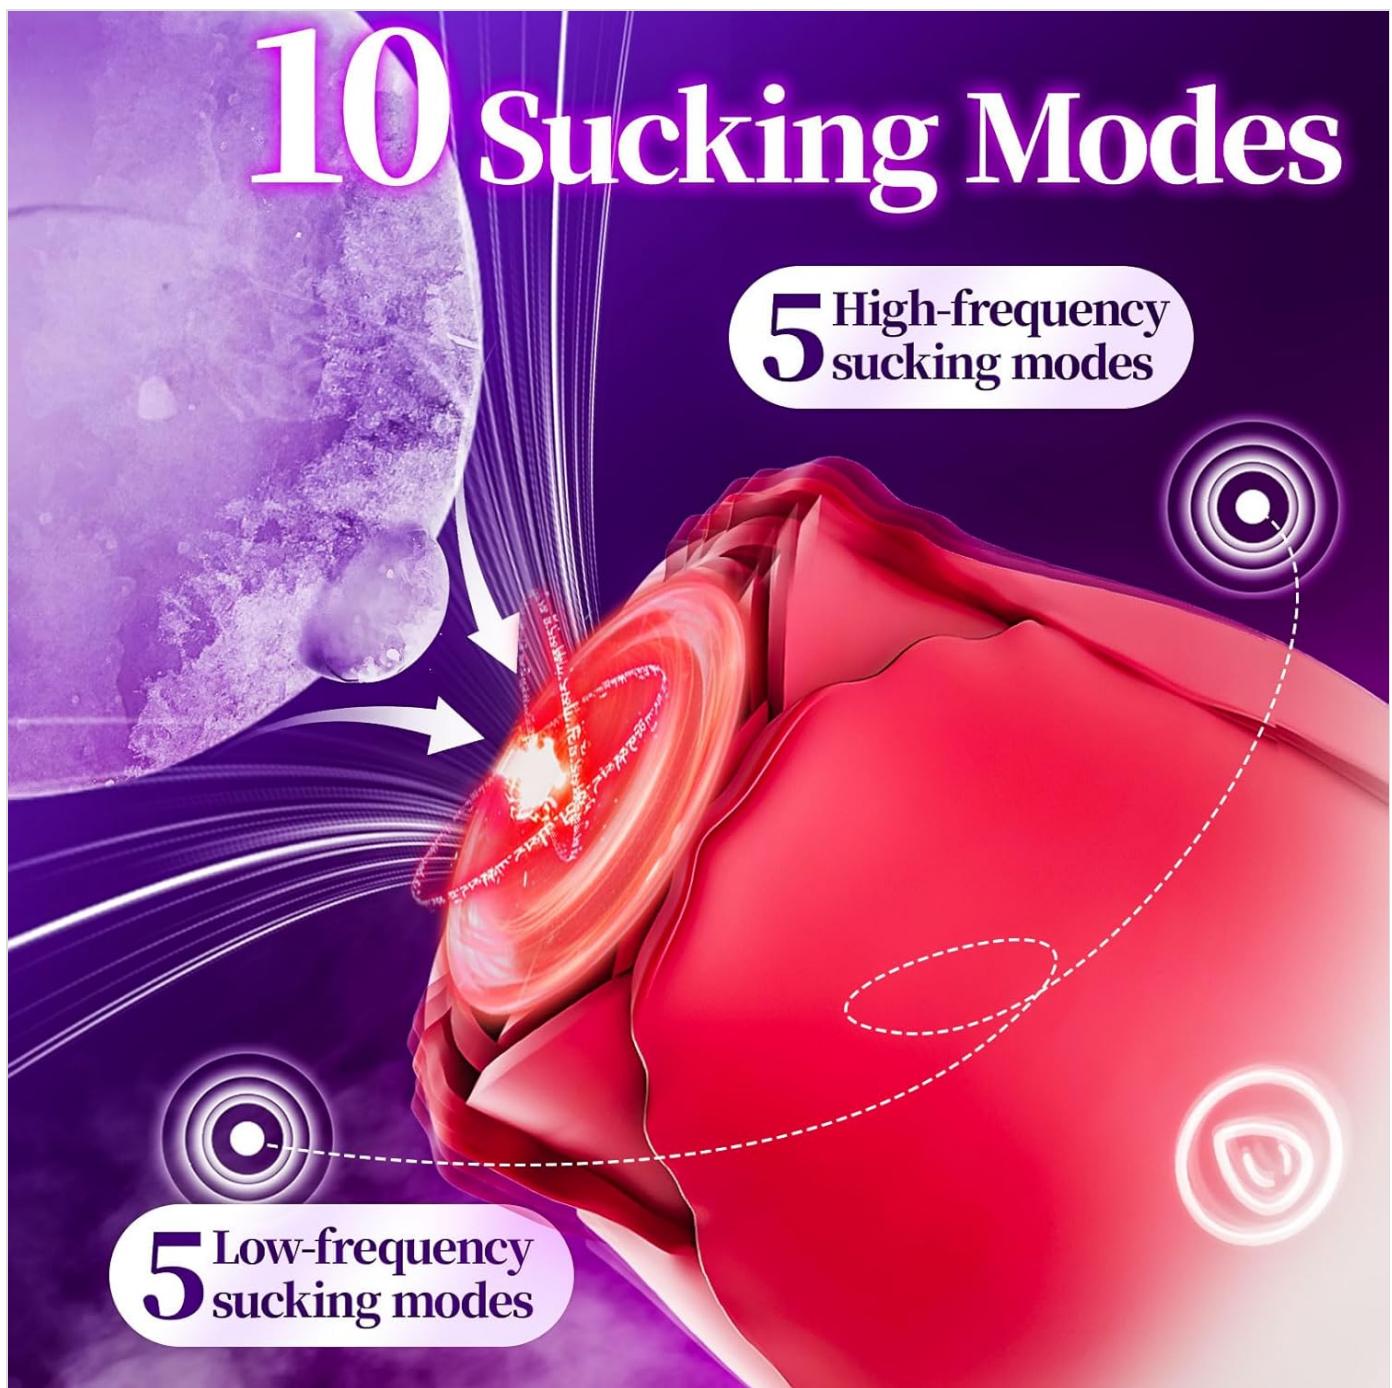


Figure 5: The device offers 10 distinct vibration modes for varied experiences.

Pleasure Air for Thrilling Sensations



Figure 6: Designed to provide air pulse sensations.

MAINTENANCE

- **Cleaning:** After each use, wash the device with warm water and a mild, toy-safe soap. Rinse thoroughly to remove all soap residue.
- **Drying:** Pat dry with a clean, lint-free cloth or allow to air dry completely before storing.
- **Storage:** Store the device in a clean, dry, and cool place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.
- **Charging:** Recharge the device when the battery is low to ensure it's ready for next use. Avoid overcharging for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Vibrations are weak.	Low battery.	Recharge the device.
Device not charging.	Cable or power source issue.	Ensure the USB cable is securely connected. Try a different USB port or power adapter.
Discomfort during use.	Insufficient lubrication or allergic reaction.	Ensure adequate water-based lubricant is used. Discontinue use if irritation persists and consult a healthcare professional.

SPECIFICATIONS

Model Number: A32211

Manufacturer: Generic

Material: Silicone

Vibration Modes: 10

Waterproof: Yes

Power Source: Rechargeable Battery (USB)

ASIN: B0F26VGQ5M

Date First Available: March 1, 2025

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the packaging or contact your retailer for specific warranty terms and conditions.

For technical support or inquiries, please contact the retailer where you purchased the product.