

## G675 L

# Generic G675 L Loveseat Instruction Manual

Model: G675 L

## 1. INTRODUCTION

Thank you for choosing the Generic G675 L Loveseat. This manual provides important information regarding the assembly, use, maintenance, and care of your new loveseat. Please read these instructions carefully before assembly and retain them for future reference.

The G675 L Loveseat is designed for comfortable seating in various indoor environments, featuring a modern style and durable Polyurethane (PU) material in an Off White finish. It is suitable for compact spaces and offers seating for one to two individuals.

## 2. SAFETY INFORMATION

- Always assemble the loveseat on a soft, clean surface to prevent damage to the product or your floor.
- Ensure all bolts, screws, and connectors are securely tightened before use. Periodically check and retighten as necessary.
- Do not stand on the loveseat or use it as a step stool.
- Keep small parts away from children during assembly to prevent choking hazards.
- Avoid placing the loveseat near open flames, heat sources, or in direct sunlight for prolonged periods to prevent material degradation.
- Do not exceed the recommended weight capacity. While specific capacity is not provided, this loveseat is designed for typical adult use (one to two individuals).

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present. If any parts are missing or damaged, please contact customer support.

- Loveseat Frame (1)
- Seat Cushions (2)
- Back Cushions (2)
- Legs (4)
- Hardware Pack (bolts, washers, Allen wrench) (1)



Image 1: Front view of the assembled Generic G675 L Loveseat, showcasing its Off White Polyurethane (PU) upholstery and modern design.

## 4. SETUP AND ASSEMBLY

Assembly typically requires two adults. Please follow these steps carefully:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Place them on a clean, soft surface (e.g., the packaging cardboard or a blanket) to prevent scratches.
- 2. Attach Legs:** Locate the four legs and the corresponding attachment points on the underside of the loveseat frame. Align each leg with its designated corner and secure it using the provided bolts and Allen wrench. Ensure all legs are tightened firmly.
- 3. Place Cushions:** Position the seat cushions onto the loveseat frame. Then, place the back cushions against the backrest. Adjust them for a comfortable fit.
- 4. Final Check:** Once assembled, gently rock the loveseat to ensure stability. If it wobbles, re-check all leg connections and tighten any loose bolts.



Image 2: The loveseat with its overall dimensions: 59 inches (width), 33 inches (depth), and 35 inches (height), crucial for planning placement.

## 5. OPERATING AND USAGE

The Generic G675 L Loveseat is designed for indoor use as seating furniture. It provides a comfortable and stylish addition to living rooms, offices, or other common areas.

- Use the loveseat for sitting purposes only.
- Avoid placing heavy or sharp objects directly on the upholstery to prevent punctures or indentations.
- Do not drag the loveseat when moving it; always lift it to prevent damage to the legs and frame.

## 6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your loveseat.

### 6.1. General Cleaning

- **Dusting:** Regularly dust the surface with a soft, dry cloth.
- **Vacuuming:** Use a vacuum cleaner with a soft brush attachment to remove crumbs and debris from crevices.

### 6.2. Stain Removal (Polyurethane - PU)

- For most spills, immediately blot the area with a clean, dry cloth. Do not rub, as this can spread the stain.
- For tougher stains, dampen a soft cloth with mild soap and water. Gently wipe the stained area.
- Rinse the area with a clean, damp cloth to remove any soap residue.
- Dry thoroughly with a clean, dry cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the PU material.

### 6.3. Preventing Damage

- Keep the loveseat away from direct sunlight and heat sources to prevent fading and cracking of the material.
- Protect the loveseat from pet claws and sharp objects.



Image 3: An angled view of the loveseat, highlighting its overall form and the texture of the Polyurethane material.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Loveseat wobbles	Legs are not evenly tightened or floor is uneven.	Check and re-tighten all leg bolts. If the floor is uneven, use furniture pads or shims under the legs.
Squeaking noise	Loose connections in the frame.	Inspect all assembly points and tighten any loose bolts or screws.
Stains on upholstery	Spills or dirt accumulation.	Refer to Section 6.2 for stain removal instructions specific to Polyurethane (PU) material.

## 8. SPECIFICATIONS

**Model:** G675 L

**Brand:** Generic

**Type:** Sectional (Note: Product is listed as Loveseat, but type is 'Sectional' in specifications. For clarity, it functions as a compact loveseat.)

**Color:** Off White

**Material:** Polyurethane (PU)

**Style:** Modern

**Product Dimensions (D x W x H):** 59" x 33" x 35" (149.86 cm x 83.82 cm x 88.9 cm)

**Seating Capacity:** Designed for comfortable seating for one, or compact seating for two.

**Room Type:** Living Room

**Manufacturer:** AnhuaUSA

## 9. WARRANTY AND SUPPORT

This product is manufactured to high-quality standards. While specific warranty details are not provided in this manual, please refer to your purchase documentation or contact the retailer for information regarding warranty coverage.

For any questions, missing parts, or assistance with assembly or troubleshooting, please contact customer support through your original point of purchase. Please have your model number (G675 L) and purchase date available when contacting support.

© 2026 Generic. All rights reserved.

*Please recycle responsibly.*