



37-Inch Rectangular Outdoor Fireplace B0F283HWYF

Generic 37-Inch Rectangular Outdoor Wood Burning Fireplace with Log Storage - User Manual

Model: 37-Inch Rectangular Outdoor Fireplace (ASIN: B0F283HWYF)

1. INTRODUCTION

Thank you for choosing the Generic 37-Inch Rectangular Outdoor Wood Burning Fireplace. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor fireplace. Please read all instructions carefully before use and retain this manual for future reference.



Image 1.1: The Generic 37-Inch Rectangular Outdoor Wood Burning Fireplace, showcasing its overall design with the chimney, mesh screen, and integrated log storage.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in fire, injury, or property damage.

- For outdoor use only. Do not use indoors or in an enclosed area.
- Place the fireplace on a level, non-combustible surface at least 10 feet away from any structures, trees, or other flammable materials.
- Keep children and pets away from the fireplace during use.
- Never leave a burning fire unattended.
- Use only seasoned firewood. Do not use gasoline, kerosene, or other accelerants to start or rekindle

a fire.

- Have a fire extinguisher or water source readily available.
- Allow the fireplace to cool completely before moving or cleaning.
- Wear appropriate protective gear, such as gloves, when handling hot components or adjusting logs.

3. PACKAGE CONTENTS

Verify that all components are present before assembly. If any parts are missing or damaged, contact customer support.

- Main Fireplace Unit (Base and Chimney Section)
- Ash Pan
- Ash Pan Grate
- Fire Poker
- Assembly Hardware (Bolts, Washers, Nuts)
- Protective Cover (if included)



Image 3.1: Close-up view of the removable ash pan, designed for easy ash disposal.

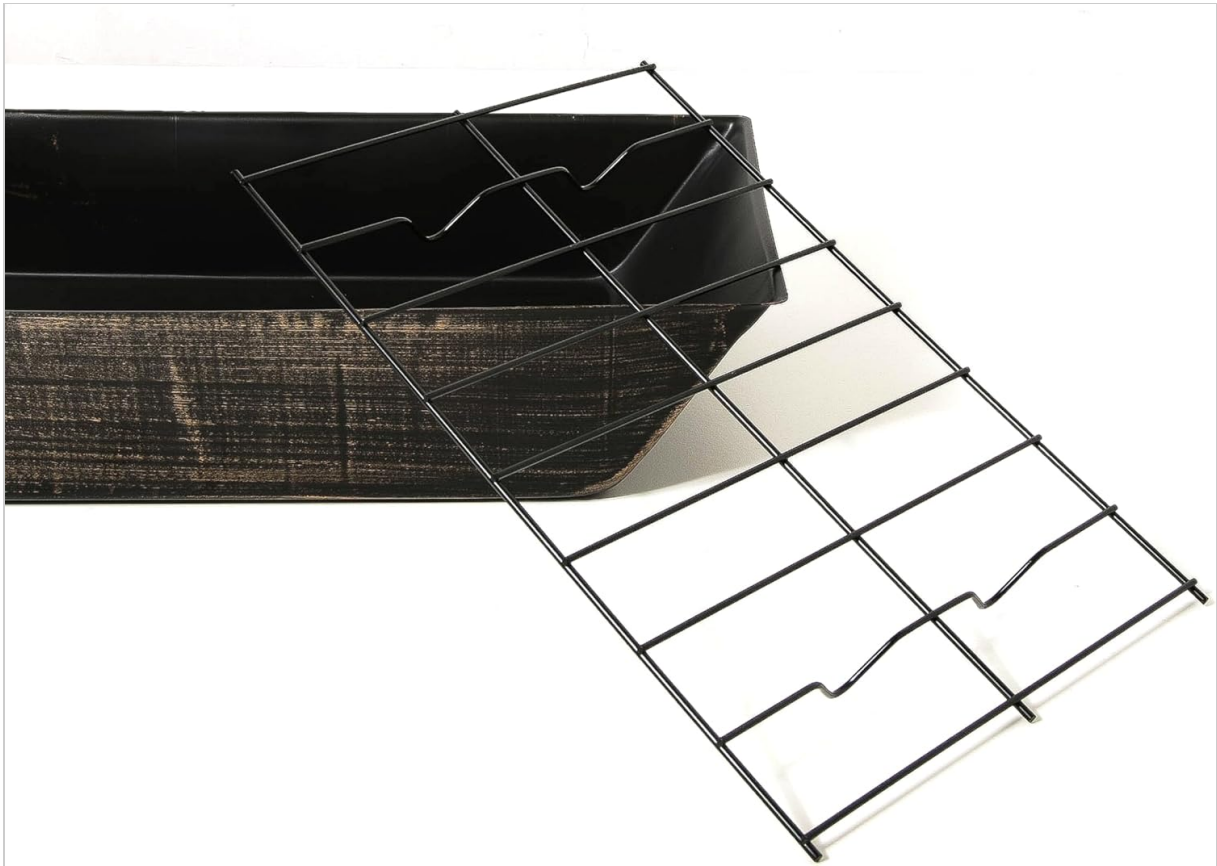


Image 3.2: The metal grate that sits inside the ash pan, allowing air circulation and supporting burning logs.

4. SETUP AND ASSEMBLY

Assembly typically requires two adults. Ensure all parts are accounted for before beginning.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Assemble the Base:** If the base is not pre-assembled, connect the side panels to the bottom panel using the provided hardware. Ensure all connections are secure.



Image 4.1: The sturdy base structure of the fireplace, featuring the integrated log storage area.

3. **Attach the Firebox/Chimney Section:** Carefully place the upper firebox and chimney section onto the assembled base. Align the pre-drilled holes and secure with the remaining hardware.



Image 4.2: A detailed view of the base, highlighting the robust construction and the open arch for log storage.



Image 4.3: Front perspective of the assembled fireplace, illustrating the placement of the ash pan and the log storage compartment.

- 4. Insert Ash Pan and Grate:** Slide the ash pan into its designated slot at the bottom of the firebox. Place the ash pan grate inside the ash pan.



Image 4.4: Overhead view of the fireplace, showing the mesh screen enclosure and the position of the ash pan within the firebox.

5. **Final Check:** Ensure all bolts are tightened and the fireplace is stable on a flat, non-combustible surface.

5. OPERATING INSTRUCTIONS

Follow these steps for safe and effective use of your outdoor fireplace.

1. **Prepare the Area:** Ensure the fireplace is on a stable, non-combustible surface, clear of any flammable materials.
2. **Load Firewood:** Place seasoned firewood onto the ash pan grate. Do not overload the firebox. Ensure adequate airflow around the logs.
3. **Start the Fire:** Use a fire starter or kindling to ignite the firewood. Never use flammable liquids.
4. **Manage the Fire:** Use the included fire poker to adjust logs and maintain airflow. The mesh screen helps contain sparks.
5. **Extinguish the Fire:** Allow the fire to burn down naturally. Do not use water to extinguish a wood fire, as this can damage the fireplace and create hazardous steam. Once the fire is out and embers are cool, ensure no hot spots remain.

6. MAINTENANCE

Regular maintenance will prolong the life of your outdoor fireplace.

- **Ash Removal:** After the fireplace has completely cooled, carefully slide out the ash pan and dispose

of ashes in a metal container.

- **Cleaning:** Wipe down the exterior with a damp cloth. For stubborn stains, use a mild soap solution. Avoid abrasive cleaners.
- **Rust Prevention:** The fireplace is constructed from alloy steel. To prevent rust, especially in humid climates, consider applying a high-temperature protective coating periodically.
- **Storage:** When not in use, especially during inclement weather or off-season, cover the fireplace with a protective cover (if included) or store it in a dry location.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Excessive Smoke	Wet or unseasoned wood; insufficient airflow; overloaded firebox.	Use dry, seasoned wood. Ensure logs are not packed too tightly. Do not overload.
Difficulty Starting Fire	Lack of kindling; wet wood; poor airflow.	Use ample kindling and small pieces of dry wood. Ensure good airflow.
Rust Spots Appearing	Exposure to moisture; lack of protective coating.	Clean and dry the area. Apply a high-temperature rust-resistant paint or coating. Use a protective cover when not in use.

8. SPECIFICATIONS

- **Brand:** Generic
- **Model:** 37-Inch Rectangular Outdoor Fireplace
- **Material:** Alloy Steel
- **Product Dimensions (D x W x H):** 32.28" x 17.72" x 37"
- **Item Weight:** 31 Pounds
- **Style:** Modern
- **Shape:** Rectangular
- **Fuel Type:** Wood
- **Color:** Antique Brass

9. WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation or contact the retailer for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact the retailer or manufacturer directly. Have your product model number and ASIN (B0F283HWYF) ready when contacting support.

For general inquiries, you may also visit the manufacturer's website (if available) or consult online resources for outdoor fireplace care and safety.