

B0F283WXCK

Generic 52-inch Integrated LED Low Profile Ceiling Fan User Manual

Model: B0F283WXCK

1. INTRODUCTION

Thank you for purchasing the Generic 52-inch Integrated LED Low Profile Ceiling Fan. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before installation and keep them for future reference.



Image 1.1: The 52-inch Integrated LED Low Profile Ceiling Fan installed in a living room setting, showcasing its brown solid wood blades and integrated LED light.

2. SAFETY INFORMATION

- **WARNING:** To reduce the risk of fire, electric shock, or personal injury, mount fan directly from building structure and/or an outlet box marked acceptable for fan support of 35 lbs (15.9 kg) and use mounting screws provided with the outlet box.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- Before installation, disconnect power by turning off the circuit breakers to the fan and light switch at the main fuse box.
- Do not operate the fan with damaged blades. Replace all blades if one is damaged.
- Avoid placing objects in the path of the fan blades.
- Ensure the fan is installed at a height where blades are at least 7 feet (2.1 meters) from the floor.

3. SPECIFICATIONS

52
INCH

SOLID WOOD CEILING FAN WITH LIGHT INDOOR DECORATION



MAXIMUM AIRFLOW

5500 CFM

ROOM SIZE

AVERAGE ROOM
15 ft. x 15 ft.
or smaller



Image 3.1: Detailed dimensions of the 52-inch ceiling fan, indicating a 52-inch diameter and an 11.5-inch height, suitable for average rooms up to 15 ft. x 15 ft. with a maximum airflow of 5500 CFM.

Feature	Detail
Brand	Generic
Model	B0F283WXCK
Color	Walnut
Fan Design	Ceiling Fan
Power Source	AC/DC
Product Dimensions	52"D x 52"W x 11.58"H
Room Type Recommendation	Living Room, Average Room (15 ft. x 15 ft. or smaller)
Item Weight	12.54 pounds

Feature	Detail
Maximum Airflow	5500 CFM
Special Features	Integrated LED Lighting (3 color changeable, dimmable), 6-speed fan control, Reversible motor, Remote control, Timer function

4. SETUP AND INSTALLATION

This section provides general guidance for installing your ceiling fan. For detailed, step-by-step instructions, please refer to the separate installation guide included in your product packaging. Professional installation is recommended for electrical work.

4.1 Package Contents (Typical)

- Fan Motor Housing
- Solid Wood Fan Blades (3)
- Integrated LED Light Kit
- Remote Control with Wall Cradle
- Mounting Bracket and Hardware
- Downrod (if applicable)

4.2 General Installation Steps

1. **Turn off Power:** Ensure power is disconnected at the circuit breaker before beginning installation.
2. **Mounting Bracket:** Secure the mounting bracket to the ceiling outlet box.
3. **Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in your detailed guide.
4. **Attach Fan Motor:** Carefully lift and attach the fan motor housing to the mounting bracket.
5. **Install Blades:** Attach the solid wood fan blades to the motor housing. Ensure all screws are tightened securely.
6. **Install Light Kit:** Connect and secure the integrated LED light kit to the bottom of the fan motor.



SOLID WOOD FAN BLADES

Image 4.1: A close-up view of the solid wood fan blades, highlighting their construction and finish.



FAN MOTOR, WHISPER & QUIET

Image 4.2: A detailed view of the fan motor, emphasizing its quiet operation.

5. OPERATING INSTRUCTIONS

Your ceiling fan is operated using the included remote control. Ensure the remote has fresh AAA batteries installed.

Ceiling Fan Remote Control

Power ON/OFF easily with remote control

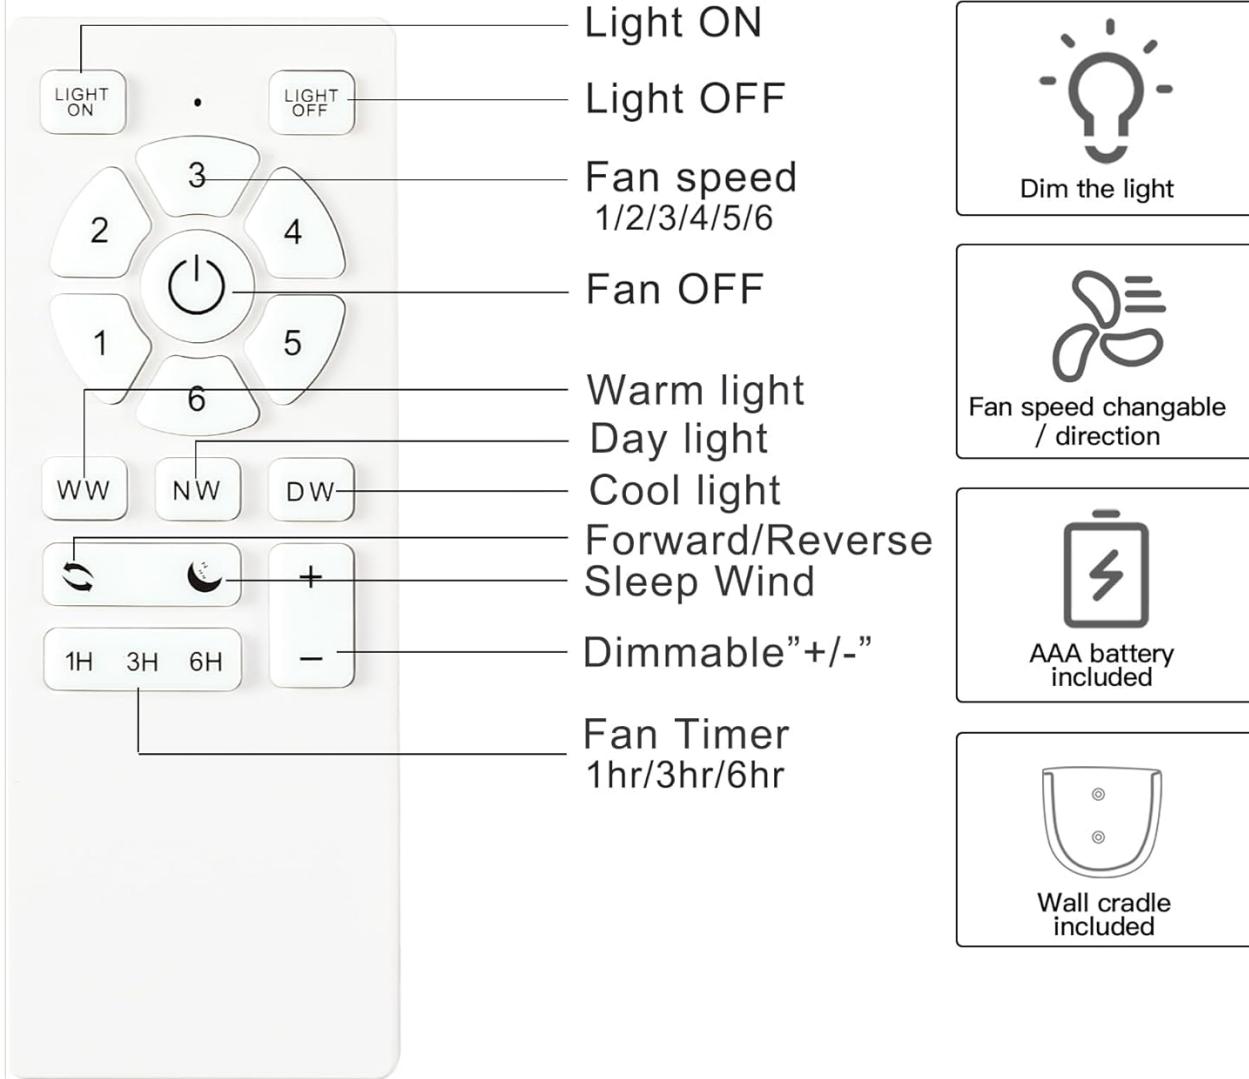


Image 5.1: The remote control for the ceiling fan, showing buttons for light control, fan speed, fan direction, light color temperature, dimming, and timer functions. A wall cradle is included for convenient storage.

5.1 Remote Control Functions

- Light ON/OFF:** Turns the integrated LED light on or off.
- Fan Speed (1-6):** Adjusts the fan speed from 1 (lowest) to 6 (highest).
- Fan OFF:** Turns the fan off.
- Light Color Temperature (WW/NW/DW):** Cycles through Warm White (3000K), Natural White (4000K), and Cool White (6000K) light settings.
- Dimmable (+/-):** Adjusts the brightness of the LED light.
- Forward/Reverse:** Changes the direction of the fan blades. Use forward mode for cooling (downward airflow) and reverse mode for circulating warm air in winter (upward airflow).
- Sleep Wind:** Activates a gentle, fluctuating fan speed for comfortable sleep.
- Fan Timer (1H/3H/6H):** Sets the fan to turn off automatically after 1, 3, or 6 hours.

52"

3 LIGHT COLOR CHANGABLE
BY REMOTE CONTROL



3000K
(WARM WHITE)

4000K
(NATURAL WHITE)

6000K
(COOL WHITE)

Image 5.2: The integrated LED light offers three color temperatures: 3000K (Warm White), 4000K (Natural White), and 6000K (Cool White), selectable via remote control.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or electrical components.
- Blade Cleaning:** Dust the fan blades regularly to prevent dust buildup, which can affect fan balance and performance.
- Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are secure. Loose connections can cause noise or wobble.
- No Lubrication Needed:** The fan motor is permanently lubricated and does not require oiling.

7. TROUBLESHOOTING

If you experience issues with your ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Verify all wire connections are secure; Replace remote batteries or re-pair remote.
Light does not work	Loose wire connection to light kit; LED driver issue; Remote control issue.	Check light kit wiring; Contact support if LED driver is suspected; Check remote batteries.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Use a blade balancing kit (not included); Ensure mounting bracket is securely fastened.
Noisy operation	Loose screws; Motor housing rubbing; Fan not level.	Check and tighten all screws; Ensure no parts are rubbing; Verify fan is installed level.
Remote control not working	Dead batteries; Remote not paired; Obstruction between remote and receiver.	Replace AAA batteries; Follow pairing instructions (if applicable); Ensure clear line of sight.

8. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

For technical assistance, replacement parts, or any questions not covered in this manual, please contact the seller or manufacturer's customer support. Contact information is typically provided in your product packaging or on the seller's website.

When contacting support, please have your product model number (B0F283WXCK) and purchase date available.