

[Manuals.plus](#) /

> [Veunti](#) /

> Veunti Kids 4G Smart Watch User Manual (Model 5b1f8c9a-12f9-48ef-960f-5d14739a552b)

Veunti 5b1f8c9a-12f9-48ef-960f-5d14739a552b

Veunti Kids 4G Smart Watch User Manual

Model: 5b1f8c9a-12f9-48ef-960f-5d14739a552b

Brand: Veunti

1. INTRODUCTION

Welcome to the user manual for your new Veunti Kids 4G Smart Watch. This guide provides detailed instructions on how to set up, operate, and maintain your smart watch, ensuring a safe and enjoyable experience for your child. Please read this manual carefully before using the device.

2. PRODUCT OVERVIEW

The Veunti Kids 4G Smart Watch is designed to keep children connected and safe, offering features like GPS tracking, video calling, SOS alerts, and various educational and entertainment functions.



Image 2.1: Front view of the Veunti Kids 4G Smart Watch, displaying the time and a whale graphic on the screen.

Key Features:

- 4G Network Connectivity
- GPS/LBS/WiFi Location Tracking
- One-Key SOS Function
- High-Definition Video Calls
- Voice Chat and Text Messaging
- GEO Fence Security Zones
- History Route Playback
- Built-in Camera
- Alarm Clock
- Pedometer

- Class Mode
- 1.85-inch Touchscreen Display
- IP67 Water Resistance
- 700 mAh Battery



Image 2.2: An illustration showcasing the multi-functional aspects of the Veunti Kids Smart Watch, including alarm, camera, pedometer, calculator, GPS, video calling, puzzle games, voice chat, SOS, phone call, and text.

3. SETUP GUIDE

3.1 SIM Card Installation

1. Ensure the watch is powered off before inserting the SIM card.
2. Locate the SIM card slot on the side of the watch.
3. Carefully open the SIM card tray cover.
4. Insert a 4G Nano SIM card (not included) with an active data plan. Ensure the SIM card is inserted in the correct orientation as indicated by the diagram near the slot.
5. Close the SIM card tray cover securely to ensure water resistance.
6. Power on the watch. The network signal indicator should appear on the screen.

3.2 App Installation and Pairing

To manage the watch features and track its location, parents need to install the companion application on their smartphone. The recommended app is "JuniCare".

1. Download the "JuniCare" app from the Apple App Store (for iOS devices) or Google Play Store (for Android devices).
2. Register a new account in the app using your email or phone number.
3. Once registered, log in to the app.
4. On the watch, navigate to the "QR Code" or "Bind Device" section to find the unique QR code.
5. In the JuniCare app, select "Add Device" or scan the QR code displayed on the watch screen.

6. Follow the on-screen prompts to complete the binding process. You may need to enter the watch's IMEI number, which can usually be found on the watch's packaging or in its settings.
7. After successful binding, you can configure contacts, set up GEO fences, and access other features through the app.



Image 3.1: A smartphone displaying the JuniCare application interface, showing a map with device location and various control options for the smart watch. Download links for Apple App Store and Google Play are also visible.

4. OPERATING INSTRUCTIONS

4.1 Making and Receiving Calls

- **Making Calls:** From the watch's main screen, swipe to find the "Contacts" or "Dialer" icon. Select a contact from the pre-set list (configured via the app) or dial a number directly.
- **Receiving Calls:** When an incoming call is received, the watch will ring and display the caller ID. Tap the green answer icon to accept or the red hang-up icon to reject.
- **Rejecting Unknown Calls:** This feature can be enabled in the JuniCare app to prevent calls from numbers not in the watch's contact list.

4.2 Video Calling

The watch supports high-definition video calls with pre-approved contacts.

- Navigate to the "Video Call" icon on the watch.
- Select a contact from the list to initiate a video call.
- Ensure both the watch and the recipient's device have a stable 4G connection.



Image 4.1: Depiction of a child initiating a video call on the smart watch and a parent receiving the video call on a smartphone, highlighting the high-definition video call feature.

4.3 SOS Emergency Call

In case of an emergency, the child can activate the SOS function.

- **Activation:** Long press the dedicated SOS button (usually on the side of the watch) for 3-5 seconds.
- The watch will automatically dial up to three pre-set SOS numbers in a loop until one answers.
- An alarm notification will also be sent to the parent's mobile app.



Image 4.2: An illustration demonstrating the one-click SOS button and GPS feature. The watch screen shows "SOS", with an arrow indicating the physical SOS button. A smartphone screen shows an incoming call from "Baby", illustrating the emergency call function.

4.4 GPS Tracking and GEO Fence

Parents can monitor the child's location in real-time and set safe zones.

- **Real-Time Location:** Open the JuniCare app on your smartphone to view the watch's current location on a map. The watch uses GPS, LBS (Location Based Service), and WiFi for precise positioning indoors and outdoors.
- **History Route:** The app allows you to view the watch's historical movement data.
- **GEO Fence:** Set up virtual safe zones (e.g., home, school) in the app. You will receive alerts if the watch enters or exits these designated areas.



Image 4.3: A hand holding a smartphone displaying a map with a prominent orange location pin, illustrating the precise real-time location tracking feature via GPS/LBS.

4.5 Voice Chat and Text Messaging

- **Voice Chat:** The watch supports short voice messages between the watch and the parent's app. Tap the voice chat icon, record your message, and send.
- **Text Messaging:** Send and receive short text messages with pre-approved contacts.

4.6 Camera

- Access the camera function from the watch's menu.
- Tap the screen to take photos. Photos can be viewed on the watch or uploaded to the app.

4.7 Pedometer

- The built-in pedometer tracks the child's steps throughout the day.
- View daily step counts on the watch or in the JuniCare app.

4.8 Alarm Clock and Class Mode

- **Alarm Clock:** Set multiple alarms via the JuniCare app to remind your child about tasks or wake-up times.
- **Class Mode:** Configure specific times in the app during which the watch will restrict calls and games, allowing the child to focus on school. Only SOS calls will function during this mode.



Image 4.4: A collage illustrating various features of the smart watch, including an alarm clock (child waking up), camera (children taking a selfie), pedometer (children running outdoors), and fun games (children playing on a console).

5. MAINTENANCE

5.1 Charging the Watch

- Use the provided magnetic charging cable.
- Align the charging pins of the cable with the charging contacts on the back of the watch.
- Connect the USB end of the cable to a standard USB power adapter (5V/1A recommended) or a computer's USB port.
- A charging indicator will appear on the watch screen.
- Do not overcharge the watch. Disconnect once fully charged.

5.2 Cleaning and Care

- Wipe the watch screen and body with a soft, dry, lint-free cloth.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- Keep the charging contacts clean and dry to ensure proper charging.

5.3 Water Resistance (IP67)

The watch is rated IP67, meaning it is protected from dust and can withstand immersion in water up to 1 meter for up to 30 minutes. However, it is not suitable for swimming, showering with hot water, or diving. Avoid exposing the watch to high-pressure water or steam.

Image 5.1: An image highlighting key specifications of the smart watch, including its 1.85-inch larger screen, IP67 certified water resistance, 700 mAh high battery life, and 240x280 pixel HD camera.

6. TROUBLESHOOTING

- **Watch not powering on:** Ensure the watch is fully charged. If it still doesn't turn on, try a different charging adapter or cable.
- **No network signal:** Check if the 4G Nano SIM card is correctly inserted and has an active data plan. Verify that the area has 4G coverage.
- **GPS location inaccurate:** Ensure the watch has a clear view of the sky for better GPS reception. LBS and WiFi positioning will be used in areas with poor GPS signal.
- **Cannot bind watch to app:** Double-check the QR code or IMEI number. Ensure the watch has an active network connection. Try restarting both the watch and the smartphone app.
- **Calls not going through:** Verify that the SIM card has sufficient balance/credit and that the contact numbers are correctly saved in the app. Check if "Reject Unknown Calls" is enabled for incoming calls.
- **Short battery life:** Reduce screen brightness, close unused applications, and ensure the watch is not constantly searching for a signal in areas with poor coverage.

7. SPECIFICATIONS

Feature	Detail
Model Number	5b1f8c9a-12f9-48ef-960f-5d14739a552b
Screen Size	1.85 Inches
Resolution	240 x 280 pixels
Memory Storage Capacity	512 MB
GPS	Built-in GPS
Connectivity	4G Network
Water Resistance	IP67 Certified
Battery	700 mAh (1 A battery included)
Band Material Type	Silicone
Item Weight	3.2 ounces
Package Dimensions	9.88 x 2.4 x 0.75 inches
Supported Applications	Alarm, Camera, GPS, Messages, Pedometer, Phone

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your Veunti Kids 4G Smart Watch, please refer to the contact information provided with your purchase or visit the official Veunti website. Keep your purchase receipt as proof of purchase for warranty claims.

