



Manuals.plus /

› Acdctek /

› Acdctek 30V AC/DC Adapter Instruction Manual for Fieety Elite 9-US Cordless Stick Vacuum Cleaner

Acdctek 30V AC/DC Adapter

Acdctek 30V AC/DC Adapter Instruction Manual

For Fieety Elite 9-US, Elite9, Elite9US Cordless Stick Vacuum Cleaner

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Acdctek 30V AC/DC Adapter. This adapter is specifically designed to provide power for and charge the battery of the Fieety Elite 9-US, Elite9, and Elite9US 25.9V 2200mAh 450W 40Kpa 7-in-1 Lightweight Cordless Stick Vacuum Cleaner. Please read this manual thoroughly before using the product and retain it for future reference.



Image 1.1: Front view of the Acdctek 30V AC/DC Adapter, showing the input specifications (AC100-240V 50/60Hz) and safety warnings for dry location use only.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following safety precautions:

- **CAUTION: RISK OF ELECTRIC SHOCK. DRY LOCATION USE ONLY.** This adapter is intended for indoor use in dry environments. Do not expose to water, moisture, or high humidity.
- Ensure the adapter's input voltage (100-240V 50-60Hz) matches your local power supply.
- Do not attempt to disassemble, modify, or repair the adapter. Refer all servicing to qualified personnel.
- Keep the adapter away from heat sources, direct sunlight, and flammable materials.
- Inspect the power cord and adapter for any signs of damage before each use. Do not use if damaged.
- This adapter is equipped with safety protection mechanisms: **OVP** (Over Voltage output Protection), **OCP** (Over Current output Protection), and **SCP** (Short Circuit output Protection) to safeguard your device.

- **Important Note:** The 25.9V mentioned for the vacuum cleaner refers to its battery voltage, not the charger's output voltage. This adapter provides a 30V output, which is correct for charging the 25.9V battery.

3. SETUP

Follow these steps to set up your Acdctek 30V AC/DC Adapter:

1. **Unpack:** Carefully remove the adapter from its packaging.
2. **Connect to Power Outlet:** Plug the adapter's AC input plug into a standard wall power outlet (100-240V AC, 50/60Hz).
3. **Connect to Vacuum Cleaner:** Locate the charging port on your Fieety Elite 9-US series cordless stick vacuum cleaner. Insert the adapter's DC output barrel connector into the vacuum's charging port. Ensure a firm connection.



Image 3.1: Angled view of the Acdctek 30V AC/DC Adapter, showing the main unit and the attached output cable with its barrel connector.

4. OPERATING INSTRUCTIONS

Once properly connected, the adapter will begin supplying power to your Fieety Elite 9-US vacuum cleaner. If the

vacuum cleaner is turned off, it will typically begin charging its internal battery.

- Observe the charging indicator on your vacuum cleaner (if available) to confirm that charging is in progress. Refer to your vacuum cleaner's manual for specific charging indicator behavior.
- Disconnect the adapter from the vacuum cleaner once charging is complete or when the vacuum is not in use for extended periods.
- Always unplug the adapter from the wall outlet when not in use.

5. MAINTENANCE

Proper care and maintenance will extend the life of your adapter:

- **Cleaning:** Disconnect the adapter from both the power outlet and the vacuum cleaner before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the adapter's casing, power cord, and connectors for any signs of wear, cuts, or damage. If any damage is found, discontinue use immediately and replace the adapter.

6. TROUBLESHOOTING

If you encounter issues with your Acdctek 30V AC/DC Adapter, refer to the following common troubleshooting steps:

- **No Power/Not Charging:**
 - Ensure the adapter is securely plugged into a working wall outlet. Test the outlet with another device.
 - Verify that the DC output connector is fully inserted into the vacuum cleaner's charging port.
 - Check the adapter's cable for any visible damage or kinks.
 - Confirm that the vacuum cleaner itself is functioning correctly and its battery is not completely depleted or faulty.
- **Adapter Overheating:**
 - It is normal for adapters to become slightly warm during operation. However, if the adapter becomes excessively hot, disconnect it immediately.
 - Ensure adequate ventilation around the adapter and avoid covering it.
 - Verify that the adapter is being used with a compatible device and not overloaded.

If these steps do not resolve the issue, please contact customer support.

7. SPECIFICATIONS

Product Type	AC/DC Power Adapter
Brand	Acdctek
Input Voltage	AC 100-240V, 50/60Hz
Output Voltage	DC 30V
Output Current	0.5A (500mA)
Output Power	15W
Connector Type	Round Barrel Connector
Safety Protection	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Compatible Devices	Fiety Elite 9-US, Elite9, Elite9US 25.9V 2200mAh Battery 450W 40Kpa 7-in-1 Lightweight Cordless Stick Vacuum Cleaner





Image 7.1: Side view of the Acdctek 30V AC/DC Adapter, highlighting the US-style plug and the barrel connector for the output cable.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Acdctek customer service. Details on how to reach support are typically provided with your purchase documentation or on the manufacturer's official website.

When contacting support, please have your product model (Acdctek 30V AC/DC Adapter) and purchase details readily available.