

mohomo Nova V5

mohomo Nova V5 Cordless Vacuum Cleaner Battery User Manual

1. INTRODUCTION

Thank you for choosing the mohomo Nova V5 Cordless Vacuum Cleaner Battery. This replacement battery is designed to provide reliable power for your Nova V5 cordless vacuum, ensuring extended cleaning performance. This manual contains important information regarding the safe operation, installation, charging, and maintenance of your battery. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To prevent injury or damage to your battery and vacuum cleaner, always observe the following safety precautions:

- Use only the original mohomo charger or a compatible charger specified for the Nova V5 battery.
- Do not disassemble, open, or shred the battery pack.
- Do not expose the battery to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.
- Do not subject battery packs to mechanical shock.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep battery packs out of the reach of children.
- Seek medical advice immediately if a cell or battery has been swallowed.
- Keep battery packs clean and dry.
- Recharge only with the charger specified by mohomo.
- Do not use any battery pack that is not designed for use with the equipment.
- Properly dispose of used batteries according to local regulations.

3. PRODUCT OVERVIEW

The mohomo Nova V5 replacement battery is a high-capacity Lithium-Ion power source designed for seamless integration with your Nova V5 cordless vacuum cleaner. It provides consistent power for effective cleaning.



Image: The mohomo Nova V5 Cordless Vacuum Cleaner Battery, showcasing its design and connection points.



Image: A detailed view of the mohomo Nova V5 replacement battery pack, highlighting its robust construction.

4. SETUP: BATTERY INSTALLATION

Follow these steps to install the replacement battery into your mohomo Nova V5 cordless vacuum cleaner:

1. Ensure the vacuum cleaner is powered off and unplugged from any charging source.
2. Locate the battery compartment on your Nova V5 vacuum cleaner. This is typically on the main body of the vacuum.
3. If an old battery is present, press the release button (if applicable) and slide it out.
4. Align the new mohomo Nova V5 battery with the compartment and slide it in until it clicks securely into place. Ensure it is fully seated.
5. The vacuum cleaner is now ready for charging or immediate use if the battery has a residual charge.

Professional after-sales service

3-year
warranty service



30-day
return and exchange



24-hour
online after-sales support



100%
Satisfaction Guarantee



Image: Visual guide for inserting the battery pack into the mohomo Nova V5 vacuum cleaner.

5. OPERATING: CHARGING AND USAGE

5.1 Charging the Battery

For optimal performance, fully charge the battery before first use. The battery can be charged while installed in the vacuum or separately if your model supports it.

1. Connect the power adapter to the charging port on the vacuum cleaner or directly to the battery if charging separately.
2. Plug the power adapter into a suitable wall outlet.
3. The battery indicator on the vacuum's display will show the charging status. It will typically illuminate or change color to indicate charging in progress and a full charge.
4. A full charge typically takes a few hours. Refer to your vacuum cleaner's main manual for precise charging times.



Image: The mohomo Nova V5 cordless vacuum cleaner being charged on its wall-mounted dock.

5.2 Battery Usage

Once fully charged, the battery provides power for your Nova V5 vacuum cleaner. The typical runtime is up to 65 minutes, depending on the power mode selected and the type of cleaning.

- Monitor the battery level indicator on the vacuum's display during use.
- For longer cleaning sessions, consider having a spare battery charged and ready.



Image: The digital display of the mohomo Nova V5 vacuum cleaner, indicating battery charge level and current operating mode.

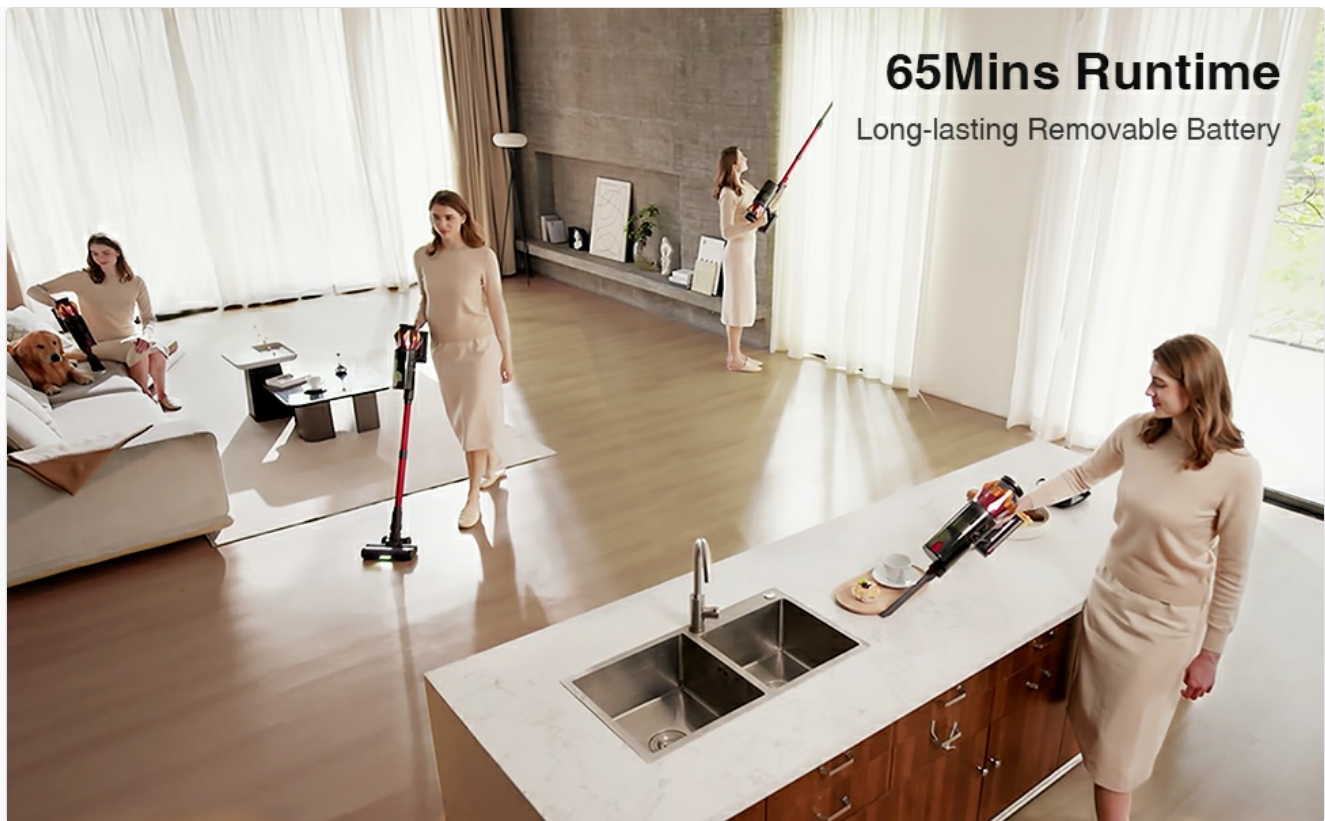


Image: An illustration highlighting the extended runtime of the mohomo Nova V5 cordless vacuum cleaner, powered by its removable battery.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your battery:

- **Storage:** If storing the battery for an extended period, charge it to approximately 50-60% and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Regular Charging:** Avoid completely draining the battery before recharging. Regular partial charges are generally better for Lithium-Ion battery health than full discharge cycles.
- **Cleaning:** Keep the battery contacts clean and free from dust or debris. Use a dry cloth to wipe them if necessary.
- **Temperature:** Do not expose the battery to temperatures below 0°C (32°F) or above 45°C (113°F) during operation or storage.

7. TROUBLESHOOTING

If you encounter issues with your battery, refer to the following common solutions:

Problem	Possible Cause	Solution
Battery not charging	Loose connection, faulty charger, battery too hot/cold, battery fault	Check all connections. Ensure charger is working. Allow battery to reach room temperature. Contact customer support if issue persists.
Short runtime	Battery not fully charged, high power mode usage, aging battery	Ensure full charge. Use lower power modes for longer runtime. Consider battery replacement if significantly degraded.

Problem	Possible Cause	Solution
Battery indicator error	Software glitch, battery fault	Restart the vacuum. If the problem persists, contact customer support.

If these solutions do not resolve the issue, please contact mohomo customer support for further assistance.

8. SPECIFICATIONS

- **Brand:** mohomo
- **Model:** Nova V5 (Battery)
- **Battery Cell Composition:** Lithium Ion
- **Battery Capacity:** 2800 Milliamp Hours
- **Item Weight:** 1.23 pounds
- **Package Dimensions:** 7.13 x 3.54 x 1.73 inches
- **Recommended Uses:** Cordless vacuum cleaner

9. WARRANTY AND SUPPORT

mohomo is committed to providing high-quality products and excellent customer service. Your Nova V5 replacement battery is backed by comprehensive support:

- **3-Year Warranty Service:** Enjoy peace of mind with our extended warranty.
- **30-Day Return and Exchange:** If you are not satisfied, you can return or exchange the product within 30 days of purchase.
- **24-Hour Online After-Sales Support:** Our dedicated support team is available around the clock to assist you.
- **100% Satisfaction Guarantee:** We strive for your complete satisfaction with our products.

48KPA

Upgraded Powerful Suction



Image: An overview of mohomo's professional after-sales services, including warranty, return policy, and customer support availability.

For support, please visit the official mohomo website or contact us through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

