



[Manuals.plus](#) /

› [VEVOR](#) /

› VEVOR Outdoor Camping Oven and Stove Combo (Model FD998) Instruction Manual

VEVOR FD998

VEVOR Outdoor Camping Oven and Stove Combo (Model FD998) Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, setup, and maintenance of your VEVOR 2-in-1 Portable Gas Camping Stove Oven Combo, Model FD998. Please read all instructions carefully before use to ensure proper functionality and safety.



Image 1.1: The VEVOR Outdoor Camping Oven and Stove Combo, showcasing its compact design.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in fire, explosion, serious injury, or death.

- **Outdoor Use Only:** This appliance is designed for outdoor use only. Do not operate indoors or in enclosed spaces. Ensure adequate ventilation.
- **Fuel Type:** Use only universal butane canisters as specified by the manufacturer. Do not use other fuel types.

- **Gas Leak Check:** Before each use, check for gas leaks using a soapy water solution. Never use an open flame to check for leaks.
- **Clearance:** Maintain a safe distance from combustible materials (walls, tents, foliage, etc.) during operation.
- **Stable Surface:** Always operate the appliance on a firm, level, non-combustible surface.
- **Hot Surfaces:** The appliance becomes hot during use. Allow it to cool completely before handling or storing. Use heat-resistant gloves if necessary.
- **Children and Pets:** Keep children and pets away from the appliance during operation and while it is cooling.
- **Butane Canister Overheating Warning:** User reports indicate that the butane canister for the stove burner may become excessively hot and cease functioning if the oven is operated for extended periods. To prevent this, it is recommended to **remove the stove's butane canister when using the oven for prolonged cooking sessions**. Always monitor the appliance during use.
- **Timer Function:** The 60-minute timer is for convenience but does not replace supervision. Always monitor cooking progress.

3. PRODUCT OVERVIEW

The VEVOR FD998 is a versatile 2-in-1 outdoor cooking appliance, combining a gas stove on top with a functional oven below. It is designed for portability and efficiency in various outdoor settings.

2-in-1 Quick Cooking

Stove on Top, Oven on Bottom



Image 3.1: Illustrates the 2-in-1 functionality with a stovetop burner and an oven compartment.

Key Features:

- **2-in-1 Design:** Combines a stovetop burner and an oven for diverse cooking options.
- **Adjustable Flame Control:** Separate control knobs for precise heat adjustment for both stove and oven.
- **60-Minute Timer:** Integrated timer for convenient oven operation.
- **Windproof Design:** Features a heat-sealed chamber and raised wind guard for stable flame performance in outdoor conditions.
- **25L Capacity Oven:** Spacious oven interior, suitable for various dishes.

Outdoor Windproof & Low Smoke

Flame Won't Extinguish



Image 3.2: Demonstrates the windproof design, showing the insulated chamber and raised wind guard.

4. SETUP

4.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Check for any damage during transit. If damaged, do not operate and contact customer support.
3. Ensure all components listed in the specifications are present.

4.2 Fuel Installation (Butane Canister)

The appliance uses universal butane canisters. There are separate compartments for the stove and oven butane canisters.

1. Open the butane canister compartment door.
2. Align the collar of the butane canister with the appliance's connector.
3. Push the canister firmly into place until it clicks and locks securely. Ensure a tight fit to prevent gas leaks.
4. Close the compartment door.
5. Repeat for the second canister if using both stove and oven simultaneously.

Important: As noted in the safety section, consider removing the stove's butane canister when operating the oven for extended periods to prevent overheating of the stove's canister.

Video 4.1: A demonstration of the VEVOR Camping Oven Stove Combo, including setup and component overview.

5. OPERATING INSTRUCTIONS

5.1 Stove Operation

1. Ensure a butane canister is correctly installed in the stove compartment.
2. Place cookware on the stovetop burner grate.
3. Turn the 'Stove Flame Control Knob' to the 'Ignite' position. You should hear a click and see the flame ignite.
4. Adjust the flame intensity by turning the knob between 'Low' and 'High' as needed.
5. To turn off, rotate the knob to the 'Off' position.

5.2 Oven Operation

The oven features a 60-minute timer and adjustable flame control.

Adjustable Flame

Explore The Possibilities Of Various Ingredients



Image 5.1: Close-up of the control panel, showing the stove flame control, oven timer, oven ignition switch, and oven flame control knobs.

1. Ensure a butane canister is correctly installed in the oven compartment.
2. Place food inside the oven on the provided grill rack or baking tray.
3. Set the desired cooking time using the 'Oven Timer Knob' (0-60 minutes). The oven will not ignite if the timer is not set.
4. Press and hold the 'Oven Ignition Security Switch' (marked with a hand icon) for 5-8 seconds while simultaneously turning the 'Oven Flame Control Knob' to the 'Ignite' position. You should see the oven flame ignite through the viewing window.
5. Once ignited, release the security switch.
6. Adjust the oven flame intensity by turning the 'Oven Flame Control Knob' between 'Low' and 'High' to

achieve the desired temperature. The oven can reach 270°C (518°F) in 10 minutes and 350°C (662°F) in 15 minutes.

7. When the timer expires, the oven flame will automatically shut off. To manually turn off the oven, rotate the 'Oven Flame Control Knob' to the 'Off' position.



Image 5.2: The oven interior, showing food baking on the rack and tray.

5.3 Timer Usage

The 60-minute timer is a mechanical timer. Turn the knob clockwise to set the desired cooking duration. The timer will tick down and automatically shut off the oven burner when it reaches zero. This feature helps prevent overcooking.

Video 5.3: A detailed overview of the VEVOR 2-in-1 Outdoor Oven and Gas Stove Combo in operation.

6. MAINTENANCE

6.1 Cleaning

- Always ensure the appliance is completely cool before cleaning.
- Remove butane canisters before cleaning.
- Wipe exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.

- The grill rack and baking tray can be washed with warm soapy water.
- Ensure all parts are dry before reassembly or storage.

6.2 Storage

- Store the appliance in a cool, dry place, away from direct sunlight and moisture.
- Always remove butane canisters before storing the appliance.
- Keep the appliance covered to protect it from dust and debris.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stove/Oven does not ignite.	No butane canister installed or canister empty. Canister not properly connected. Ignition switch not held long enough (oven). Timer not set (oven).	Install a new butane canister. Ensure canister is fully inserted and locked. Hold the oven ignition security switch for 5-8 seconds. Set the oven timer before attempting to ignite.
Flame is weak or inconsistent.	Low fuel in canister. Canister connection issue. Wind interference.	Replace butane canister. Re-seat the butane canister. Ensure the appliance is positioned away from strong winds or utilize the built-in wind guard.
Gas smell detected.	Gas leak.	Immediately turn off all controls. Remove butane canisters. Move appliance to a well-ventilated area. Check all connections with soapy water. If leak persists, do not use and contact customer support.
Stove's butane canister becomes very hot during oven use.	Heat transfer from oven to stove's canister compartment.	This is a known issue reported by some users. To prevent overheating and potential malfunction of the stove's canister, remove the stove's butane canister when operating the oven for extended periods.

8. SPECIFICATIONS

The following table outlines the key specifications for the VEVOR Outdoor Camping Oven and Stove Combo (Model FD998).



Specification

Item Model Number: **FD998**

Material: **Carbon Steel + Die-Cast Aluminum**

Capacity: **25L**

Color: **Dark Green**

Product Weight: **19.84 lbs / 9 kg**

Product Size: **19.29 x 14.17 x 14.96 inches / 490 x 360 x 380 mm**

Image 8.1: Visual representation of the product dimensions and key specifications.

Specification	Detail
Brand	VEVOR
Model Number	FD998
Capacity	25L
Material	Carbon Steel + Die-Cast Aluminum
Fuel Type	Butane Gas (Universal Canister Compatible)

Specification	Detail
Power Source	Gas Powered
Item Weight	19.8 Pounds (9 kg)
Product Size (L x W x H)	19.29 x 14.17 x 14.96 inches (490 x 360 x 380 mm)
Timer	0-60 Minute Mechanical Timer
Manufacturer	VEVOR
UPC	197988678175

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official VEVOR website or contact your retailer. Keep your purchase receipt for warranty claims.