

[Manuals.plus](#) /

› [Masko](#) /

› MASKO 7.2m Telescopic Wash Brush with Water Connection User Manual

Masko 7.2 Meter

MASKO 7.2m Telescopic Wash Brush with Water Connection User Manual

Model: 7.2 Meter | Brand: Masko

INTRODUCTION

The MASKO Telescopic Wash Brush is designed for efficient and gentle cleaning of various high surfaces without the need for a ladder. Its extendable aluminum handle, integrated water connection, and soft bristles make it suitable for windows, verandas, solar panels, RVs, and boats. This manual provides essential information for the safe and effective use of your wash brush.



Image: The MASKO 7.2m Telescopic Wash Brush, fully assembled, showcasing its extendable pole and brush head with water connection.



Image: Key features of the MASKO brush, including extra soft bristles, an internal water hose, quick clamps for pole extension, and an anti-slip grip for comfortable handling.

PACKAGE CONTENTS

Please verify that all components are present in your package:

- 1x MASKO Telescopic Wash Brush (7.2 Meter length)
- 1x Soap Dispenser
- 1x Pair of Anti-slip Gloves
- 1x Water connection hose with quick connector
- 1x Brush head with soft bristles
- 1x Angle adapter for brush head

LIEFER UMFANG

Stiel **1**

Nylonbürste **2**

Düsenverteiler **3**

Einstellwinkel **4**

Seifenspender **5**

Durchführschlauch **6**

Doppleadapter für
2 Aufsätze **7**



Image: A visual representation of all included components: telescopic pole, nylon brush, nozzle distributor, angle adjustment, soap dispenser, hose, and double adapter.

SETUP INSTRUCTIONS

- 1. Attach the Brush Head:** Securely fasten the brush head to the end of the telescopic pole. If desired, use the angle adapter to adjust the brush angle for optimal contact with the cleaning surface.
- 2. Connect the Water Hose:** Locate the water connection point on the telescopic pole. Attach the provided water hose to this connection using the quick connector. Ensure a tight fit to prevent leaks.
- 3. Install the Soap Dispenser (Optional):** If using cleaning solution, attach the soap dispenser between your garden hose and the brush's water connection. Fill the dispenser with your preferred cleaning agent.
- 4. Connect to Water Supply:** Connect the other end of the water hose (or soap dispenser, if used) to a standard garden hose connected to your water supply.
- 5. Extend the Pole:** Loosen the quick-release clamps on the telescopic pole sections. Extend the pole to your desired length, ensuring each section is securely locked in place by tightening the clamps.

KEINE STELLE BLEIBT UNERREICHBAR

7,2M

STELLEN SIE DEN AUSFAHRBAREN
STIEL AUF IHRE GEWÜNSCHTE
LÄNGE EIN



Image: A person extending the telescopic pole to reach a high surface, demonstrating the brush's extended reach and the included soap dispenser and gloves.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe cleaning:

1. **Prepare the Area:** Ensure the area below the cleaning surface is clear of obstacles. Wear the provided anti-slip gloves for a secure grip.
2. **Turn on Water:** Slowly turn on the water supply. The water will flow through the pole and out of the integrated nozzles on the brush head.
3. **Apply Cleaning Solution (if using dispenser):** If you have attached the soap dispenser, adjust its setting to release the cleaning solution as needed.
4. **Begin Cleaning:** Gently guide the brush over the surface to be cleaned. The soft bristles are designed to remove dirt without scratching delicate surfaces like windows, solar panels, and vehicle paint.

5. **Adjust Angle:** Use the adjustable angle feature of the brush head to maintain optimal contact with sloped or angled surfaces, such as solar panels or car roofs.
6. **Rinse:** After scrubbing, turn off the soap dispenser (if used) to rinse the surface with clear water. Continue rinsing until all soap residue is removed.
7. **Retract and Store:** Once cleaning is complete, turn off the water supply, disconnect the hose, and retract the telescopic pole sections. Clean the brush head before storing.



Image: Collage showing the telescopic brush cleaning solar panels, exterior blinds, a patio roof, and a car roof, highlighting its versatility.

AUSGEZEICHNETE FUNKTIONALITÄT

EINSTELL
WINKEL



INTEGRIERTE
DÜSEN

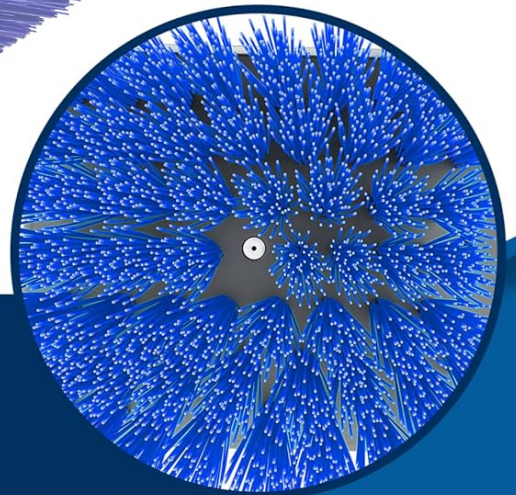


Image: Close-up view of the brush head, illustrating its adjustable angle mechanism and integrated water nozzles for efficient cleaning.

PROBLEMLOSER EINSATZ

Für Reinigung, Kratz- und Schrubbarbeiten, Einseifen und ähnliche Anwendungen



Image: The telescopic wash brush being used to clean a car, showing the integrated soap dispenser and the user wearing the provided gloves for a problem-free application.

MAINTENANCE

- **Clean the Brush Head:** After each use, rinse the brush head thoroughly with clean water to remove any dirt or soap residue. This prevents buildup and maintains bristle softness.
- **Inspect Water Connections:** Regularly check all water connections and seals for wear or damage. Replace any worn seals to prevent leaks.
- **Clean the Pole:** Wipe down the telescopic pole with a damp cloth to remove dirt. Ensure the quick-release clamps are free of debris for smooth operation.
- **Storage:** Store the wash brush in a clean, dry place, away from direct sunlight and extreme temperatures. Retract the pole to its shortest length for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaks from connections.	Loose connection, worn O-rings/seals.	Ensure all connections are tightened. Inspect and replace O-rings/seals if damaged.
No water flow from brush.	Water supply off, kinked hose, clogged nozzles.	Check water supply. Straighten hose. Clean brush nozzles of any debris.
Telescopic pole sections do not extend/retract smoothly.	Clamps not fully loosened/tightened, dirt in mechanism.	Ensure clamps are fully loosened before extending and fully tightened after. Clean pole sections and clamps.
Soap dispenser not working.	Dispenser empty, clogged, or incorrectly attached.	Refill dispenser. Check for blockages. Ensure dispenser is correctly installed in the water line.

SPECIFICATIONS

- Brand:** Masko
- Model:** 7.2 Meter Telescopic Wash Brush
- Handle Material:** Aluminum
- Brush Material:** Plastic with soft bristles
- Color:** Blue
- Extendable Lengths Available:** 5.4 m, 7.2 m, 9.1 m, 10.8 m (This model is 7.2m)
- Water Connection:** Yes, with quick connector
- Included Components:** Soap dispenser, anti-slip gloves
- Recommended Surfaces:** Windows, PV installations, verandas, facades, cars, trucks, boats, delicate surfaces.
- Country of Origin:** China



Image: A diagram illustrating the various dimensions of the telescopic wash brush, including pole length (1.52m-7.2m), brush width (60cm), and hose length (14m).

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact MASKO customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question