

[manuals.plus](#) /› [Toyomi](#) /› [Toyomi AFG 7979 UltiChef Smart Grill & Airfryer, 13L User Manual](#)**Toyomi AFG 7979**

Toyomi AFG 7979 UltiChef Smart Grill & Airfryer, 13L User Manual

1. INTRODUCTION

Thank you for choosing the Toyomi AFG 7979 UltiChef Smart Grill & Airfryer. This versatile 13-liter appliance combines seven powerful functions: Bake, Roast, Sauté, Toast, Dehydrate, Air Fry, and Grill, designed to simplify your cooking experience. This manual provides essential information for safe operation, maintenance, and optimal performance of your new appliance. Please read it thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during operation.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Toyomi UltiChef Smart Grill & Airfryer.



This image displays the Toyomi AFG 7979 UltiChef Smart Grill & Airfryer. The appliance is black with a sleek, rectangular design. The front features a large digital control panel showing cooking functions like Air Fry, Grill, Bake, Griddle, Broil, Roast, and Settings. The display indicates a target temperature of 200°C and a timer of 08:30. Below the control panel is a viewing window showcasing cooked chicken and grilled vegetables. A smart precision probe is shown connected to the side of the unit, extending towards the front.

Key Features:

- **Smart Control Panel:** Intuitive digital interface for selecting cooking functions, adjusting temperature, and setting time.
- **Double Layered Glass Viewing Window:** Allows monitoring of cooking progress without opening the appliance.
- **Top and Bottom Heating Elements:** Ensures even and consistent cooking results.
- **Cyclonic Fan and Splash Filter:** Facilitates efficient air circulation for air frying and grilling, while minimizing mess.

- **Smart Precision Probe:** For accurate internal temperature monitoring of food, ensuring perfect doneness.

Control Panel Overview:

The digital control panel features various buttons and indicators:

- **Function Selection:** Buttons for Air Fry, Grill, Bake, Griddle, Broil, Roast, and Preset options.
- **Temperature/Time Display:** Shows Target Temp and Current Temp, along with cooking time.
- **Adjustment Buttons:** Up/Down arrows for adjusting temperature and time.
- **Power Button:** To turn the appliance on or off.
- **Start/Pause Button:** To begin or temporarily stop the cooking cycle.
- **Manual/Preset:** Toggle between manual settings and pre-programmed cooking options.

4. SETUP

Before using your Toyomi UltiChef Smart Grill & Airfryer for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials, including any protective films or stickers.
2. **Clean:** Wash all removable parts (cooking pan, grill plate, etc.) with warm, soapy water. Wipe the interior and exterior of the main unit with a damp cloth. Dry thoroughly.
3. **Placement:** Place the appliance on a stable, level, heat-resistant surface. Ensure there is at least 15 cm (6 inches) of clear space on all sides and above the unit for proper ventilation. Do not place it near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for use.
5. **Initial Burn-Off (Optional):** For the first use, it is recommended to run the appliance empty for about 10-15 minutes at a medium temperature (e.g., 180°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure good ventilation during this process.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- Press the **Power** button to turn the appliance on. The display will illuminate.
- Press and hold the **Power** button to turn the appliance off.

5.2 Selecting Cooking Functions

The UltiChef offers multiple cooking modes:

1. With the appliance on, use the function buttons (e.g., **Air Fry, Grill, Bake, Roast, Broil, Griddle**) to select your desired cooking method.
2. Alternatively, press the **Preset** button to cycle through pre-programmed settings for common foods.

5.3 Setting Temperature and Time

- After selecting a function, the display will show default temperature and time settings.

- Use the **Up/Down arrows** next to 'Target Temp' to adjust the temperature.
- Use the **Up/Down arrows** next to the timer to adjust the cooking time.
- Once settings are confirmed, press the **Start/Pause** button to begin cooking.

5.4 Using the Smart Precision Probe

The Smart Precision Probe ensures your food reaches the perfect internal temperature.

1. Insert the probe into the thickest part of the food, avoiding bones.
2. Plug the probe's connector into the designated port on the side of the appliance.
3. Select your desired cooking function and set the target internal temperature using the controls.
4. The appliance will monitor the food's internal temperature and automatically stop cooking once the target temperature is reached.

5.5 Preheating

For best results, especially with grilling and air frying, preheating the appliance is recommended. Allow the unit to reach the set temperature before adding food. The display will indicate when preheating is complete.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your appliance and ensure optimal performance.

- **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** Wipe the interior with a damp cloth and mild detergent. For stubborn food residue, a non-abrasive sponge can be used.
- **Removable Parts:** The cooking pan, grill plate, and other removable accessories can be washed in warm, soapy water. They may also be dishwasher safe (refer to specific accessory instructions).
- **Precision Probe:** Wipe the probe with a damp cloth and mild soap. Do not immerse the probe's connector end in water.
- **Storage:** Ensure the appliance and all accessories are clean and dry before storing. Store in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your Toyomi UltiChef Smart Grill & Airfryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button firmly.
Food not cooking evenly.	Overcrowding the cooking pan; incorrect temperature/time; food not flipped/stirred.	Do not overcrowd the pan; cook in batches if necessary. Adjust temperature and time. Flip or stir food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Fat/oil residue from previous cooking; high-fat food.	Clean the appliance thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Error code displayed.	Internal malfunction; sensor issue.	Unplug the appliance for 5 minutes, then plug it back in. If the error persists, contact customer support.

If the problem persists after trying these solutions, please contact Toyomi customer support for assistance.

8. SPECIFICATIONS

Technical specifications for the Toyomi AFG 7979 UltiChef Smart Grill & Airfryer:

- **Brand:** Toyomi
- **Model:** AFG 7979
- **Capacity:** 13 Liters
- **Wattage:** 1700 watts
- **Power Source Type:** Electric
- **Material:** Stainless Steel
- **Control Type:** Digital
- **Product Dimensions:** 44.5D x 44.5W x 32.5H centimetres
- **Item Weight:** 10.32 kg
- **Special Features:** Digital Display, Smart Precision Probe Storage
- **Included Components:** 1 x Toyomi AFG 7979 UltiChef Smart Grill & Airfryer, 13L

9. WARRANTY AND SUPPORT

Your Toyomi AFG 7979 UltiChef Smart Grill & Airfryer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or inquiries regarding your product, please contact Toyomi customer service through their official website or the contact information provided in your product documentation. When contacting support, please have your model number (AFG 7979) and purchase details ready.