



Manuals.plus /

- › Caroma /
- › Caroma Peak Electric Scooter User Manual

## Caroma P7

# Caroma Peak Electric Scooter User Manual

Model: P7

## 1. INTRODUCTION

---

This manual provides essential information for the safe operation, maintenance, and troubleshooting of your Caroma Peak Electric Scooter. Please read it thoroughly before your first ride and keep it for future reference. Your Caroma Peak Electric Scooter is designed for efficient and comfortable commuting, featuring a powerful motor, long-range battery, and adjustable components for a personalized riding experience.



Image: The Caroma Peak Electric Scooter, showcasing its design with an adjustable seat and a rear basket, ready for use.

## 2. SAFETY GUIDELINES

Your safety is paramount. Always adhere to local traffic laws and regulations. Wear a helmet and appropriate protective gear. Perform a pre-ride inspection before each use.


- Always wear a certified helmet and other protective gear (knee pads, elbow pads).
- Familiarize yourself with local laws regarding electric scooter use.
- Do not ride under the influence of alcohol or drugs.
- Avoid riding in heavy rain, snow, or icy conditions.
- Ensure both handlebars are locked tightly and the folding lock is secure before riding.
- This scooter is UL 2272 certified for electrical safety.

## 3. SETUP AND ASSEMBLY

The Caroma Peak Electric Scooter requires minimal assembly. A toolkit is included for your convenience.

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Handlebar Installation:** Insert the handlebar stem into the main frame and secure it firmly using the provided quick-release clamp and safety pin. Ensure it clicks into place.
3. **Seat Assembly:** Attach the seat post to the designated slot at the rear of the scooter. Adjust the seat height to your comfort and secure it with the quick-release lever.
4. **Basket Attachment:** Secure the removable basket to the rear rack using the provided hardware.
5. **Initial Charge:** Before first use, fully charge the scooter's battery. Connect the power adapter to the charging port and then to a power outlet. The LCD display will indicate charging status.

## Removable Basket

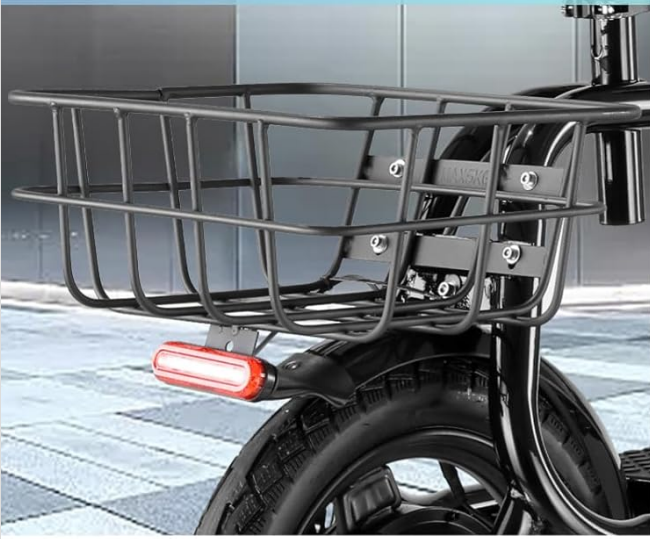

## Bright Headlight



## Wide Non-Slip Deck



## Battery Level Display



Image: Close-up view of the adjustable seat and handlebar, highlighting the height adjustment mechanism for rider comfort.



10s QUICK FOLD

Take it anywhere you want

Image: A man demonstrating the 10-second quick-fold feature of the scooter, showing it being placed into a car trunk for transport.

## 4. OPERATING INSTRUCTIONS

Operating your Caroma Peak Electric Scooter is straightforward. Always ensure you are in a safe environment before riding.

- **Power On/Off:** Press and hold the power button on the LCD display to turn the scooter on or off.
- **Acceleration:** Gently twist the right handlebar to accelerate. The scooter will smoothly increase speed.
- **Braking:** Use the brake levers on the handlebars to engage the front and rear disc brakes. Apply both brakes simultaneously for optimal stopping power.
- **LCD Display:** The LCD display clearly shows the battery level. Monitor this to plan your rides and recharges.
- **Lights:** The scooter is equipped with bright front and rear lights, including brake tail lights, for enhanced visibility, especially at night. Activate them as needed.
- **Folding:** To fold the scooter, disengage the handlebar and frame locks. The design allows for quick and easy folding for storage or transport.



Recommended Height  
**5'4"-6'4"**



Bicycle Weight  
**28 LBS**



Load capacity  
**Max 300 LBS**



**Total Length**  
**49"**



**Seat Height**  
**28"-35"**



**Handlebar Height**  
**32"-39"**

Image: A composite image detailing the removable basket, bright headlight, wide non-slip deck, and the battery level display on the scooter.

# 14" Durable Tires+Dual Disc Brake

*wide tires combined with dual brake systems always protect your riding safety*



Image: A close-up of the 14-inch durable tires and the dual disc brake system, emphasizing safety and control.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and general operation of the Caroma Electric Scooter P2/P6/P7 models.

## 5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Tire Pressure:** Check tire pressure regularly and inflate to the recommended PSI (refer to tire sidewall for details).
- **Brake Inspection:** Periodically inspect brake pads and cables for wear. Adjust or replace as necessary.
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using high-pressure water jets directly on electrical components.
- **Battery Care:**
  - Charge the battery fully after each use.
  - Do not allow the battery to completely drain before recharging.
  - If storing for an extended period, charge the battery to about 50-70% and recharge every 2-3 months.

- **General Check:** Before each ride, ensure all screws, bolts, and quick-release mechanisms are tight and secure.

## 6. TROUBLESHOOTING

If you encounter any issues with your Caroma Peak Electric Scooter, please refer to the following common solutions. If the problem persists, contact customer service.

Problem	Possible Cause	Solution
Scooter does not power on.	Low battery; loose connections.	Charge the battery fully. Check all cable connections.
Reduced range or speed.	Low tire pressure; battery degradation; heavy load.	Inflate tires to correct pressure. Ensure battery is fully charged. Reduce load if possible.
Brakes feel loose or ineffective.	Brake cable adjustment needed; worn brake pads.	Adjust brake cable tension. Inspect and replace worn brake pads.
Handlebar has excessive play.	Folding mechanism not fully secured.	Ensure the handlebar quick-release and safety pin are fully engaged and tightened.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Caroma
Model Name	P7
Motor Power	750W (Peak 1200W) Brushless Hub Motor
Battery	48V High-Capacity
Top Speed	Up to 20 mph
Maximum Range	Up to 30 miles (on a single charge)
Tire Size	14 Inches
Tire Type	Pneumatic
Brake Style	Front Braking, Rear Braking (Dual Disc Brake System)
Weight Limit	300 Pounds
Item Weight	60 Pounds
Product Dimensions	49"L x 9"W x 24"H
Charging Time	4 Hours
Frame Material	Aluminum
Special Features	Adjustable Handlebar Height, Basket, Foldable, Lights, Seat
Certifications	UL 2272 Certified



Image: A diagram illustrating the key dimensions of the Caroma Peak Electric Scooter, including total length, seat height, and handlebar height.

## 8. WARRANTY AND SUPPORT

Caroma provides a **12-month warranty** for this electric scooter, ensuring quality and reliability. If you encounter problems when using the product, please refer to this manual. If the problem cannot be solved, feel free to contact our customer service.

For support, please reach out via email: [caromaservices@outlook.com](mailto:caromaservices@outlook.com). We aim to reply within 24 hours and resolve issues promptly.