

[manuals.plus](#) /

› [Mixcous](#) /

› [Mixcous White 7-Drawer Dresser Instruction Manual](#)

Mixcous CD-5741032

Mixcous White 7-Drawer Dresser Instruction Manual

Model: CD-5741032

INTRODUCTION

Thank you for choosing the Mixcous White 7-Drawer Dresser. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The Mixcous White 7-Drawer Dresser, showcasing its design and functionality in a room.

SAFETY INFORMATION

- Anti-Tipping Kit:** For your safety, it is crucial to install the included anti-tipping kit. This prevents accidental tipping of the dresser, especially in households with children or pets. Follow the specific instructions provided with the kit.
- Weight Limits:** Do not exceed the maximum weight capacity for each drawer (30 lbs) or the dresser top surface (130 lbs). Overloading can compromise stability and structural integrity.
- Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all hardware is securely tightened before use.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dresser Panels (Top, Bottom, Sides, Back)
- Drawer Components (Fronts, Sides, Backs, Bottoms)

- Hardware Pack (Screws, dowels, cam locks, drawer slides, handles, anti-tipping kit)
- Installation Manual

ASSEMBLY INSTRUCTIONS

The Mixcous 7-Drawer Dresser features an intuitive assembly system with pre-sorted components. For detailed step-by-step instructions, refer to the included installation manual. QR-accessible video tutorials are also available for visual guidance.

1. Step 1: Prepare Panels

Lay out the top, bottom, and side panels. Attach any pre-assembly hardware as indicated in the manual.

2. Step 2: Assemble Frame

Connect the main frame components using the provided hardware. Ensure all connections are secure and aligned.

3. Step 3: Attach Back Panel and Legs

Secure the back panel to the dresser frame. Attach the solid wood legs to the base of the dresser.

4. Step 4: Assemble and Insert Drawers

Assemble each of the seven drawers according to the instructions. Install the drawer slides onto both the dresser frame and the drawers. Carefully insert the assembled drawers into their respective slots.

5. Step 5: Install Anti-Tipping Kit

Follow the separate instructions for installing the anti-tipping kit to a wall stud. This step is critical for safety.

Easy Installation

Clear installation instructions to make DIY easier and clearer.

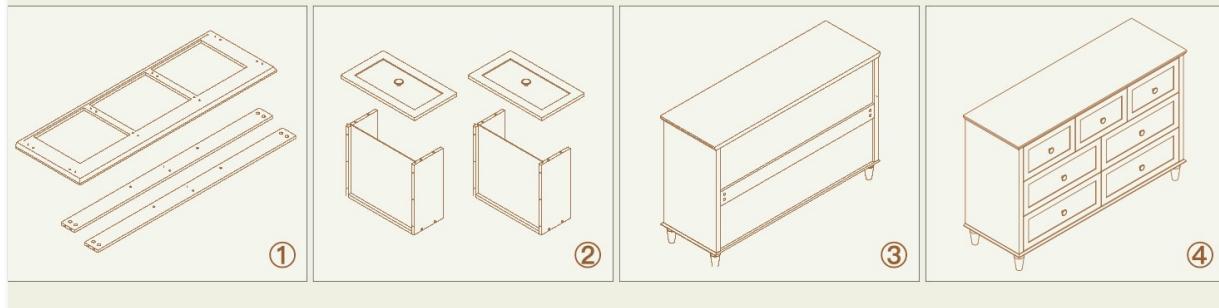


Image: Visual guide illustrating the four main stages of dresser assembly.

OPERATION AND USAGE

The Mixcous 7-Drawer Dresser is designed for versatile storage and display. Its seven drawers offer ample space for organizing various items.

- **Drawer Functionality:** Each drawer is equipped with smooth-gliding slides for easy opening and closing. The dresser features seven drawers of uniform depth but graduated widths (14.4"-21.7") to accommodate different items.
- **Storage Capacity:** Utilize the drawers for clothing, linens, accessories, or other personal items. The varied drawer sizes allow for flexible organization.

- **Top Surface Use:** The wide top surface (47.24"W x 15.55"D) can be used to display decorative items, lamps, or smart home devices. It is also suitable for use as a TV stand for televisions up to 65 inches, provided the weight limit is not exceeded.

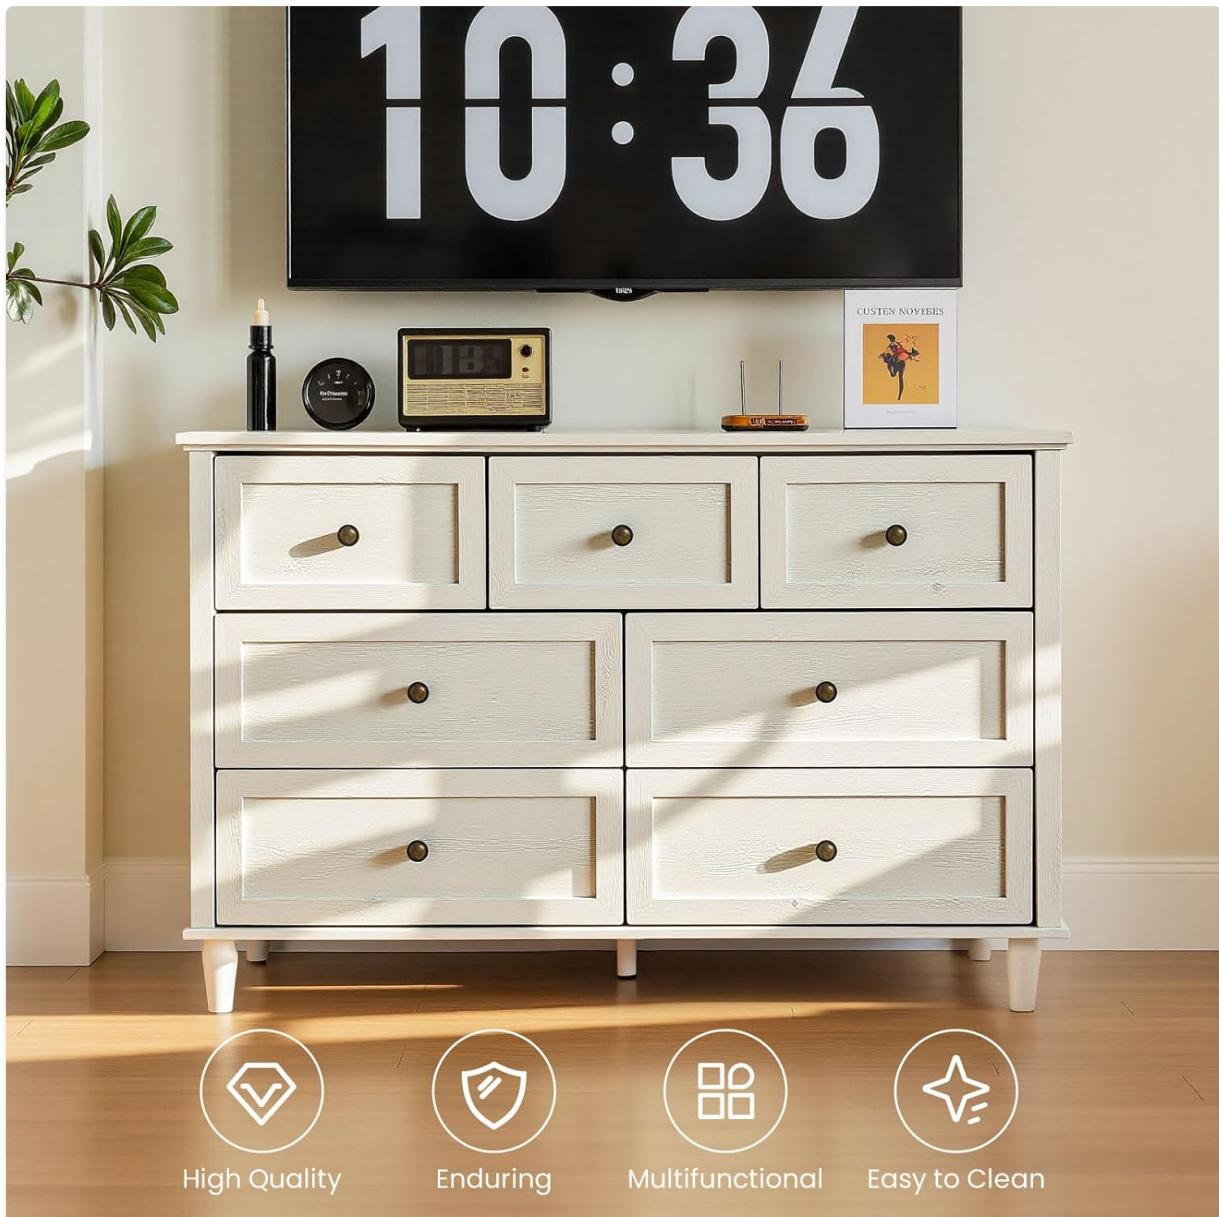


Image: An example of the dresser's spacious drawers, organized with various clothing items.



Image: The dresser functioning as a TV stand, illustrating its versatility in a living space.

CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your Mixcous dresser.

- **Cleaning:** Wipe the dresser surfaces with a dry, soft cloth. Avoid using wet cloths or abrasive cleaners, as these can damage the finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent staining or damage to the engineered wood.
- **Sunlight:** Avoid placing the dresser in direct sunlight for prolonged periods, as this can cause fading or discoloration.
- **Humidity:** Maintain a stable room temperature and humidity level to prevent warping or cracking of the wood material.

TROUBLESHOOTING

If you encounter any issues with your dresser, consider the following:

- **Missing or Damaged Parts:** If you find any parts missing or damaged upon unboxing, do not proceed with assembly. Contact customer support immediately for assistance.
- **Drawer Not Sliding Smoothly:** Ensure that the drawer slides are correctly installed and aligned on both the drawer and the dresser frame. Check for any obstructions in the tracks.
- **Dresser Instability:** Verify that all assembly hardware is securely tightened. Ensure the dresser is placed on a level surface. Confirm the anti-tipping kit is properly installed.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Mixcous
Model Number	CD-5741032
Product Dimensions (D x W x H)	15.55" x 47.24" x 31.28"
Color	White
Material	Engineered Wood
Item Weight	84.7 lbs
Number of Drawers	7
Individual Drawer Capacity	30 lbs
Dresser Top Capacity	130 lbs
Assembly Required	Yes
Additional Features	Rust Resistant, Safety Stop, Space Saving, Termite Resistant



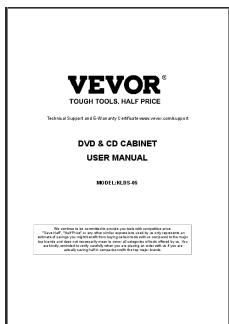
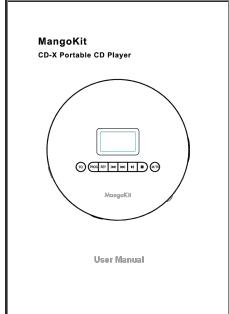
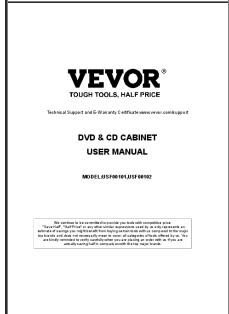
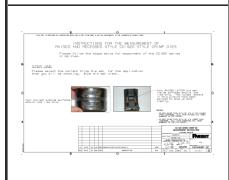
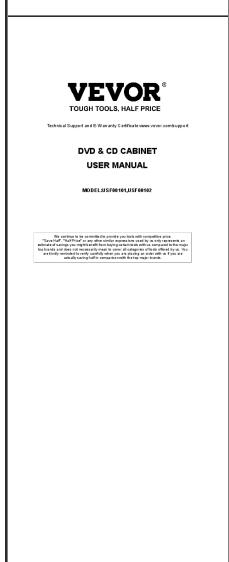
Image: Detailed dimensions and weight capacities for the dresser and its drawers.

WARRANTY INFORMATION

Specific warranty details for the Mixcous White 7-Drawer Dresser are not provided in this manual. For information regarding product warranty, please contact Mixcous customer support directly or refer to the documentation included with your purchase.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Mixcous dresser, please reach out to our customer support team. We are committed to resolving all inquiries as quickly as possible. Please refer to your purchase documentation or the Mixcous official website for the most current contact information.

	<p>VEVOR DVD & CD Cabinet User Manual - Model KLDS-05</p> <p>User manual for the VEVOR DVD & CD Cabinet, model KLDS-05. Contains assembly instructions, safety warnings, parts list, and product specifications for optimal setup and use.</p>
	<p>MangoKit CD-X Portable CD Player User Manual - Features, Operation & Troubleshooting</p> <p>Comprehensive user manual for the MangoKit CD-X Portable CD Player. Learn about its features, basic operations, connectivity options (Bluetooth, AUX), FM radio, programming, troubleshooting, safety instructions, and technical specifications.</p>
	<p>VEVOR DVD & CD Cabinet User Manual - Models USF00101, USF00102</p> <p>Comprehensive user manual for the VEVOR DVD & CD Cabinet (Models USF00101, USF00102). Includes safety guidelines, parts list, and detailed assembly instructions for effective media storage.</p>
	<p>Panduit CD-920 Series Crimp Die Measurement Instructions</p> <p>Detailed instructions for measuring Panduit CD-920 series raised and recessed style crimp dies, including step-by-step guidance and a comprehensive table of part numbers, color codes, index numbers, and diameter ranges.</p>
	<p>VEVOR DVD & CD Cabinet User Manual - Models USF00101, USF00102</p> <p>Comprehensive user manual for the VEVOR DVD & CD Cabinet (models USF00101, USF00102). Contains safety instructions, parts list, assembly guide, and product specifications for efficient media organization.</p>
	<p>Arafuna Portable CD Player User Manual - Bluetooth, FM Radio, AUX</p> <p>Comprehensive user manual for the Arafuna Portable CD Player. Learn about setup, playback, Bluetooth connectivity, FM transmission, troubleshooting, and specifications.</p>

