

[Manuals.plus](#) /

> [Joyroom](#) /

> Joyroom JR-OH1 Bluetooth Headphones with Noise Cancellation User Manual

Joyroom JR-OH1

Joyroom JR-OH1 Bluetooth Headphones User Manual

Model: JR-OH1

INTRODUCTION

Thank you for choosing the Joyroom JR-OH1 Bluetooth Headphones. This manual provides detailed instructions for setting up, operating, and maintaining your headphones to ensure the best audio experience. Please read this manual carefully before use and keep it for future reference.

PACKAGE CONTENTS

- Joyroom JR-OH1 Bluetooth Headphones
- USB-C Charging Cable
- 3.5mm Audio Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Joyroom JR-OH1 headphones.



Image: Front view of the Joyroom JR-OH1 Bluetooth Headphones, showcasing the over-ear design and branding.



Image: Side view of the Joyroom JR-OH1 Bluetooth Headphones, highlighting the control buttons for power, volume, and mode selection.

Controls and Ports:

- **Power Button:** Press and hold to power on/off. Short press for play/pause.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **ANC Button:** Activates/deactivates Active Noise Cancellation.
- **USB-C Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection using the included audio cable.
- **LED Indicator:** Shows power, pairing, and charging status.
- **Microphone:** For hands-free calls.

SETUP

1. Charging the Headphones

1. Connect the USB-C charging cable to the headphone's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red for charging, blue for fully charged).
4. A full charge takes approximately 1.5 hours.

2. Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Press and hold the Power Button for 3-5 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "JR-OH1" from the list of devices.
5. Once connected, the LED indicator will flash blue slowly or turn solid blue (depending on model).
6. The headphones can connect to two devices simultaneously (multi-point pairing).

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the Power Button for 3 seconds.
- **Power Off:** Press and hold the Power Button for 5 seconds.

Music Playback

- **Play/Pause:** Short press the Power Button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.
- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.

Call Management

- **Answer/End Call:** Short press the Power Button.
- **Reject Call:** Long press the Power Button.
- **Redial Last Number:** Double-press the Power Button.

Active Noise Cancellation (ANC)

- **Activate ANC:** Short press the ANC button. The ANC indicator light will turn on.
- **Deactivate ANC:** Short press the ANC button again. The ANC indicator light will turn off.

Wired Mode

To use the headphones in wired mode, connect one end of the 3.5mm audio cable to the headphone's 3.5mm audio jack and the other end to your audio source. The headphones will automatically switch to wired mode, and Bluetooth functionality will be disabled.

MAINTENANCE

- Clean the headphones regularly with a soft, dry cloth.

- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Do not use abrasive cleaners or solvents.
- Store the headphones in a cool, dry place when not in use.
- Avoid dropping or subjecting the headphones to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones won't turn on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn on device Bluetooth. Move headphones closer to device (within 10m).
No sound.	Volume too low; not connected; incorrect audio source.	Increase volume on headphones and device. Re-pair headphones. Check audio output settings on your device.
ANC not working.	ANC feature is off.	Press the ANC button to activate it.

SPECIFICATIONS

Long Battery Life



6000 h **2.5** h
Standby time (power off) Charging time

Image: A graphic illustrating the long battery life of 10 hours and a charging time of 2.5 hours for the headphones.

Feature	Detail
Model	JR-OH1
Bluetooth Version	V5.0
Bluetooth Chip	AC7006D8

Feature	Detail
Battery Capacity	300mAh
Music Playback Time	Up to 15 hours
General Battery Life	Up to 10 hours
Standby Time	Approx. 3500 hours
Charging Time	Approx. 1.5 hours
Charging Port	USB-C
Working Distance	Up to 10 meters
Speaker Diameter	40mm
Speaker Sensitivity	114dB ± 3dB
Microphone Type	Electret 4013-42dB
Impedance	99 Ohm
Frequency Range	20Hz - 20000Hz
Noise Control	Active Noise Cancellation
Connectivity	Wireless (Bluetooth), Wired (3.5mm)
Water Resistance	Not Water Resistant
Weight	250 grams

WARRANTY AND SUPPORT

Joyroom provides a **2-year manufacturing warranty** for this product from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims or technical support, please contact your retailer or visit the official Joyroom website for assistance.