

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Zelaclock](#) /

› [Zelaclock Digital Wall Clock with Remote Control User Manual](#)

Zelaclock Digital Wall Clock

Zelaclock Digital Wall Clock with Remote Control User Manual

Model: Digital Wall Clock

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Zelaclock Digital Wall Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

SAFETY INFORMATION

- The clock must be plugged into a standard power outlet to function. It is not battery operated for primary power.
- Ensure the power adapter and cable are not damaged before use.
- Keep the device away from water and high humidity environments.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Zelaclock Digital Wall Clock
- Remote Control
- Power Adapter (Corded Electric)
- USB Power Supply Cable
- Mounting Hardware (Push pins and template)
- User Manual (This document)

PRODUCT FEATURES

- **Large LED Display:** 11-inch display with bright, easy-to-read numbers.
- **Multi-Function Display:** Shows Time, Date, Week, Temperature, and Humidity.
- **Adjustable Brightness:** 10 levels of manual brightness adjustment.
- **Auto-Dimming:** Automatically decreases brightness at night to avoid disturbance.
- **Time & Calendar Alternation:** Option to alternate between time and calendar display modes.
- **Memory Function:** Retains settings after a power outage when 2*AAA batteries are installed (batteries not included).

included, for memory only).

- **Remote Control:** All settings and operations can be easily managed with the included remote control.
- **DST Adjustment:** Easily change Daylight Saving Time settings in March and November via the remote.
- **Timing Function:** Includes count-up and count-down timer functions (up to 99 minutes and 99 seconds).
- **Versatile Mounting:** Can be wall-mounted or placed on a tabletop.

SETUP

1. Powering the Device

Connect the provided USB power supply cable to the clock and plug the power adapter into a standard electrical outlet. The clock requires continuous power to operate.

2. Installing Backup Batteries

For the memory function to work during a power outage, install 2*AAA batteries (not included) into the battery compartment on the back of the clock. These batteries only store settings and do not power the display.

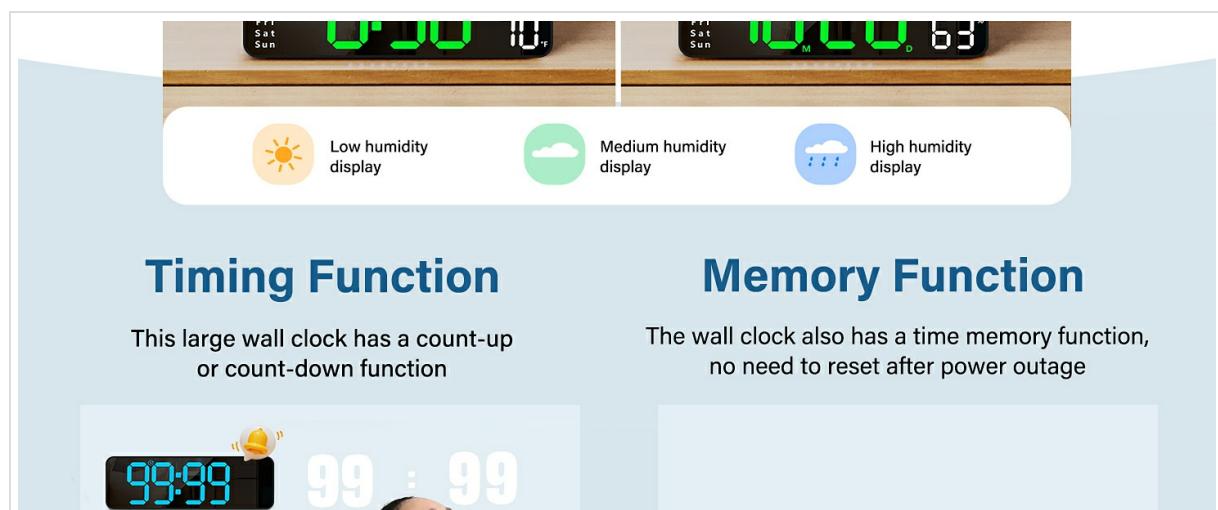


Image: A hand inserting AAA batteries into the back of the Zelaclock Digital Wall Clock. Text indicates batteries are for memorizing settings and the clock must be plugged in for operation.

3. Mounting the Clock

The clock can be placed on a flat surface or wall-mounted. For wall mounting, use the provided template and push pins to mark and secure the clock to the desired location.



Image: The Zelaclock Digital Wall Clock on a wall, showing its large blue LED display with time, day of the week, and temperature/humidity. A hand holds the remote control in the foreground.

4. Initial Settings with Remote Control

All initial settings are performed using the remote control. Refer to the remote control diagram for button functions.

- **Set Time:** Use the 'Set' button to enter time setting mode. Adjust hours and minutes using the number buttons or arrow keys. Confirm with 'OK'.
- **Set Date & Year:** Follow similar steps to set the current year, month, and day.
- **12/24-Hour Format:** Toggle between 12-hour and 24-hour display modes.
- **Fahrenheit/Celsius:** Select your preferred temperature unit.

Your browser does not support the video tag.

Video: An official product video demonstrating the large digital wall clock, showcasing its display and features. This video highlights the clock's functionality and ease of use.

OPERATING INSTRUCTIONS

1. Adjusting Brightness

Use the brightness buttons on the remote control to cycle through 10 levels of brightness. The clock also features an automatic dimming function that activates at night.

AUTO DIMMING

You can manually adjust the brightness by 10-levels.
It can also automatically adjust the brightness as the light changes.

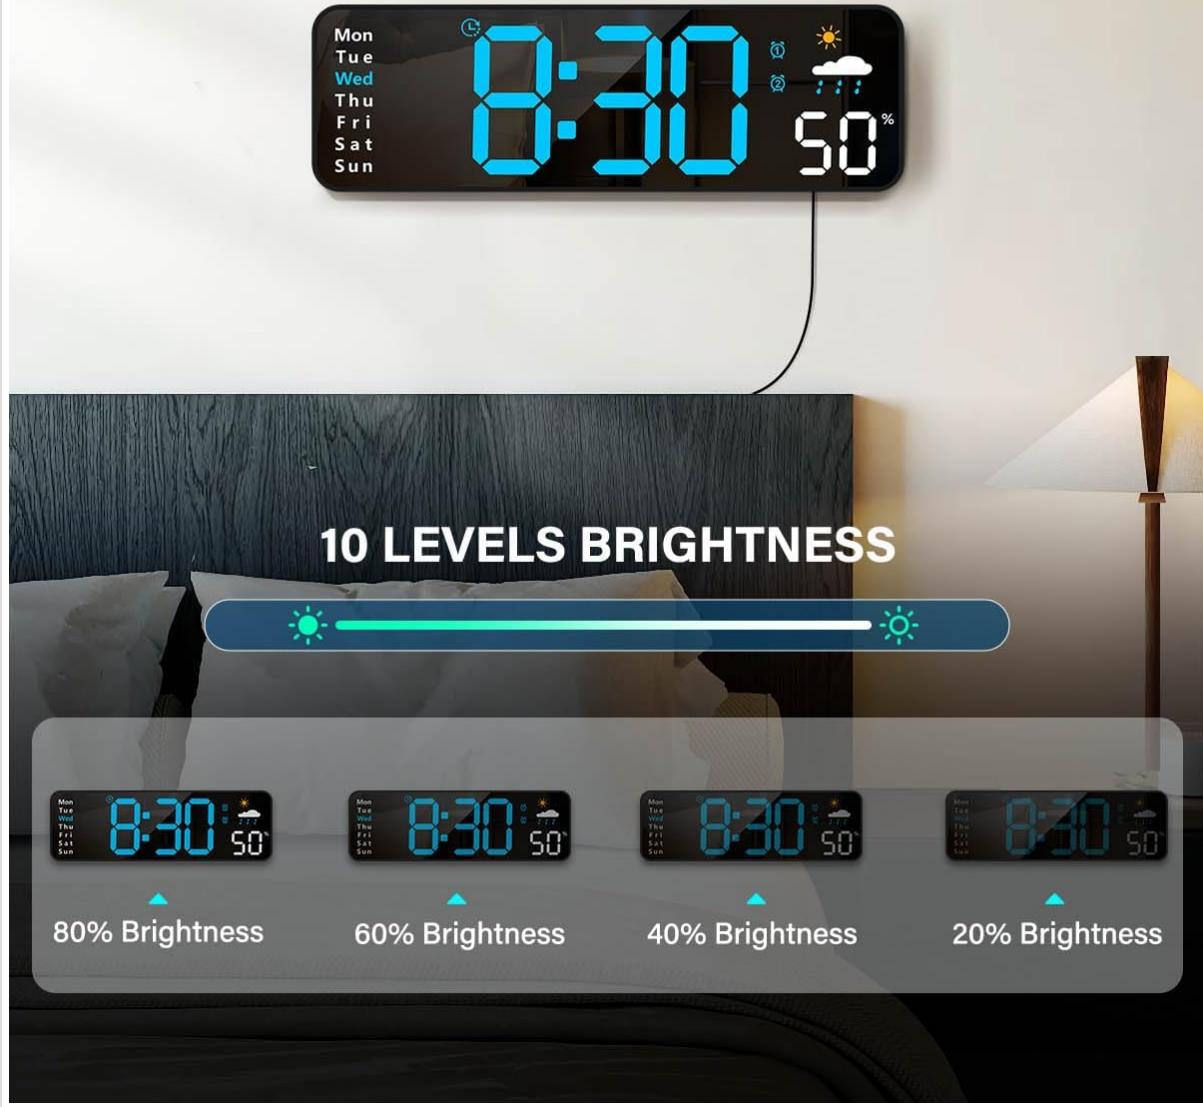


Image: The Zelaclock Digital Wall Clock showing different brightness levels, illustrating the 10-level adjustment feature.

2. Time & Calendar Alternation

The clock can be set to alternate between displaying the current time and the calendar (date, month, year) along with temperature and humidity. Use the remote control to enable or disable this feature.

TIME/DATE/TEMPERATURE/HUMIDITY JUMP DISPLAY



The display of outdoor weather is predicted based on indoor air humidity data. (Accuracy 60%)



Low humidity display



Medium humidity display



High humidity display

Image: The Zelaclock Digital Wall Clock showing how the display alternates between time and date/humidity information.

3. Setting Alarms

The clock supports alarm functions. Use the alarm button on the remote control to set and activate alarms. Follow the on-screen prompts to set the desired alarm time.

4. Using the Timer Function

The clock includes both count-up and count-down timer capabilities, up to 99 minutes and 99 seconds. Activate the timer function via the remote control and set your desired duration.

Timing Function

This large wall clock has a count-up or count-down function



99 : **99**
MINUTES SECONDS

(UP TO 99 MINUTES AND 99 SECONDS).



Image: The Zelaclock Digital Wall Clock showing its timing function, capable of counting up or down for up to 99 minutes and 99 seconds.

5. Daylight Saving Time (DST) Adjustment

The remote control allows for easy adjustment of DST. Use the dedicated DST button to switch between standard and daylight saving time as needed.



Remote Control & DST

All the settings and operations can be easily done with the remote control.
(2*AAA batteries need to be installed)



DST

You can easily change DST time in March and November.



+1h Spring Forward



-1h Fall Back

Image: The Zelaclock Digital Wall Clock and its remote, demonstrating how to adjust for Daylight Saving Time (DST) in March and November.

MAINTENANCE

- Cleaning:** Wipe the clock's display and body with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Battery Replacement:** Replace the 2*AAA backup batteries annually or as needed to ensure settings are retained during power interruptions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock display is off	Not plugged in or power outage.	Ensure power adapter is securely plugged into the clock and a working outlet. Check household power.
Incorrect time/date after power outage	Backup batteries not installed or depleted.	Install or replace 2*AAA batteries for memory function. Reset time/date using the remote.
Remote control not working	Remote batteries depleted or obstruction.	Replace remote control batteries. Ensure no obstructions between remote and clock.
Display too bright/dim	Brightness setting needs adjustment.	Use the brightness buttons on the remote to adjust to your preferred level.

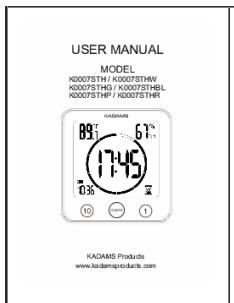
SPECIFICATIONS

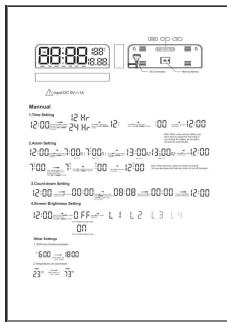
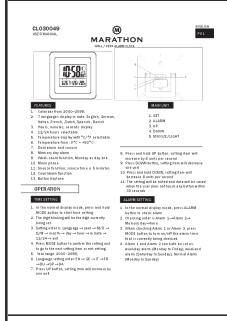
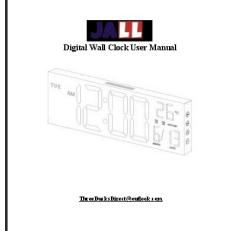
- Brand:** Zelaclock
- Model:** Digital Wall Clock
- Display Type:** LED
- Color:** Blue (Display)
- Product Dimensions:** 11"W x 3.5"H
- Power Source:** Corded Electric
- Material:** Plastic, Acrylonitrile Butadiene Styrene
- Item Weight:** 13.7 ounces (0.39 Kilograms)
- Backup Batteries:** 2 AAA batteries required (not included, for memory only)
- Mounting Type:** Wall Mount & Tabletop

WARRANTY AND SUPPORT

Your Zelaclock Digital Wall Clock comes with a manufacturer's warranty. For specific warranty details, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official Zelaclock website.

Related Documents - Digital Wall Clock

	<p><u>KADAMS K0007STH Series Digital Clock Timer User Manual</u></p> <p>Comprehensive user manual for the KADAMS K0007STH series digital clock timer, detailing features, setup, operation, and warranty information. Includes waterproof design, countdown timer, temperature and humidity display.</p>
	<p><u>HSD128A Projector Alarm Clock Instruction Manual</u></p> <p>Comprehensive instruction manual for the HSD128A projector alarm clock. Learn how to set time, date, temperature, alarms, use countdown and stopwatch functions, and understand all features for optimal use.</p>

	<p>NieNie Digital Clock User Manual - Time, Alarm, Countdown, Brightness, Temperature</p> <p>User manual for the NieNie digital clock (GH0707/NNBB-24026). Learn how to set time, configure alarms, use the countdown timer, adjust screen brightness, switch between 12/24 hour formats, and convert temperature units.</p>
	<p>Marathon CL030049 Wall/Desktop Alarm Clock User Manual</p> <p>Comprehensive user manual for the Marathon CL030049 digital wall and desk alarm clock. Covers features like calendar, temperature display, dual alarms, snooze, countdown timer, and language settings. Includes operation instructions, precautions, and warranty information.</p>
	<p>NieNie GH9002 Digital Clock User Manual Features & Settings</p> <p>Comprehensive user manual for the NieNie GH9002 digital wall clock. Learn about its features, time/alarm settings, brightness control, countdown timer, remote operation, and ambient mood lighting.</p>
	<p>JALL Digital Wall Clock User Manual</p> <p>User manual for the JALL Digital Wall Clock, providing instructions on installation, setup, features like time and alarm setting, temperature display, screen brightness, night light, countdown timer, volume control, and troubleshooting.</p>