

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Totnz](#) /

> Totnz Portable Ice Maker User Manual

Totnz TZIM21B-US

Totnz Portable Ice Maker User Manual

Model: TZIM21B-US

INTRODUCTION

Thank you for choosing the Totnz Portable Ice Maker. This compact and efficient appliance is designed to provide you with fresh ice quickly and conveniently. With its user-friendly features, including fast ice production, two cube sizes, and an automatic self-cleaning function, it is ideal for home, kitchen, camping, and RV use. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or any part of the ice maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the ice maker is placed on a stable, level surface.
- Use only potable water in the water reservoir.

PACKAGE CONTENTS

Please check to ensure all items are present and in good condition:

- Totnz Portable Ice Maker Unit
- Ice Basket
- Ice Scoop
- User Manual (this document)



Figure 1: Totnz Portable Ice Maker with included ice basket and scoop.

PRODUCT OVERVIEW

Control Panel



Figure 2: Control Panel Layout

Control Panel Indicators and Buttons

Indicator/Button	Function
ADD WATER Light	Illuminates when the water reservoir needs refilling.
ICE FULL Light	Illuminates when the ice basket is full.
POWER Light	Indicates the unit is powered on.
S Light	Indicates small size ice cubes are selected.
L Light	Indicates large size ice cubes are selected.
ON / OFF / CLEAN Button	Press to turn the unit on or off. Hold for 5 seconds to activate the self-cleaning function.
SELECT Button	Press to choose between small (S) or large (L) ice cube sizes.

SETUP

1. **Unpacking:** Carefully remove the ice maker from its packaging. Remove all packing materials, including tape and protective films.
2. **Placement:** Place the ice maker on a stable, level surface away from direct sunlight and heat sources (e.g., stoves, furnaces, radiators). Ensure there is at least 4 inches (10 cm) of space around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Refer to the "Maintenance and Cleaning" section for detailed instructions.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating label on the appliance.

OPERATING INSTRUCTIONS

Making Ice

1. **Fill Water Reservoir:** Open the top lid and remove the ice basket. Fill the water reservoir with potable water up to the MAX fill line. Do not overfill.
2. **Replace Basket and Close Lid:** Place the ice basket back into position and close the top lid.
3. **Turn On:** Press the **ON / OFF / CLEAN** button to turn on the ice maker. The **POWER** indicator light will illuminate.
4. **Select Ice Cube Size:** Press the **SELECT** button to choose your desired ice cube size. The **S** light indicates small cubes (approx. 27x20x20mm), and the **L** light indicates large cubes (approx. 28x22x27mm).
5. **Ice Production:** The ice maker will begin the ice-making cycle. The first batch of ice cubes will be ready in approximately 6 minutes. Subsequent batches may be faster. The unit can produce up to 26 pounds of ice per day.
6. **Ice Full Indicator:** When the ice basket is full, the **ICE FULL** indicator light will illuminate, and the ice maker will automatically pause operation. Remove ice from the basket to resume production.
7. **Add Water Indicator:** If the water level in the reservoir is too low, the **ADD WATER** indicator light will illuminate, and the ice maker will pause. Add more water to the reservoir to resume operation.
8. **Collecting Ice:** Use the provided ice scoop to remove ice from the basket. The scoop conveniently attaches to the basket for storage.
9. **Turn Off:** To turn off the ice maker, press the **ON / OFF / CLEAN** button.

Figure 3: Easy Ice Making Process

Figure 4: Available Ice Cube Sizes

Figure 5: Convenient Ice Removal

MAINTENANCE AND CLEANING

Automatic Self-Cleaning Function

The Totnz Ice Maker features an automatic self-cleaning function to ensure your ice remains fresh and clean. It is recommended to use this function regularly, especially after extended periods of non-use or before storing the unit.

1. **Prepare for Cleaning:** Ensure the ice maker is empty of ice cubes and the ice basket is removed.
2. **Add Water:** Fill the water reservoir with clean, potable water up to the MAX fill line. You may add a small amount of white vinegar or a mild descaling solution (follow product instructions) for a more thorough clean, then rinse thoroughly afterwards.
3. **Start Self-Clean:** With the unit plugged in and water added, press and hold the **ON / OFF / CLEAN** button for 5 seconds. The cleaning cycle will begin, indicated by specific lights or sounds (refer to control panel for specific indicators if available).
4. **Cycle Completion:** The self-cleaning process typically takes about 30 minutes. Once complete, the unit will stop.
5. **Drain Water:** Unplug the unit and drain all water from the reservoir by removing the drain plug (if applicable, usually at the bottom or side).
6. **Rinse:** Rinse the interior of the water reservoir and ice basket with clean water. Repeat the self-cleaning cycle with fresh water only to ensure all cleaning solution residue is removed.
7. **Dry:** Wipe down all interior and exterior surfaces with a soft, clean cloth. Ensure the unit is completely dry before storing or next use.

General Cleaning and Storage

- Always unplug the appliance before cleaning.
- Clean the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- The ice basket and scoop can be washed with mild dish soap and warm water. Rinse thoroughly.
- For long-term storage, ensure the unit is completely drained and dry. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not working.	No power.	Check if the power cord is properly plugged into a working outlet.
"ADD WATER" light is on.	Water reservoir is empty or low.	Add potable water to the reservoir up to the MAX fill line.

Problem	Possible Cause	Solution
"ICE FULL" light is on.	Ice basket is full.	Remove ice from the basket.
Ice cubes are too small or not forming properly.	Water temperature is too high; ambient temperature is too high.	Use colder water. Place the ice maker in a cooler environment. Ensure proper ventilation around the unit.
Ice maker is noisy.	Normal operation sounds; unit not level.	Some noise during operation is normal. Ensure the unit is on a stable, level surface.
Ice has an unusual taste or smell.	Unit needs cleaning; stale water.	Perform the self-cleaning function. Drain and refill the water reservoir with fresh water regularly.

SPECIFICATIONS

Feature	Detail
Brand	Totnz
Model Name	TZIM21B-US
Product Dimensions (D x W x H)	8.74"D x 11.42"W x 11.57"H
Ice Production Capacity	Up to 26 lbs per day
Ice Storage Capacity	1.3 lbs (approx.)
Ice Cube Shape	Bullet
Ice Cube Sizes	Small (approx. 27x20x20mm), Large (approx. 28x22x27mm)
First Ice Cycle Time	Approx. 6 minutes
Wattage	160 watts
Net Weight	13.7 lbs (approx.)

Figure 6: Product Dimensions and Noise Level

WARRANTY AND SUPPORT

The Totnz Portable Ice Maker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Totnz customer service through the contact information provided on the warranty card or the official Totnz website.

Please have your model number (TZIM21B-US) and purchase date ready when contacting support.

© 2024 Totnz. All rights reserved.