

[Manuals.plus](#) /

› [EasyAcc](#) /

› EasyAcc KW-MF15 Portable Misting Fan User Manual

EasyAcc KW-MF15

EasyAcc KW-MF15 Portable Misting Fan User Manual

Model: KW-MF15

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the EasyAcc KW-MF15 Portable Misting Fan. Retain this manual for future reference.

- Do not immerse the fan unit or power cord in water or other liquids.
- Ensure the power source matches the fan's requirements before charging.
- Keep out of reach of children and pets.
- Do not block the fan's air intake or outlet during operation.
- Use only pure or filtered water in the water tank to prevent clogging and maintain mist quality.
- Unplug the fan before cleaning or when not in use for extended periods.
- Do not attempt to repair or disassemble the fan yourself. Contact customer support for assistance.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- EasyAcc KW-MF15 Misting Fan Unit
- 7L Water Bucket
- Remote Control (AAA batteries not included)
- USB-C Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your EasyAcc Misting Fan.

2-in-1 Dual-Purpose Fan

Switch Between Mist Cooler & Desktop Fan Instantly, One Device, Two Cooling Solutions



Image: The EasyAcc KW-MF15 Misting Fan can be used as a spray fan with its water bucket or as a compact desk fan.

The fan features a main fan unit, a detachable 7-liter water bucket, and a remote control for convenient operation. It is designed for both misting and air circulation, suitable for various indoor and outdoor environments.

4. SETUP INSTRUCTIONS

4.1 Assembly

Follow these steps to correctly assemble your misting fan and prevent leaks:

1. Align the 2 water tank buckles on the fan unit with the mounting holes on the water tank.
2. Insert the screw through the tank's installation hole and tighten it to secure the fan unit to the water tank.
3. Before connecting the water pipe, **remove the red silicone cap** at the bottom of the fan head.
4. Connect the water pipe to the port at the bottom of the fan unit.
5. Lock the water tank locks to ensure a secure connection.

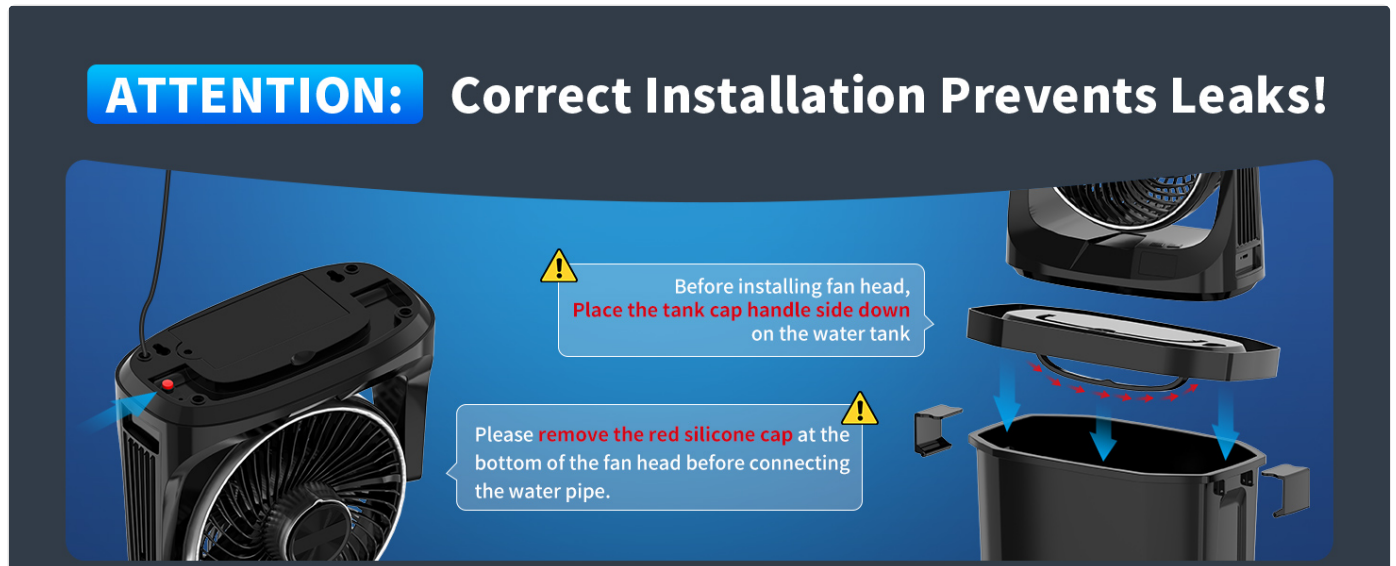


Image: Visual guide for the correct assembly of the fan unit onto the water bucket, highlighting the importance of removing the red silicone cap.

4.2 Filling the Water Tank

The 7L water tank can be filled with pure water or ice cubes for enhanced cooling.

- Open the water tank lid.
- Pour pure or filtered water into the tank. Using tap water directly may cause mineral buildup and clog the spray port.
- Optionally, add ice cubes for colder mist.
- Close the water tank lid securely.

4.3 Charging the Battery

The fan is equipped with a 20000mAh battery.

- Connect the USB-C charging cable to the fan's charging port and to a suitable power adapter (not included).
- A full charge takes approximately 10 hours.
- The battery indicator will show charging status.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button on the fan unit or the remote control to turn the fan on or off.

5.2 Fan Speed Adjustment

The fan features stepless speed control. Rotate the knob on the fan unit or use the speed buttons on the remote control to

adjust the airflow from low to high.

5.3 Misting Function

The fan has a 3-hole mist design, allowing you to select the number of active mist holes.

- Press the mist button on the fan unit or remote control to activate the misting function.
- Press again to cycle through 1-hole, 3-hole mist, or turn off the mist.
- The sprayer has an automatic timer function, turning off after approximately 4 hours of continuous use. To restart, press the mist button again.



Image: The fan features a 4-hour smart mist cycle, requiring a button press to restart the mist function after the cycle completes.

5.4 Oscillation

The fan head offers automatic oscillation and manual vertical adjustment.

- Press the oscillation button on the fan unit or remote control to activate 45° or 90° automatic left and right oscillation.
- Manually adjust the fan head vertically from 0-45° to direct airflow.

5.5 Remote Control

The included remote control allows for convenient operation from a distance.

- Insert 2 AAA batteries (not included) into the remote control.
- Use the dedicated buttons for power, fan speed, mist, and oscillation.

6. MAINTENANCE

6.1 Cleaning

- Always unplug the fan before cleaning.
- Wipe the exterior of the fan unit and water bucket with a soft, damp cloth.
- Regularly clean the water tank to prevent mold or mineral buildup. Rinse with clean water and dry thoroughly.
- If mist nozzles become clogged, gently clean them with a soft brush or cotton swab. Use pure or filtered water to minimize clogging.

6.2 Storage

When not in use for extended periods, store the fan in a cool, dry place.

- Empty and dry the water tank completely.
- The fan head can be inverted and placed into the water tank for compact storage. The tank lid is equipped with a handle for easy carrying.

Ultra-Portable All-in-One Design

The fan can be inverted and placed into the water tank, and the tank lid is equipped with a handle for easy carrying, making travel stress-free.



Image: The fan unit can be inverted and placed into the water tank for compact storage and easy transport.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan for approximately 10 hours.
No mist or weak mist.	Water tank is empty or low. Clogged mist nozzles. Red silicone cap not removed.	Refill the water tank. Clean the mist nozzles. Ensure the red silicone cap at the bottom of the fan head is removed.
Sprayer turns off after 4 hours.	Normal operation (timer function).	Press the mist button again to restart the mist function.
Water droplets on control panel.	Condensation or minor leakage from mist nozzles.	This can be a normal phenomenon during misting. Ensure the fan is on a stable surface. Wipe away any excess water.
Remote control not working.	Dead batteries. Obstruction between remote and fan.	Replace AAA batteries. Ensure clear line of sight to the fan's receiver.

Frequent Q&A



1. Is it normal that the sprayer will automatically turn off after about **4 hours** of use, but the fan is still running?

Answer:


It's normal. The sprayer has a timer function, and you'll need to **restart it manually** after automatic shutdown.



3. Is there anything I need to pay attention to when using this spray fan? How to make the machine more durable?

Answer:

It is recommended to add **pure water** or filtered water, and to avoid using tap water directly. This can effectively reduce scale clogging the spray port, and the mist sprayed is more delicate and refreshing!

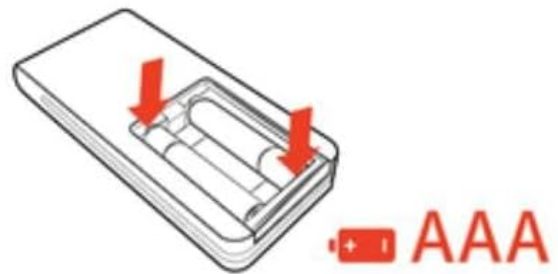

2. Is the remote control powered by batteries?

Answer:

Yes, The remote uses 2 standard AAA batteries (not included) .



4. How long does it take to charge this spray fan fully?

Answer:

It's equipped with **20000mAh** ultra-large capacity battery, and it takes about **10 hours** to fully power.



5. Can this fan rotate automatically?

Answer:

The fan head cannot rotate horizontally, but it can be adjusted to 45° vertically.

8. SPECIFICATIONS

Feature	Detail
Model Number	KW-MF15
Brand	EasyAcc
Power Source	Battery Powered
Battery Capacity	20000mAh Lithium Polymer
Charging Time	Approx. 10 hours
Working Time (Fan Only)	16-116 hours
Working Time (High Fan + Mist)	12-60 hours
Water Tank Capacity	7 Liters
Noise Level	As low as 30 Decibels
Max Wind Speed	4.3 m/s
Oscillation	45°/90° Automatic Horizontal
Vertical Adjustment	0-45° Manual
Product Dimensions	18D x 29W x 55H Centimetres
Weight	2.42 kg (approx. 5.3 lbs)
Control Method	Remote, On-device buttons
Material	Plastic

9. WARRANTY AND SUPPORT

EasyAcc products are designed and manufactured to the highest quality standards. For warranty information or technical support, please contact our customer service team.

Customer Support Email: support@easyacc.com

Please have your model number (KW-MF15) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question