

Manuals.plus /

- › LUVCAASXQ /
- › LUVCAASXQ Dishwasher Magic Door Latch User Manual

LUVCAASXQ GOGOSHOP01

LUVCAASXQ Dishwasher Magic Door Latch User Manual

Brand: LUVCAASXQ
Model: GOGOSHOP01

PRODUCT OVERVIEW

This manual provides essential information for the installation, operation, and maintenance of your LUVCAASXQ Dishwasher Magic Door Latch. This accessory is designed to ensure the secure closure of your dishwasher door, compatible with various Midea dishwasher models, thereby preventing leaks and ensuring proper wash cycles.



Image 1: The LUVCAASXQ Dishwasher Magic Door Latch, a replacement component designed for secure door closure.

KEY FEATURES

- **Easy to Install:** Designed for simple and quick installation, making it ideal for DIY repairs or professional maintenance.
- **Reliable Performance:** Ensures smooth functionality and optimal cleaning results by maintaining a securely latched door.
- **Sturdy Construction:** Built with durable materials to withstand everyday use, ensuring long-lasting performance and reliability.
- **Cost-Effective Solution:** A practical investment that helps minimize the need for frequent replacements and repairs, ultimately saving money over time.

COMPATIBILITY

This Dishwasher Magic Door Latch is compatible with various Midea dishwasher models. Please verify your dishwasher's model number against the list below to ensure compatibility.

H3602D, H1,
V3, MK68DW,
S50, Vie5,
UX Magic, CDS13TO2,
3602 Plus, Vie6 Pro,
Vie7 Pro, E7 Pro ,
XH09, XLO3,
XH09P, XH06P,
XHO5S, XH05P



Image 2: Visual representation of compatible Midea dishwasher models.

产品型号：

H3602D

H1

V3

MK68DW

S50

Vie5

UX Magic

CDS13T02

3602 Plus

Vie6 Pro

Vie7 Pro

E7 Pro

XH09

XLO3

XH09P

XH06P

XH05S

XH05P

Image 3: A clearer view of the detailed list of compatible Midea dishwasher models.

Known compatible models include:

- H3602D
- H1
- V3
- MK68DW
- S50
- Vie5
- UX Magic
- CDS13T02
- 3602 Plus
- Vie6 Pro
- Vie7 Pro
- E7 Pro
- XH09
- XLO3
- XH09P

- XH06P
- XH05S
- XH05P

INSTALLATION

The Dishwasher Magic Door Latch is designed for straightforward installation. No complex assembly is required. It is recommended to consult your dishwasher's specific service manual or a qualified technician if you are unsure about the replacement process.

1. **Safety First:** Before beginning any installation, ensure the dishwasher is unplugged from the power outlet and the water supply is turned off.
2. **Access the Latch Mechanism:** Depending on your dishwasher model, you may need to remove the inner door panel or access the latch from the top or side.
3. **Remove Old Latch:** Carefully disconnect any wiring (if applicable) and unscrew the old latch mechanism. Note the orientation and connection points.
4. **Install New Latch:** Position the new LUVCAASXQ Dishwasher Magic Door Latch in place, ensuring it aligns correctly with the mounting holes. Secure it with the appropriate screws. Reconnect any wiring.
5. **Test Functionality:** Once installed, close and open the dishwasher door several times to ensure the new latch engages smoothly and securely.
6. **Restore Power:** Plug the dishwasher back into the power outlet and turn on the water supply.

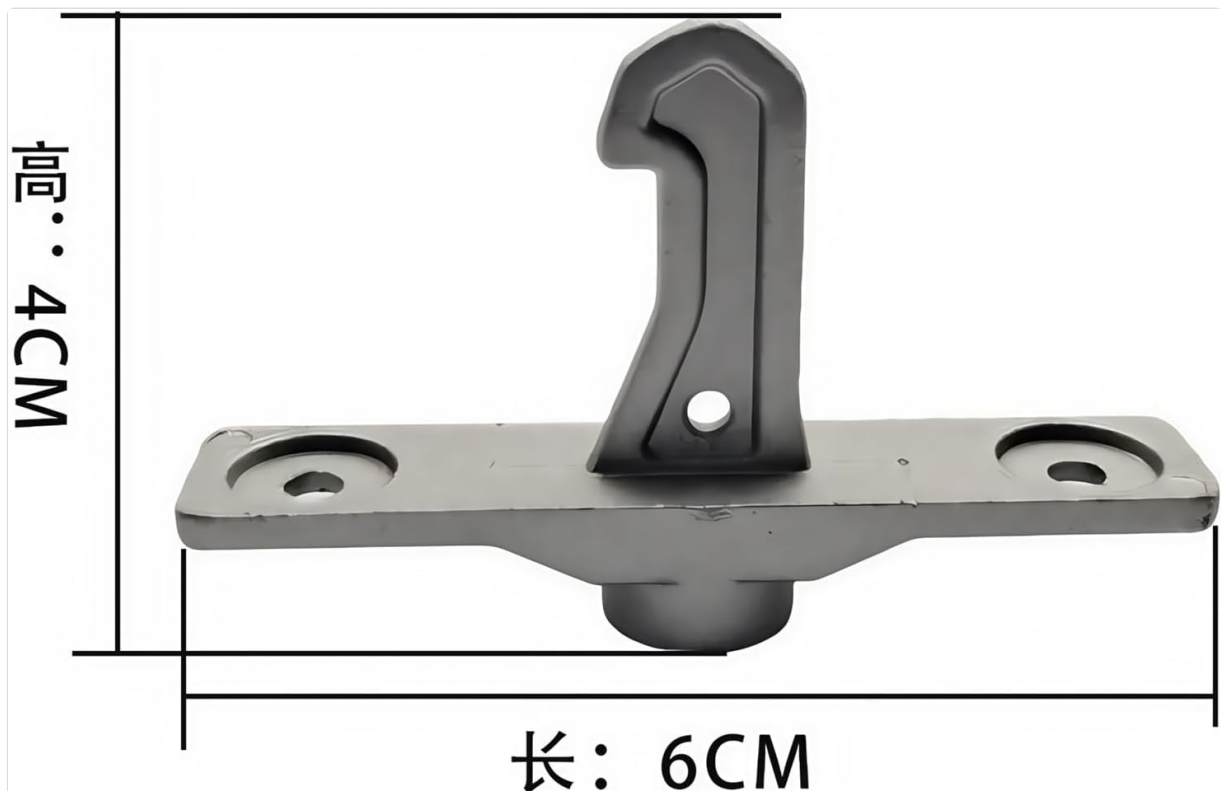


Image 4: Dimensions of the door latch, showing approximately 4cm height and 6cm length.

OPERATING INSTRUCTIONS

The Dishwasher Magic Door Latch operates automatically as part of your dishwasher's normal function. Its primary role is to ensure the dishwasher door remains securely closed during operation, preventing leaks and ensuring proper wash cycles.

- **Closing the Door:** Gently push the dishwasher door until you hear a click, indicating the latch has engaged.

- **Opening the Door:** Pull the dishwasher door handle to disengage the latch and open the door.
- **Secure Operation:** A properly functioning latch is crucial for the dishwasher to start and complete its wash cycle. If the door is not securely latched, the dishwasher may not operate.

MAINTENANCE

To ensure the longevity and reliable performance of your dishwasher door latch, consider the following maintenance tips:

- **Regular Cleaning:** Periodically inspect the latch area for any food debris, detergent residue, or mineral buildup that might hinder its operation. Clean with a soft, damp cloth.
- **Avoid Force:** Do not force the dishwasher door open or closed if it feels stiff. Investigate the cause of resistance to prevent damage to the latch mechanism.
- **Lubrication (if applicable):** If the latch mechanism has moving parts that appear stiff, a small amount of food-grade silicone grease can be applied, but only if recommended by the dishwasher manufacturer's guidelines.

TROUBLESHOOTING

If you experience issues with your dishwasher door latch, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Door not latching securely	Misalignment, debris, or worn latch mechanism.	Check for obstructions. Ensure the door is properly aligned. If the latch is worn, replacement may be necessary.
Dishwasher not starting	Door not fully closed/latched, or faulty door switch.	Ensure the door clicks shut. If the latch is secure but the dishwasher still doesn't start, the door switch might be faulty and require professional inspection.
Door difficult to open/close	Friction, debris, or damaged latch components.	Clean the latch area. Check for any bent or damaged parts. Do not force the door.

SPECIFICATIONS

Attribute	Detail
Product Name	Dishwasher Magic Door Latch
Brand	LUVCAASXQ
Model Number	GOGOSHOP01
Compatible With	Midea Dishwasher H3602D, H1, V3, MK68DW, S50, Vie5, UX Magic, CDS13TO2, 3602 Plus, Vie6 Pro, Vie7 Pro, E7 Pro, XH09, XLO3, XH09P, XH06P, XHO5S, XH05P
Package Dimensions	1.18 x 0.79 x 0.39 inches
Item Weight	1.76 ounces
Assembly Required	No
Country of Origin	China

WARRANTY AND SUPPORT

For any questions regarding the LUVCAASXQ Dishwasher Magic Door Latch, including installation assistance or troubleshooting, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty information and contact details.