



Manuals.plus /

› XINFUTE /

› XINFUTE RM-L1107+X Universal LCD LED IR TV Remote Control Instruction Manual

## XINFUTE RM-L1107+X

# XINFUTE RM-L1107+X Universal LCD LED IR TV Remote Control Instruction Manual

Model: RM-L1107+X

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your XINFUTE RM-L1107+X Universal Remote Control. This remote is designed to operate a wide range of LCD and LED televisions using infrared (IR) technology. It is a direct replacement unit and typically requires no programming for most models.

## SETUP

---

### 1. Battery Installation

The XINFUTE RM-L1107+X remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control, illustrating the open battery compartment ready for AAA battery insertion.

## 2. Initial Use (No Programming Required)

This universal remote control is designed to work directly with most compatible LCD and LED televisions without requiring complex programming steps. Simply install the batteries and point the remote towards your television.

- Ensure your television is powered on.
- Point the remote control directly at the television's IR receiver.
- Test basic functions such as Power, Volume, and Channel. If the remote responds, it is ready for use.
- If the remote does not respond, refer to the "Troubleshooting" section.

## **OPERATING INSTRUCTIONS**

---

The XINFUTE RM-L1107+X remote control features a standard layout for easy navigation and control of your television. Below is a general overview of key button functions.



Image: Front view of the remote control, displaying its full button layout including power, volume, channel, navigation, and brand-specific keys.

- **Power Button** (⏻): Turns the television on or off.

- **Number Buttons (0-9):** Used for direct channel input.
- **Volume Up/Down (VOL +/-):** Adjusts the television's volume level.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate on-screen menus and confirm selections.
- **MENU:** Accesses the television's main menu.
- **HOME:** Returns to the television's home screen or smart TV interface.
- **SOURCE:** Selects input sources (e.g., HDMI 1, AV, USB).
- **Mute:** Silences the television's audio.
- **Netflix / YouTube / Smart** Dedicated buttons for quick access to streaming services or smart TV features (functionality may vary by TV model).
- **Brand-Specific Buttons:** The remote includes buttons labeled with various TV brands (e.g., SHARP, SONY, Panasonic, Samsung, LG, Philips, Toshiba, Hitachi, Sanyo, Hisense, Skyworth, Changhong). These buttons are generally for compatibility and may not have a direct function beyond initial setup or specific TV models.

## MAINTENANCE

---

### 1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### 2. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

### 3. Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote does not work at all.	<ul style="list-style-type: none"> <li>Batteries are dead or incorrectly inserted.</li> <li>Remote is too far from the TV or not pointed correctly.</li> <li>Obstruction between remote and TV.</li> </ul>	<ul style="list-style-type: none"> <li>Replace batteries with new AAA batteries, ensuring correct polarity.</li> <li>Move closer to the TV and ensure a clear line of sight to the TV's IR receiver.</li> <li>Remove any objects blocking the signal path.</li> </ul>
Some buttons do not function.	<ul style="list-style-type: none"> <li>Button is stuck or dirty.</li> <li>Specific function not supported by your TV model.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the remote, especially around the unresponsive button.</li> <li>Confirm if the function is available on your TV's original remote or through its menu.</li> </ul>
Remote works intermittently.	<ul style="list-style-type: none"> <li>Low battery power.</li> <li>Interference from other electronic devices.</li> </ul>	<ul style="list-style-type: none"> <li>Replace batteries.</li> <li>Ensure no other devices are interfering with the IR signal.</li> </ul>

## SPECIFICATIONS

**Model Number:** RM-L1107+X

**Brand:** XINFUTE

**Connectivity Technology:** Infrared (IR)

**Compatible Devices:** Television (LCD, LED)

**Max Number of Supported Devices:** 1

**Special Feature:** Ergonomic, No Programming Required

**Batteries Required:** 2 x AAA (not included)

**Product Dimensions:** 6 x 3 x 1 inches (approximately)

**Item Weight:** 2.82 ounces (approximately)

## WARRANTY AND SUPPORT

### Warranty Information

This product comes with a one-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

### Customer Support

If you encounter any issues or have questions regarding your XINFUTE RM-L1107+X remote control that are not addressed in this manual, please contact the seller or manufacturer's customer support within 24 hours of receipt of your purchase. All goods are inspected before shipment to ensure quality.