

TIMBER RIDGE 80351-5-BL

TIMBER RIDGE 4-5 Person Instant Pop Up Cabin Tent

INSTRUCTION MANUAL

Introduction

Thank you for choosing the TIMBER RIDGE 4-5 Person Instant Pop Up Cabin Tent. This tent is designed for quick setup and provides a comfortable, weather-resistant shelter for your outdoor adventures. Please read this manual thoroughly before setup and use to ensure proper operation and longevity of your tent. Key features include an ultra-convenient hub quick-support folding structure for easy setup, 150D fabric with 2000mm waterproof coating, a spacious interior with 78-inch center height, excellent ventilation with mesh windows and skylight, and an extra vestibule for gear storage.

Package Contents

Ensure all the following components are present in your package:

- 1 x Tent Body
- 1 x Rainfly
- 1 x Carry Bag
- Steel Stakes

Setting Up Your Tent

The TIMBER RIDGE Instant Pop Up Cabin Tent features a quick-support folding structure designed for rapid assembly. Follow these steps for a 60-second setup with two people:

1. **Unpack the Tent:** Open the carry bag and remove the tent body and components. Lay the tent flat on the ground at your desired camping spot.
2. **Identify the Rooftop:** Locate the central hub mechanism on the tent's roof.
3. **Unfold the Tent:** Gently spread out the tent fabric.

4. **Pull Out the Hub:** From inside the tent, pull the central hub mechanism upwards until the tent structure locks into place. This will raise the tent walls and roof.
5. **Lift and Secure:** Once the main structure is up, lift the tent and position it correctly. Secure the tent to the ground using the provided steel stakes.
6. **Attach the Rainfly:** Drape the rainfly over the tent, ensuring it covers the entire tent body and aligns with the vestibule area. Secure the rainfly with its attachment points and additional stakes if necessary.



Image: Visual guide for the 60-second instant tent setup.



Image: Detail of pushing up the central hub for tent erection.

Video: Official TIMBER RIDGE demonstration of instant tent setup.

Using Your Tent

Your TIMBER RIDGE tent offers a comfortable and functional space for camping.

- **Spacious Interior:** The tent measures 96 x 121 x 78 inches, providing ample room for a queen air mattress or multiple sleeping bags. The 78-inch center height allows most adults to stand upright comfortably.
- **Ventilation:** Utilize the 1 top mesh skylight and 4 mesh windows for optimal airflow. The 2 D-shaped doors also contribute to ventilation and easy access. Two side air vents further reduce condensation inside.
- **Extra Vestibule:** The rainfly creates an additional vestibule area. Use this space to store gear,

keeping the main tent interior clean and dry, or as an awning in fair weather.

- **Storage:** Multiple storage pockets and a gear loft are integrated into the tent design for organizing small items.



Image: Spacious interior of the tent, accommodating 4-5 people.



Image: Demonstrating the 78-inch center height inside the tent.



Image: The tent features two D-shaped doors for convenient entry and exit.



Image: The extra vestibule provides additional covered space.

Care and Maintenance

Proper care will extend the life of your tent:

- **Cleaning:** Do not machine wash the tent. For cleaning, gently wipe soiled areas with a damp cloth and mild soap. Rinse thoroughly with water.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odor. Air dry in a shaded area.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Avoid Harsh Chemicals:** Do not use bleach, harsh detergents, or solvents, as these can damage the fabric and waterproof coating.

Troubleshooting Common Issues

If you encounter any issues with your tent, consider the following:

- **Difficulty Setting Up:** Ensure all hub poles are fully extended and locked into place. Sometimes a firm push or pull is needed. Check for any fabric snags.
- **Water Leakage:** Verify that the rainfly is correctly positioned and secured, covering all mesh areas. Ensure all seams are properly sealed. In heavy rain, water can sometimes seep through zippers if not fully covered.
- **Condensation:** Ensure adequate ventilation by keeping mesh windows and vents open when weather permits. Condensation is natural in tents, especially in humid conditions.
- **Damaged Poles/Fabric:** Inspect poles for bends or cracks and fabric for tears before each use. Small repairs can often be made with a tent repair kit.

Product Specifications

Brand	TIMBER RIDGE
Model Number	80351-5-BL
Occupancy	4-5 Person

Product Dimensions (L x W x H)	121"L x 78"W x 78"H
Item Weight	31 Pounds
Water Resistance Technology	2000 millimeters
Material Type	Polyester
Pole Material Type	Fiberglass
Number Of Doors	2
Number Of Windows	6
Number of Vestibules	1
Seasons	3 Season



Image: Tent dimensions and packed size for storage.



Image: Overview of tent's weather resistance features.

Warranty Information

This **TIMBER RIDGE** tent comes with a **1 Year Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims.

For warranty service or product support, please contact TIMBER RIDGE customer service through their official website or the retailer where the product was purchased.