

GJ185 OE536

Generic 69" 3-in-1 Convertible Queen Sleeper Loveseat Futon Sofa Couch

MODEL: GJ185 OE536

Introduction

Thank you for purchasing the Generic 69" 3-in-1 Convertible Queen Sleeper Loveseat Futon Sofa Couch. This versatile furniture piece is designed to function as a comfortable loveseat, a lounge sofa, and a pull-out sleeper bed, making it ideal for living rooms and small spaces. This manual provides essential information for safe assembly, operation, and maintenance of your new sofa.



Figure 1: The 69-inch 3-in-1 Convertible Queen Sleeper Loveseat Futon Sofa Couch in its standard sofa configuration. This image provides an overall view of the product.

Safety Information

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 500 pounds (approximately 227 kg).
- Avoid standing or jumping on the sofa or bed.
- Use caution when converting the sofa to a bed or adjusting the backrest to prevent pinching.
- Place the sofa on a level surface to ensure stability.

Package Contents

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Sofa Frame (main body)
- Seat Cushions (pre-attached or separate)
- Backrest Cushions
- Removable Armrests (2)
- Plastic Legs (4)
- Hardware Pack (screws, bolts, Allen wrench)
- Instruction Manual

Setup and Assembly

Assembly of this sofa bed is straightforward and requires minimal effort. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Attach Legs:** Locate the four plastic legs. Align each leg with the pre-drilled holes on the bottom corners of the sofa frame. Securely screw each leg into place. Ensure they are tight and stable.



Figure 2: Close-up view of the sturdy black plastic legs, which need to be attached to the sofa base during assembly.

3. **Install Armrests:** Attach the two removable armrests to the sides of the sofa frame. Slide them into the designated slots or secure them with the provided hardware, ensuring they are firmly in place.
4. **Position Cushions:** If the backrest cushions are separate, place them onto the sofa. Ensure they are properly aligned for comfort and appearance.
5. **Final Check:** Before use, gently shake the sofa to confirm all parts are securely attached and the unit is stable.

Operating Instructions

Your convertible sofa offers three primary functions: a loveseat, a lounge sofa, and a pull-out sleeper bed.

Converting to a Pull-Out Sleeper Bed

To transform the loveseat into a comfortable sleeper bed:

1. **Locate Hand Straps:** Identify the two auxiliary hand straps located at the front underside of the seat cushion.
2. **Pull Out Bed:** Gently pull the hand straps upwards and outwards. The hidden bed mechanism will slide forward and unfold.



Figure 3: A hand demonstrating the initial pull of the auxiliary strap to begin extending the hidden bed section.



Figure 4: The sofa bed mechanism partially extended, showing the smooth transition from sofa to bed.

3. **Fully Extend:** Continue pulling until the bed is fully extended and locked into place, creating a flat sleeping surface.



Figure 5: The sofa fully converted into a sleeper bed, ready for use. The hand is shown releasing the strap after full extension.

4. **To Retract:** Reverse the process. Lift the front edge of the extended bed slightly and push it back towards the sofa until it fully retracts and locks into the loveseat position.

Adjusting the Backrest

The backrest of your sofa can be adjusted to three different angles, from 105° (upright) to 180° (flat). This allows you to find the most comfortable posture for sitting, lounging, or sleeping.

1. **To Recline:** Gently push the backrest forward until you hear a click, then slowly lower it to your desired angle. It will lock into one of the three preset positions.
2. **To Return Upright:** Push the backrest all the way forward until it clicks into the fully upright position, then release.



Figure 6: Side profile of the sofa, illustrating its upright position before backrest adjustment.

Maintenance

Proper care will extend the life and appearance of your sofa.

- **Regular Cleaning:** Vacuum the fabric regularly using an upholstery attachment to remove dust and loose debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain. For stubborn stains, use a mild fabric cleaner specifically designed for upholstery, testing on an inconspicuous area first.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric fading. Position your sofa away from direct sun or use curtains/blinds.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, bleach, or strong chemical solvents, as these can damage the fabric.
- **Check Fasteners:** Periodically check and tighten all bolts and screws to ensure the sofa remains stable.

Troubleshooting

If you encounter any issues with your sofa, refer to the following common problems and solutions:

- **Sofa feels wobbly after assembly:** Ensure all legs are securely tightened and the sofa is placed on a flat, even surface. Re-tighten all assembly hardware.
- **Difficulty pulling out or retracting the bed:** Check for any obstructions under or around the mechanism. Ensure the backrest is in an appropriate position (usually upright) before attempting to convert. Apply gentle, even pressure when pulling or pushing.
- **Backrest not locking into position:** Ensure you are pushing the backrest fully forward to engage the locking mechanism before reclining, or pushing it fully upright to lock into the seated position.
- **Squeaking noises:** This may indicate loose connections. Check and tighten all bolts and screws. If the noise persists, contact customer support.

Specifications

Brand	Generic
Model Number	GJ185 OE536
Product Dimensions (Sofa)	68.5" (D) x 37" (W) x 35.5" (H)
Seating Capacity	2 (Loveseat)
Material	Upholstered Fabric, Solid Wood Frame, Plastic Legs
Color	Dark Grey
Backrest Adjustment	3 Levels (105° to 180°)
Weight Capacity	Up to 500 lbs (227 kg)

Warranty and Support

For warranty information or if you require further assistance, please contact the seller or manufacturer directly through your purchase platform. Keep your purchase receipt or order number handy for faster service.