

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TIMEX](#) /

› [TIMEX Essex Round 46mm Black Dial Analog Men Watch - TW2W92900UJ User Manual](#)

TIMEX TW2W92900UJ

TIMEX Essex Round 46mm Black Dial Analog Men Watch - TW2W92900UJ User Manual

INTRODUCTION

Thank you for choosing the TIMEX Essex Round 46mm Black Dial Analog Men Watch (Model: TW2W92900UJ). This manual provides essential information for the proper setup, operation, and maintenance of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.

This watch features a classic design with a 46mm black dial, a durable brass case, and a comfortable black leather strap. It is powered by a reliable Quartz movement and offers water resistance up to 50 meters.

SETUP

Setting the Time

1. Pull the crown (the small knob on the side of the watch case) out to position 2.
2. Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
3. Once the correct time is set, push the crown back into position 1 (normal operating position).

Setting the Date

Your watch features a date display. To set the date:

1. Pull the crown out to position 1 (the first click).
2. Turn the crown clockwise or counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this is when the date change mechanism is active and could be damaged.
3. Once the correct date is displayed, push the crown back into position 0 (fully in).



Image: Front view of the TIMEX Essex watch, showing the crown on the right side of the case, used for setting time and date.

OPERATING

Water Resistance

This TIMEX watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, showering, diving, or any water sports where the watch might be subjected to high-velocity water or prolonged immersion.

- Do not operate the crown or pushers when the watch is wet or submerged.
- Ensure the crown is fully pushed in after setting the time or date to maintain water resistance.

Daily Use

Your watch is designed for daily wear. Avoid exposing it to extreme temperatures, strong magnetic fields, or harsh chemicals, as these can affect its accuracy and appearance.

MAINTENANCE

Cleaning Your Watch

- **Case and Crystal:** Wipe the watch case and crystal with a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth.
- **Leather Strap:** Leather straps should be cleaned with a soft, damp cloth and allowed to air dry. Avoid soaking the leather strap in water or using harsh cleaning agents, as this can damage the material.

Battery Replacement

This watch is powered by a Quartz movement, which uses a battery. When the watch stops running, it indicates that the battery needs to be replaced. It is recommended to have the battery replaced by an authorized TIMEX service center or a qualified watch technician to ensure proper sealing and maintain water resistance.



Image: Close-up view of the watch's stainless steel back, showing engravings such as 'TIMEX', 'WR 50M', and 'Stainless Steel Back'.

TROUBLESHOOTING

- **Watch Not Running:** If the watch is not running, check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Incorrect Time/Date:** Refer to the "Setting the Time" and "Setting the Date" sections to reset.

- **Condensation Under Crystal:** If condensation appears under the crystal, it may indicate a loss of water resistance. Have the watch inspected by a professional immediately.

SPECIFICATIONS

Feature	Specification
Model Number	TW2W92900UJ
Movement Type	Quartz
Case Diameter	46 Millimetres
Case Material	Low Lead Brass
Case Thickness	10 mm
Band Material Type	Leather
Band Colour	Black
Strap/Lug Width	22 mm
Water Resistance	50 Meters (5 ATM)
Item Weight	100 Grams
Product Dimensions	10 x 10 x 10 cm
Country of Origin	Philippines



Image: Detailed diagram illustrating the key dimensions and materials of the TIMEX Essex watch, including case size, strap width, and case thickness.

WARRANTY AND SUPPORT

Manufacturer's Warranty

Your TIMEX Essex watch is backed by a one-year manufacturer's warranty covering manufacturing defects. This warranty does not cover normal wear and tear, accidental damage, or damage resulting from improper use or unauthorized repairs.

Customer Support

For warranty claims, service, or any questions regarding your TIMEX watch, please contact TIMEX customer support or visit an authorized TIMEX service center. Please retain your proof of purchase for warranty validation.

For more information, you may visit the official TIMEX website or refer to the contact details provided with your purchase documentation.

© 2025 TIMEX. All rights reserved. This manual is for informational purposes only.