



Manuals.plus /

› FREEFISH /

› FREEFISH K-8 Retro Portable CD Player Instruction Manual

## FREEFISH K-8

# FREEFISH K-8 Retro Portable CD Player Instruction Manual

Model: K-8 | Brand: FREEFISH

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation of your FREEFISH K-8 Retro Portable CD Player. Please read this manual thoroughly before using the device and retain it for future reference.



Image: FREEFISH K-8 Retro Portable CD Player, main view.

## IMPORTANT SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep the device away from strong magnetic fields.
- Use only the specified charging cable.
- Ensure proper ventilation during operation.

## PACKAGE CONTENTS

Please check that all items are present in your package:

- FREEFISH K-8 Retro Portable CD Player
- Type-C Data Cable
- Instruction Manual (this document)
- Protective Cover

## What will you get?




Retro CD player



Type-c data cable



Instruction manual

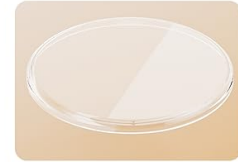

Protective cover

If you have any product-related questions, you can contact us by email and we will respond to you within 24 hours.



Image: Included accessories with the FREEFISH K-8 CD Player.

## PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your FREEFISH K-8 CD Player.



Image: Front view of the FREEFISH K-8 CD Player with key features labeled.

## Control Buttons and Ports:

### How It Work



#### Step 1:

Remove the transparent protective cover



#### Step 2:

Take out the CD cardboard and place your CD on the CD tray until you hear a "click" sound indicating successful installation



#### Step 3:

Turn on the joystick main switch and wait for a few seconds for the CD to automatically read and start playing music



#### Step 4:

Adjust according to the following button markings

- switches music mode:Bluetooth/TF mode
- Long press to increase volume/short press to go to the next song
- Pause/Play
- Adjust the loop playback mode
- Long press to reduce volume/short press to go to the previous song
- Adjust night light

Image: Close-up of the control buttons and joystick on the FREEFISH K-8 CD Player.

- **M Button:** Switches music mode (Bluetooth/TF mode).
- **Play/Pause Button:** Short press to play/pause. Long press to stop.

- **Skip Forward Button (>):** Short press for next song. Long press to increase volume.
- **Skip Backward Button (<):** Short press for previous song. Long press to reduce volume.
- **Loop Playback Mode Button:** Adjusts CD/TF card loop modes.
- **Night Light Button:** Adjusts night light.
- **Joystick Main Switch:** Power on/off.
- **LCD Display:** Shows current mode and time.



Image: Rear ports of the FREEFISH K-8 CD Player.

- **DC 5V Charging Port (Type-C):** For charging the internal battery.
- **TF Card Slot:** For playing music from a TF card.
- **AUX Port (3.5mm):** For connecting external audio devices or headphones.

## SETUP

### 1. Charging the Device

Connect the provided Type-C data cable to the DC 5V charging port on the back of the player and plug the other end into a compatible USB power adapter (not included). The LCD display will indicate charging status. A full charge provides 8-15 hours of playback.


## 2. Powering On/Off

To power on the device, turn the joystick main switch. To power off, turn the joystick main switch again.


## 3. Inserting a CD

1. Remove the transparent protective cover from the top of the player.


### How It Work




**Step 1:**  
Remove the transparent protective cover



**Step 2:**  
Take out the CD cardboard and place your CD on the CD tray until you hear a "click" sound indicating successful installation



**Step 3:**  
Turn on the joystick main switch and wait for a few seconds for the CD to automatically read and start playing music



**Step 4:**  
Adjust according to the following button markings


**Legend:**

- M switches music mode:Bluetooth/TF mode
- > Long press to increase volume/short press to go to the next song
- ⏸ Pause/Play
- ⌂ Adjust the loop playback mode
- < Long press to reduce volume/short press to go to the previous song
- ☀ Adjust night light


Image: Step 1 of CD insertion: Removing the protective cover.

2. Carefully place your CD onto the CD tray until you hear a 'click' sound, indicating successful installation.


### How It Work




**Step 1:**  
Remove the transparent protective cover



**Step 2:**  
Take out the CD cardboard and place your CD on the CD tray until you hear a "click" sound indicating successful installation



**Step 3:**  
Turn on the joystick main switch and wait for a few seconds for the CD to automatically read and start playing music



**Step 4:**  
Adjust according to the following button markings


**Legend:**

- M switches music mode:Bluetooth/TF mode
- > Long press to increase volume/short press to go to the next song
- ⏸ Pause/Play
- ⌂ Adjust the loop playback mode
- < Long press to reduce volume/short press to go to the previous song
- ☀ Adjust night light


Image: Step 2 of CD insertion: Placing the CD.

3. Turn on the joystick main switch and wait a few seconds for the CD to automatically read and start playing music.


### How It Work




**Step 1:**  
Remove the transparent protective cover



**Step 2:**  
Take out the CD cardboard and place your CD on the CD tray until you hear a "click" sound indicating successful installation



**Step 3:**  
Turn on the joystick main switch and wait for a few seconds for the CD to automatically read and start playing music



**Step 4:**  
Adjust according to the following button markings


**Legend:**

- M switches music mode:Bluetooth/TF mode
- > Long press to increase volume/short press to go to the next song
- ⏸ Pause/Play
- ⌂ Adjust the loop playback mode
- < Long press to reduce volume/short press to go to the previous song
- ☀ Adjust night light


Image: Step 3 of CD insertion: Powering on and starting playback.

## 1. Basic Controls


### How It Work




**Step 1:**  
Remove the transparent protective cover



**Step 2:**  
Take out the CD cardboard and place your CD on the CD tray until you hear a "click" sound indicating successful installation



**Step 3:**  
Turn on the joystick main switch and wait for a few seconds for the CD to automatically read and start playing music



**Step 4:**  
Adjust according to the following button markings

Ⓜ switches music mode:Bluetooth/TF mode    > Long press to increase volume/short press to go to the next song    ⏸ Pause/Play  
Ⓛ Adjust the loop playback mode    < Long press to reduce volume/short press to go to the previous song    ⚙ Adjust night light

Image: Button functions on the FREEFISH K-8 CD Player.

- **Volume Adjustment:** Long press the > button to increase volume. Long press the < button to decrease volume.
- **Track Navigation:** Short press the > button for the next song. Short press the < button for the previous song.
- **Play/Pause:** Short press the Play/Pause button to toggle playback.
- **Stop:** Long press the Play/Pause button to stop playback.

## 2. CD Playback

After inserting a CD and powering on, the player will automatically begin playback. You can adjust the playback mode:

- Press the **Loop Playback Mode** button to cycle through 4 playback modes:
  1. Single Loop (repeats current track)
  2. All Loops (repeats all tracks)
  3. Random Loop (shuffles tracks)
  4. Sequential Loop (plays tracks in order)

# Loop Function

CD and TF card music with 4 loop modes



Image: Explanation of the 4 loop playback modes for CD and TF card music.

## 3. Bluetooth Mode (Transmit/Receive)

The FREEFISH K-8 supports Bluetooth 5.4 for both transmitting and receiving audio.

### Bluetooth Receive Mode (Speaker Function)

Use the K-8 as a Bluetooth speaker for your phone, tablet, or computer.

1. Press the **M** button until "BT" appears on the LCD display, indicating Bluetooth receive mode.
2. On your external device (phone, tablet, etc.), enable Bluetooth and search for "K-8".
3. Select "K-8" to pair. Once connected, audio from your device will play through the K-8 speakers.

## 5.4 Fast Receiving Mode



Image: FREEFISH K-8 in Bluetooth receive mode, acting as a speaker for various devices.

### Bluetooth Transmit Mode (CD/TF Card to Headphones/Speakers)

Stream CD or TF card music wirelessly to Bluetooth headphones or external Bluetooth speakers. **Note:** Only CD and TF card modes support Bluetooth transmission.

1. Ensure the player is in CD or TF card mode and playing music normally.
2. Long press the **M** button until the word "BT" flashes on the left side of the screen. This indicates transmit pairing mode.
3. Turn on the Bluetooth mode of your receiving device (headphones, speaker) and ensure it is in pairing mode.
4. Wait for the K-8 to connect automatically. The flashing "BT" on the screen will become solid, indicating a successful connection.

### How to Stream CD Music to Other Bluetooth Devices



#### Step 1:

Keep CD mode on and play CD music normally



#### Step 2:

Long press the button **【M】** until the word **【BT】** flashes on the left side of the screen



#### Step 3:

Turn on the Bluetooth mode of the Bluetooth device to be connected



#### Step 4:

Wait for the scan to connect automatically, and the word **【BT】** on the screen will no longer flash, indicating a successful connection



Note: Only CD and TF modes support Bluetooth transmission

Image: Steps for streaming CD music to Bluetooth headphones or speakers.

## 4. FM Radio

Listen to your favorite FM radio stations.

1. Press the **M** button to switch to FM mode. The display will show "FM".
2. Long press the **Play/Pause** button to automatically scan for available FM channels. This process may take 1-3 minutes.
3. Once scanning is complete, short press the **Play/Pause** button to cycle through the saved channels. Use the **>** and **<** buttons for fine-tuning or manual station selection if available.

The built-in 40CM antenna provides reception. For optimal reception, ensure the device is not obstructed.

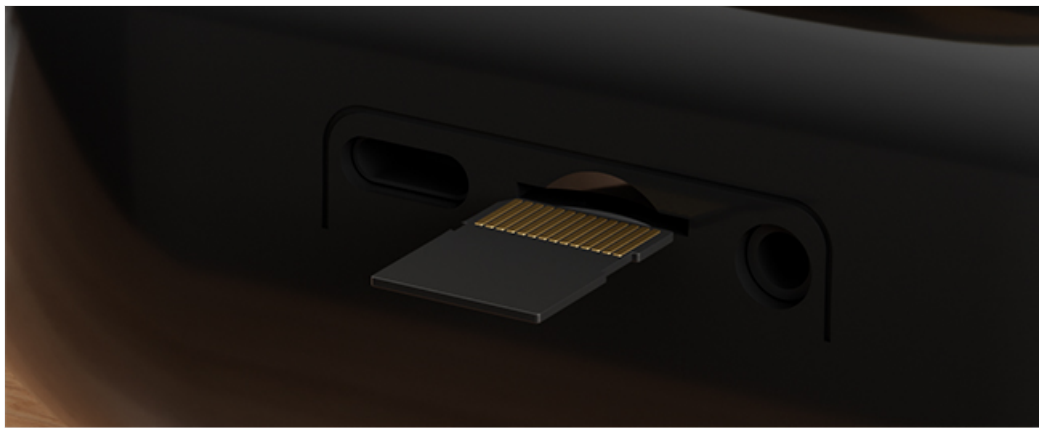


Image: Enjoying FM radio on the FREEFISH K-8 CD Player.

## 5. TF Card Playback

Play MP3, WMA, WAV, or FLAC files directly from a TF card (FAT32 format).

1. Insert a TF card into the TF card slot on the back of the player.
2. Press the **M** button until "TF" appears on the LCD display. The player will automatically begin playing music from the card.
3. Use the **>** and **<** buttons to navigate tracks and the Play/Pause button to control playback. Loop modes are also available for TF card playback.



## TF Card Playback

Expanded Music Storage | Play MP3/WMA/WAV/  
FLAC files directly from TF cards (FAT32 format)

Image: Inserting a TF card for music playback.

## 6. AUX Input/Output

The 3.5mm AUX port allows for versatile audio connections.

### AUX Output (Headphones/External Speakers)

Connect headphones or external speakers to the AUX port for private listening or enhanced sound. When headphones are connected, the internal speakers will be muted.

### AUX Input (External Audio Source)

Connect an external audio source (e.g., an MP3 player) to the AUX port using a 3.5mm audio cable. The K-8 will act as a speaker for the external device.



## CD-Quality Audio Output

Studio-Grade Audio Output | Gold-plated AUX port delivers  
pristine CD-quality sound to headphones and speakers

Image: Connecting external audio devices via the AUX port.

## 7. Night Light Function

The integrated night light provides a soft illumination.

- Press the **Night Light** button to turn the night light on or off.
- The night light can be used independently of music playback.

# Warm Night Light

bringing you music enjoyment for a long time



Image: The FREEFISH K-8 CD Player functioning as a warm night light.

## MAINTENANCE

---

### Cleaning

- Wipe the exterior of the player with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- For the CD lens, use a specialized CD lens cleaner if necessary. Avoid touching the lens directly.

### Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Store the device in a cool, dry place when not in use for extended periods.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No power/Device won't turn on.	Battery is depleted.	Charge the device using the provided Type-C cable.
CD not playing or skipping.	CD is dirty, scratched, or incorrectly inserted.	Clean the CD, check for scratches, and ensure it is properly seated in the tray.
No sound from speakers.	Volume is too low; headphones are connected; device is in Bluetooth transmit mode.	Increase volume; disconnect headphones; switch to appropriate mode.
Bluetooth pairing failed.	Device not in pairing mode; external device Bluetooth off; too far apart.	Ensure K-8 is in correct Bluetooth mode (transmit/receive); enable Bluetooth on external device; keep devices within 33 feet (10 meters).
FM radio reception is poor.	Weak signal; interference.	Relocate the player to an area with better reception; avoid placing near electronic devices that may cause interference.

## SPECIFICATIONS

Feature	Detail
Brand	FREEFISH
Model Number	K-8
Connectivity Technology	Bluetooth 5.4, AUX, Type-C, TF Card
Special Features	Anti-Skip Protection, Wireless, FM Radio, Night Light, LCD Display, Bluetooth Transmit/Receive Dual Mode
Battery Capacity	4000 mAh (8-15 hours playback)
Audio Output	10W Dual Stereo Speakers
Supported Disc Formats	CD, CD-R, CD-RW
Supported TF Card Formats	MP3, WMA, WAV, FLAC (FAT32 format)
FM Frequency Range	87.5-108 HMZ
Item Weight	1.94 pounds
Package Dimensions	9.17 x 6.3 x 3.58 inches

## WARRANTY AND SUPPORT

FREEFISH offers a 12-month replacement warranty and lifetime technical support for this product.

If you have any questions or encounter quality issues with your FREEFISH K-8 CD Player, please do not hesitate to contact us. Our customer service team is available to respond within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official FREEFISH store on Amazon: [FREEFISH Store](#)

## What will you get?



Retro CD player



Type-c data cable



Instruction manual



Protective cover

If you have any product-related questions, you can contact us by email and we will respond to you within 24 hours.



Image: Warranty and support information.