



Manuals.plus /

- › Beko /
- › BEKO Eco Sense SLFT1812 8kg Heat Pump Dryer Instruction Manual

Beko SLFT1812

BEKO Eco Sense SLFT1812 8kg Heat Pump Dryer Instruction Manual

Model: SLFT1812 | Brand: Beko

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new BEKO Eco Sense SLFT1812 8kg Heat Pump Dryer. Designed for effective drying with an 8 kg capacity and A+ energy rating, it features 15 programs, including a 14-minute express cycle, a double lint filter, and a galvanized honeycomb drum. The digital display and program tracking offer an intuitive user experience. With delayed start and child safety features, it adapts to your household needs. Please read this manual thoroughly before using the appliance and keep it for future reference.



Image 1: Front view of the BEKO Eco Sense SLFT1812 8kg Heat Pump Dryer, showcasing its white finish and front-loading design.

2. SAFETY INFORMATION

- **General Safety:** Always read and follow all instructions before use. Keep children and pets away from the appliance during operation.
- **Electrical Safety:** Ensure the dryer is connected to a properly grounded outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.
- **Installation:** The appliance must be installed on a stable, level surface. Ensure adequate ventilation around the dryer. Do not block ventilation openings.
- **Flammable Materials:** Do not dry items that have been soiled with flammable substances (e.g., cooking oil, gasoline).
- **Child Safety:** Activate the child lock feature to prevent accidental operation by children. Never allow children to play with or inside the appliance.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your dryer. Ensure the dryer is placed on a firm, level surface. The width of the dryer is approximately 60cm, so ensure your space can accommodate this dimension. The door hinge can be reversed to open from either the left or right side, offering flexibility for your laundry room layout.

3.1 Stacking (Optional)

If you plan to stack your dryer on top of a washing machine, a universal stacking kit may be used. This kit helps secure the dryer to the washing machine, preventing movement and ensuring stability. Always follow the instructions provided with the stacking kit for safe installation.

Your browser does not support the video tag.

Video 1: Demonstration of installing a universal stacking kit for laundry appliances. This video illustrates how to assemble and secure a stacking frame between a washing machine and a dryer, ensuring stability for stacked units.



Image 2: The BEKO Eco Sense SLFT1812 8kg Heat Pump Dryer integrated into a modern laundry room setting, demonstrating its compact design.

4. OPERATING INSTRUCTIONS

4.1 Loading the Dryer

- Sort laundry by fabric type and desired dryness level.
- Do not overload the drum. Overloading can reduce drying efficiency and cause excessive wrinkling. The 8kg capacity refers to dry weight.
- Ensure all items are suitable for tumble drying by checking care labels.

4.2 Selecting a Program

Your dryer offers 15 programs to suit various fabric types and drying needs. Use the program selection dial and the digital display to choose the appropriate cycle.

- **Digital Display:** Provides clear information on the selected program, remaining time, and any adjustments made.
- **Express 14 Minutes:** A quick drying option for small loads or lightly damp items.
- **Delayed Start:** Program the dryer to start at a later time, allowing you to time the cycle to finish when it's most convenient for you.
- **Child Safety Lock:** Activate this feature to prevent accidental changes to settings or starting/stopping the dryer by children.



Image 3: Angled view of the BEKO Eco Sense SLFT1812 8kg Heat Pump Dryer, highlighting the control panel and digital display for program selection.

5. PROGRAMS AND FEATURES

The BEKO Eco Sense SLFT1812 is equipped with features designed for optimal drying performance and user convenience:

- **Heat Pump Technology:** Recycles warm air inside the drum to dry clothes more efficiently, leading to significant energy savings.
- **8 kg Capacity:** Ideal for medium to large households with regular laundry loads.

- **15 Drying Programs:** A variety of programs tailored for different fabric types and drying needs, ensuring optimal care for your garments.
- **14-Minute Express Program:** For quick drying of small loads.
- **Double Lint Filter:** Effectively captures lint, ensuring clean air circulation and maintaining drying efficiency.
- **Galvanized Honeycomb Drum:** Designed to protect delicate fabrics and reduce creasing.
- **Digital Display:** Provides clear feedback on program status and settings.
- **Delayed Start Function:** Allows you to set the drying cycle to begin at a more convenient time.
- **Child Safety Lock:** Prevents unintended use or program changes.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dryer.

6.1 Cleaning the Lint Filter

The double lint filter should be cleaned after every drying cycle to maintain optimal performance and prevent fire hazards. Remove the filter, open it, and remove any accumulated lint. Rinse if necessary and ensure it is completely dry before reinserting.

6.2 Emptying the Water Reservoir

As a heat pump dryer, it collects condensed water in a reservoir. This reservoir, typically located at the bottom of the appliance, should be emptied after each cycle. A full reservoir will prevent the dryer from operating.

6.3 General Cleaning

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents. Periodically clean the interior of the drum with a damp cloth to remove any residue.

7. TROUBLESHOOTING

If you encounter issues with your dryer, refer to the following common troubleshooting tips before contacting customer service:

- **Dryer not starting:** Check if the power cord is securely plugged in. Ensure the door is fully closed. Verify that the water reservoir is not full and the lint filter is clean.
- **Clothes not drying properly:** Ensure the lint filter is clean. Do not overload the dryer. Select the appropriate drying program for the load.
- **Unusual noises:** Check for foreign objects in the drum. Ensure the dryer is level and stable.
- **Error codes on display:** Consult the full user manual for specific error code meanings and solutions.

8. SPECIFICATIONS

Feature	Specification
Brand	Beko
Model Name	SLFT1812
Capacity	8 Kilograms
Energy Class	A+
Noise Level	64 dB (Class B)
Annual Energy Consumption	209 kWh
Number of Programs	15
Drum Type	Galvanized Honeycomb Drum
Dimensions (Width)	60 cm
Door Access	Front Load, Reversible Door

Note: The provided source data for full dimensions (L x l x h) was inconsistent (1x1x1 cm). The width (L60cm) was inferred from the product title.

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product at the time of purchase or contact your retailer. Information regarding spare parts availability was not provided in the product details.