

[manuals.plus](#) /› [Beautiful by Drew Barrymore](#) /› [Beautiful by Drew Barrymore 2-Pack 2-Quart Slow Cooker Set \(Model 22988A1\) Instruction Manual](#)

Beautiful by Drew Barrymore 22988A1

Beautiful by Drew Barrymore 2-Pack 2-Quart Slow Cooker Set

Model: 22988A1

INTRODUCTION

Thank you for choosing the Beautiful by Drew Barrymore 2-Pack 2-Quart Slow Cooker Set. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions thoroughly before first use and retain this manual for future reference.



Image: The Beautiful by Drew Barrymore 2-Pack 2-Quart Slow Cooker Set in Thyme and White Icing.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off

parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The ceramic cooking pot and glass lid are dishwasher safe. The heating base is not.
- **Voltage Warning:** This product is specified as 220 Volts. Please ensure your local electrical supply matches this requirement to prevent damage or safety hazards.

PARTS AND FEATURES

Your Beautiful by Drew Barrymore Slow Cooker Set includes the following components:

- **Heating Base:** The main unit containing the heating element and control dial.
- **Removable Ceramic Cooking Pot:** The inner pot where food is cooked.
- **Tempered Glass Lid:** Allows visibility into the cooking process and is shatter-resistant.
- **Control Dial:** For selecting heat settings (OFF, WARM, LOW, HIGH).
- **Cool-Touch Handles:** Integrated on the heating base for safe portability.



Image: Removable ceramic cooking pot and tempered glass lid.



Image: Visual representation of key features including the tempered glass lid, cool-touch handles, and manual warm setting.

SETUP

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Initial Cleaning:** Wash the removable ceramic cooking pot and tempered glass lid in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water.
- 3. Placement:** Place the heating base on a dry, flat, heat-resistant surface, away from edges and heat sources. Ensure adequate ventilation around the unit.
- 4. Assemble:** Place the clean ceramic cooking pot into the heating base.

OPERATING INSTRUCTIONS

Cooking with Your Slow Cooker

- 1. Prepare Food:** Place your ingredients into the ceramic cooking pot. Do not overfill; leave at least one inch from the rim.
- 2. Secure Lid:** Place the tempered glass lid onto the ceramic cooking pot.
- 3. Plug In:** Plug the slow cooker into a suitable electrical outlet.
- 4. Select Setting:** Turn the control dial to your desired heat setting:
 - **LOW:** For slow, gentle cooking over an extended period.
 - **HIGH:** For faster cooking.
 - **WARM:** To keep cooked food at a serving temperature. Do not use the WARM setting for cooking raw food.
- 5. Cooking Time:** Follow your recipe's recommended cooking times. The slow cooker will maintain the selected temperature.

6. **Serving:** Once cooking is complete, turn the dial to 'OFF' and unplug the unit. Use the cool-touch handles to transport the slow cooker if needed.

Helpful Tips

- For best results, preheat the slow cooker on the desired setting for 15-20 minutes before adding ingredients.
- Avoid lifting the lid frequently during cooking, as this releases heat and extends cooking time.
- The compact 2-quart size is ideal for sauces, dips, small meals for 1-2 people, or side dishes.

Video: Demonstration of the compact size and ease of use of the slow cooker, highlighting its portability and suitability for small portions.

Video: Overview of the slow cooker's design and features, including the removable ceramic pot and dial control.

CARE AND MAINTENANCE

Cleaning

- Always unplug the slow cooker and allow it to cool completely before cleaning.
- The removable ceramic cooking pot and tempered glass lid are dishwasher safe for easy cleaning.
- To clean the heating base, wipe with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the heating base in water or any other liquid.
- Ensure all parts are completely dry before storing.

Storage

Store the assembled slow cooker in a dry location. Do not wrap the cord tightly around the appliance; coil it loosely.

TRROUBLESHOOTING

Problem	Possible Cause	Solution
Slow cooker does not turn on.	Not plugged in; power outlet not working; control dial is OFF.	Ensure unit is securely plugged in. Check power outlet with another appliance. Turn control dial to LOW, HIGH, or WARM.
Food is not cooking properly.	Incorrect heat setting; lid not properly sealed; too much liquid.	Adjust heat setting as per recipe. Ensure lid is seated firmly. Reduce liquid if necessary. Avoid lifting lid frequently.
Food is burning.	Heat setting too high; insufficient liquid.	Reduce heat setting. Add more liquid if needed. Stir occasionally if possible.

SPECIFICATIONS

Feature	Detail
Brand	Beautiful by Drew Barrymore
Model Number	22988A1

Feature	Detail
Capacity	2 Quarts (each slow cooker)
Wattage	100 Watts
Voltage	220 Volts
Control Method	Dial (OFF, WARM, LOW, HIGH)
Material	Ceramic (pot), Tempered Glass (lid), Steel with Matte Finish (exterior)
Dishwasher Safe Parts	Removable ceramic cooking pot and tempered glass lid
Product Dimensions	8.3"D x 9.7"W x 8.5"H

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.


Related Documents - 22988A1

	<p>Beautiful Slim Espresso Maker 20 Bar Pressure - Instruction Manual</p> <p>User manual for the Beautiful Slim Espresso Maker. Learn how to operate, clean, and maintain your 20-bar pressure espresso machine for perfect home-brewed coffee drinks. Includes safety guidelines and recipes.</p>
	<p>Beautiful 9qt TriZone Air Fryer Instruction Manual</p> <p>Comprehensive instruction manual for the Beautiful 9qt TriZone Air Fryer with Touch-Activated Display. Includes setup, operation, safety guidelines, cooking charts, and maintenance tips for versatile kitchen use.</p>
	<p>Beautiful 10-in-1 6qt Electric Multi-Cooker Instruction Manual</p> <p>Comprehensive instruction manual for the Beautiful 10-in-1 6qt Electric Multi-Cooker. Learn about safety, operation, maintenance, and warranty for this versatile kitchen appliance from Drew Barrymore's collection.</p>
	<p>CleverChef Quick Start Guide: Drew & Cole Multi Cooker</p> <p>Get started quickly with your Drew & Cole CleverChef multi cooker. This guide covers setup, basic functions like steaming and pasta cooking, and cleaning for your 5L appliance.</p>



[Beautiful PowerExact Blender System Instruction Manual | Precision Blending](#)

Instruction manual for the Beautiful PowerExact Blender System, featuring Patent-Pending PrecisionSense™ Blade technology. Covers safety, operation, maintenance, and troubleshooting for this easy-to-use kitchen appliance.

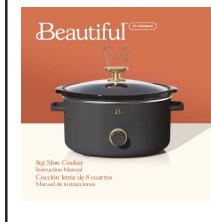

[Beautiful 8qt Slow Cooker Instruction Manual](#)

User guide and safety instructions for the Beautiful 8qt Slow Cooker, covering operation, care, cleaning, and warranty information.