

[Manuals.plus](#) /

› [Nike](#) /

› Nike Big Kids' Air Force 1 High Top (GS) 'Electric' (FD1019-100) User Manual

Nike FD1019-100

Nike Big Kids' Air Force 1 High Top (GS) 'Electric' (FD1019-100) User Manual

Brand: Nike | Model: FD1019-100

PRODUCT OVERVIEW

The Nike Big Kids' Air Force 1 High Top (GS) 'Electric' (FD1019-100) is a youth-sized high-top sneaker designed for everyday wear, blending classic basketball heritage with modern style. This model features a durable construction and iconic design elements for comfort and support.



Figure 1: Nike Air Force 1 High Top 'Electric' (FD1019-100) - Side View

This image displays the primary design of the Nike Air Force 1 High Top 'Electric' shoe. It features a clean white leather upper, a prominent black Nike Swoosh on the side, and vibrant red accents on the ankle strap and the sole unit. The high-top design provides ankle support, and the classic lacing system is visible.

SETUP AND FIRST USE

Upon receiving your Nike Air Force 1 High Top shoes, follow these steps for initial setup and optimal fit:

- Unboxing:** Carefully remove the shoes from their packaging. Inspect them for any visible defects or damage.
- Lacing:** Ensure the laces are properly threaded through all eyelets. Adjust the lacing tension to achieve a comfortable and secure fit across the top of the foot.
- Ankle Strap Adjustment:** The shoe features an adjustable ankle strap. Secure the strap around the ankle to provide additional support. Adjust the tightness to be snug but not restrictive.
- First Wear:** Wear the shoes for a short period initially to allow them to conform to the foot. The leather upper may soften slightly with wear, improving comfort.



Figure 2: Ankle Strap and Tongue Detail

This image provides a close-up view of the adjustable ankle strap and the shoe's tongue. The strap is designed to wrap around the ankle, securing with a hook-and-loop closure, enhancing stability. The tongue features Nike branding.

OPERATING AND USAGE

The Nike Air Force 1 High Top is designed for versatile use, offering comfort and support for various activities. Key

features contributing to its performance include:

- **Lightweight Cushioning:** Equipped with a full-length Air-Sole unit, these shoes provide responsive cushioning, absorbing impact during walking, running, or play.
- **Secure and Supportive Fit:** The high-top design, combined with the adjustable ankle strap and traditional lacing, ensures a snug and supportive fit around the foot and ankle.
- **Durable Traction:** The rubber outsole features a pivot point design, offering reliable grip and durability on various surfaces, making them suitable for both indoor and outdoor use.



Figure 3: Outsole Design

This image shows the bottom of the shoe's sole, highlighting the durable rubber outsole. The concentric circular pattern, known as

the pivot point, is visible on the forefoot and heel, designed to enhance traction and allow for smooth rotational movements.

MAINTENANCE AND CARE

Proper care will extend the life and maintain the appearance of your Nike Air Force 1 High Top shoes:

- **Cleaning the Upper:** For the white leather upper, gently wipe with a soft, damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning the Sole:** Use a brush or old toothbrush with soap and water to clean the rubber outsole and midsole.
- **Drying:** Allow shoes to air dry naturally at room temperature. Do not use direct heat sources like radiators or hair dryers, as this can damage the materials.
- **Storage:** Store shoes in a cool, dry place away from direct sunlight. If storing for extended periods, consider using shoe trees to help maintain their shape.



Figure 4: Toe Box Perforations

This image provides a detailed view of the toe box area of the shoe. It highlights the small perforations designed for breathability and the intricate stitching that reinforces the leather panels, contributing to the shoe's durability and classic aesthetic.

TROUBLESHOOTING

If you encounter any issues with your Nike Air Force 1 High Top shoes, consider the following common solutions:

- **Fit Issues (Too Tight/Loose):**

- Adjust lacing tension. Loosen laces for a looser fit, tighten for a more secure fit.
 - Ensure the ankle strap is adjusted correctly – not too tight to restrict circulation, not too loose to lose support.
- **Squeaking Noise:**
 - Sometimes new shoes can squeak due to friction between parts. This often resolves with wear.
 - Ensure insoles are properly seated. A small amount of baby powder under the insole can sometimes reduce squeaking.
 - **Stains on Leather:**
 - Address stains promptly. For minor marks, use a soft cloth with mild soap and water. For tougher stains, specialized leather cleaners may be required. Always test on an inconspicuous area first.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	12 x 8 x 5 inches; 2 Pounds
Item Model Number	FD1019-100
Department	unisex-child
Date First Available	March 25, 2025
ASIN	B0F2GVQJ2Q
Sole Material	Rubber
Outer Material	Rubber
Closure Type	Lace-Up
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or additional support, please refer to the official Nike website or contact Nike customer service directly. Keep your purchase receipt as proof of purchase.

Official Nike Website: www.nike.com

For specific inquiries related to your purchase, please contact the retailer from whom the product was acquired.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question