



Manuals.plus /

› Madesa /

› Madesa 4-Drawer Chest for Bedroom - Brown (Model XI34345Z1) Instruction Manual

Madesa XI34345Z1

Madesa 4-Drawer Chest for Bedroom - Brown (Model XI34345Z1) Instruction Manual

1. PRODUCT OVERVIEW

The Madesa 4-Drawer Chest is a versatile and high-quality furniture piece designed for bedroom storage. It features durable aluminum handles and smooth-gliding metal runners for easy operation. The spacious drawers are designed to accommodate clothing and other items, contributing to an organized living space. This chest is finished with a high-resistance polyester paint, ensuring lasting beauty and durability.



Image 1.1: The Madesa 4-Drawer Chest in a typical bedroom environment.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Tipping Device:** It is highly recommended to secure the chest to a wall using an anti-tipping device (not included unless specified in package contents) to prevent accidental tipping, especially in households with children or pets.
- **Weight Limits:** Each drawer is designed to support a maximum weight of 5 kg (approximately 11 lbs) when evenly distributed. Do not exceed this weight limit.
- **Placement:** Place the chest on a flat, stable, and level surface. Avoid placing it near heat sources, direct sunlight, or in areas with high humidity.

- **Children Safety:** Do not allow children to climb on or play with the chest. Keep small parts and assembly hardware out of reach of children.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact Madesa customer support.

- One (1) Madesa 4-Drawer Chest (disassembled components)
- Necessary hardware for assembly (screws, dowels, metal runners, handles)
- Assembly Manual (this document)

4. SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the detailed instructions provided in the included assembly manual. A Phillips head screwdriver and a hammer (not included) may be required.

1. **Preparation:** Clear a spacious, clean area for assembly. Lay out all components and hardware.
2. **Follow Steps:** Refer to the step-by-step diagrams and instructions in the separate assembly manual for precise guidance.
3. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the wood.
4. **Drawer Runners:** Install metal drawer runners carefully, ensuring they are aligned correctly for smooth drawer operation.
5. **Final Placement:** Once assembled, move the chest to its desired location and attach the anti-tipping device to the wall as per safety guidelines.



Image 4.1: Product dimensions: 95 cm (height), 80 cm (width), 40 cm (depth).



Image 4.2: Visual representation of the chest's height in relation to an average adult.

5. OPERATING INSTRUCTIONS

The Madesa 4-Drawer Chest is designed for straightforward use.

- **Opening/Closing Drawers:** Gently pull the aluminum handles to open the drawers. Push them back in until they are fully closed. The metal runners ensure smooth movement.
- **Loading Drawers:** Distribute items evenly within each drawer to prevent strain on the runners and maintain stability. Do not overload drawers beyond the 5 kg weight limit.

6. MAINTENANCE

Proper care will extend the life and appearance of your Madesa chest.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or

excessive moisture, as these can damage the polyester paint finish.

- **Dusting:** Regularly dust the chest with a dry, soft cloth.
- **Inspection:** Periodically check all hardware connections to ensure they remain tight. Retighten if necessary.



Image 6.1: Detail of the high-resistance polyester paint with rustic texture.

7. TROUBLESHOOTING

If you encounter any issues with your Madesa 4-Drawer Chest, refer to the following common solutions:

- **Drawers not sliding smoothly:** Check if the metal runners are properly aligned and free of obstructions. Ensure the drawer is not overloaded.
- **Wobbly chest:** Verify that all assembly hardware is securely tightened. Ensure the chest is placed on a level surface. Adjust the anti-tipping device if installed.
- **Missing parts:** If any parts were missing upon unboxing, please contact Madesa customer support with your product model number and purchase details.

8. SPECIFICATIONS

Feature	Detail
Brand	Madesa
Model Name	XI34345Z1
Material	Engineered Wood
Finish Type	Painted (Polyester)
Color	Brown
Number of Drawers	4
Product Dimensions (D x W x H)	40 cm x 80 cm x 95 cm (15.75 in x 31.5 in x 37.4 in)
Item Weight	332 Kilograms (731.9 lbs)
Assembly Required	Yes

Note: All wood used in Madesa products comes from renewable forests, reflecting the company's commitment to sustainable practices.

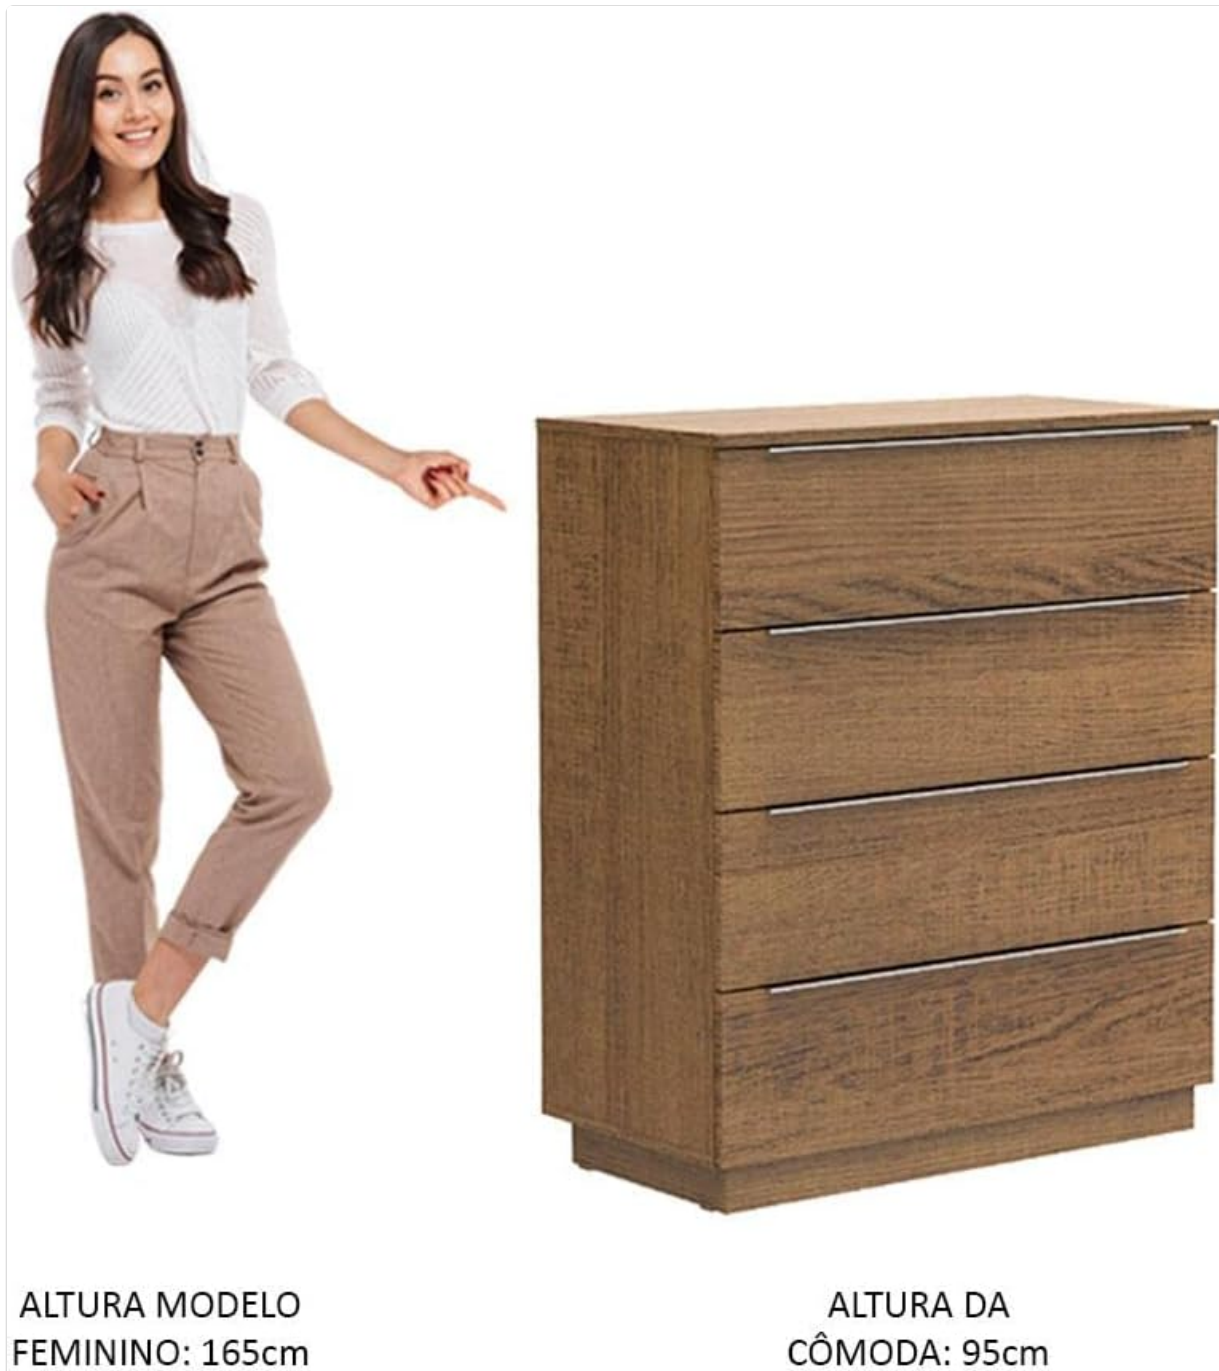


Image 8.1: Madesa utilizes wood from renewable forests for its products.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please refer to the contact details provided by Madesa at the time of purchase or visit the official Madesa website. Keep your proof of purchase for warranty claims.

Madesa is a company with over 45 years of experience in the furniture market, known for its quality and sustainable products.